



CHX Bezel Removal

Single & twin top mount controls

Separating a bezel cover from a bezel base in a mounted configuration

1. Apply force to the forward face of the bezel until tab 1 (item 1) disengages.

2. The forward portion of the bezel will tilt up.

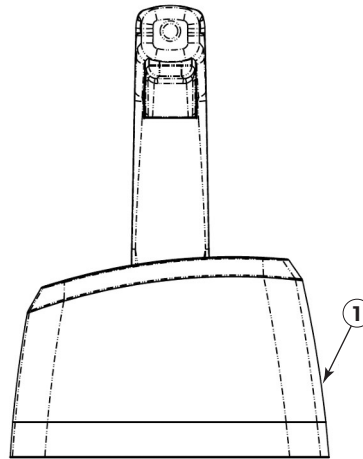


Figure 1. Side view of the control assembly.

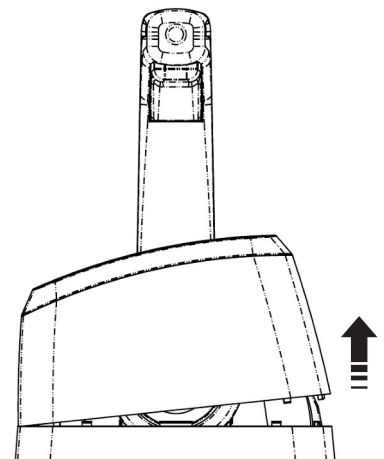


Figure 2. Side view of the control assembly.

3. Apply force to the rearward face of the bezel until tab 2 (item 2) disengages.

4. The bezel cover will then separate from the bezel base.

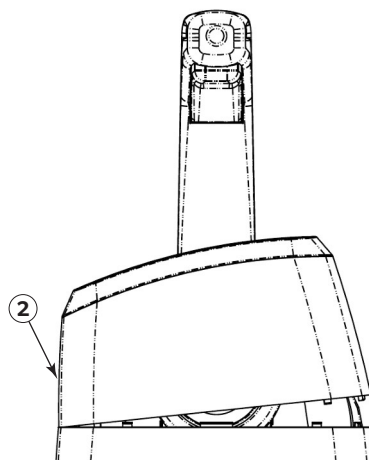


Figure 3. Side view of the control assembly.

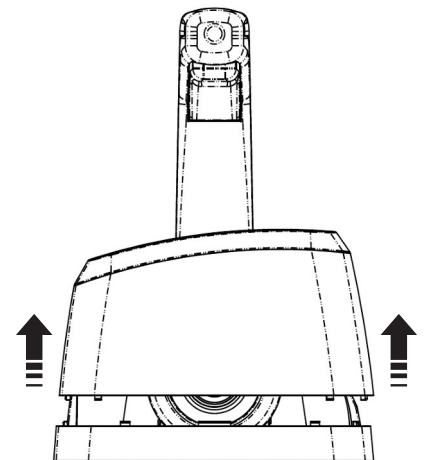


Figure 4. Side view of the control assembly.



Separating a bezel cover from a bezel base in an unmounted configuration

1.

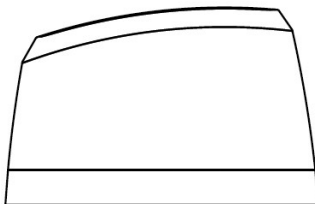


Figure 1. Side view of the bezel assembly.

2. Tab 1 (item 1) tab 2 (item 2).

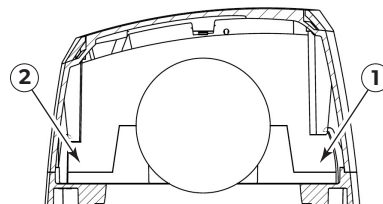


Figure 2. Cut-away view of the bezel assembly.

3. Manually release tab 1 (item 1) from the underside of the bezel.

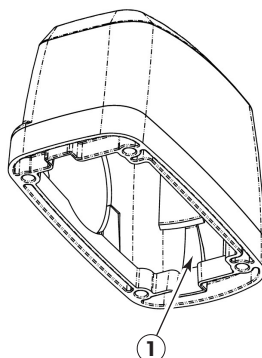


Figure 3. ISO view of the bezel assembly.

4. The forward portion of the bezel can then be tilted up.

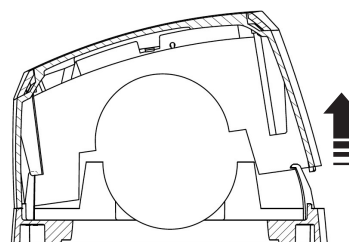


Figure 4. Side/cut-away view of the bezel assembly.

5. Manually release tab 2 (item 2) from the underside of the bezel.

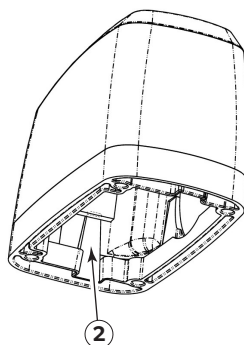


Figure 5. ISO view of the bezel assembly.

6. The bezel cover can then be separated from the bezel base.

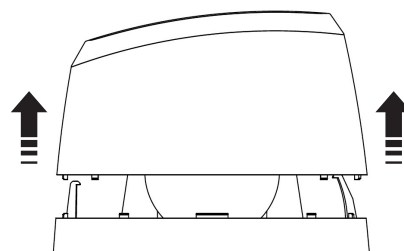


Figure 6. Side view of the bezel assembly.