




MICROWAVE OVEN PARTS LIST

**MODEL: DMW10W
DMW10B**

CAUTION

BEFORE SERVICING THE UNIT, READ THE
SAFETY PRECAUTIONS IN THIS MANUAL.

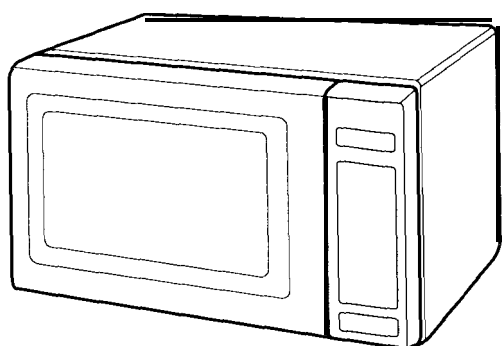


SPECIFICATIONS


ITEM	DESCRIPTION
MODEL	DMW10W / DMW10B
Power Requirement	120 Volts AC 60 Hz 1,250 Watts (11.3 A) Single phase, 3 wire grounded
Power Output	850 Watts full microwave power (IEC705)
Microwave Frequency	2,450 MHz
Magnetron	2M246,2M248J
Timer	0 ~99 min. 99 sec.
Overall Dimensions	20-7/8" (W) x 12-3/8" (H) x 15-1/2" (D)
Cavity Dimensions	13-3/4" (W) x 8-3/4" (H) x 14-5/8" (D)
Net Weight	33 lbs (approx.)
Shipping weight	36 lbs (approx.)
Control Complement	Touch Control System Clock : 1:00 - 12:59 Microwave Power for Variable Cooking Power level HIGH ————— Full power throughout the cooking time 9 (Saute) ————— approx. 90% of Full power, 8 (Reheat) -approx. 80% 7 (Med.-High) ————— approx. 70%, 6 (Medium) -approx. 60% 5 (Med.-Low) ————— approx. 50%, 4 (Defrost) -approx. 40% 3 (Low) ————— approx. 30%, 2 (Simmer) -approx. 20% 1 (Warm) ————— approx. 10%
Accessories	Owners Guide Glass turntable Rotating ring
It is not recommended for commercial purposes.	

EXPLODED VIEW


INTRODUCTION

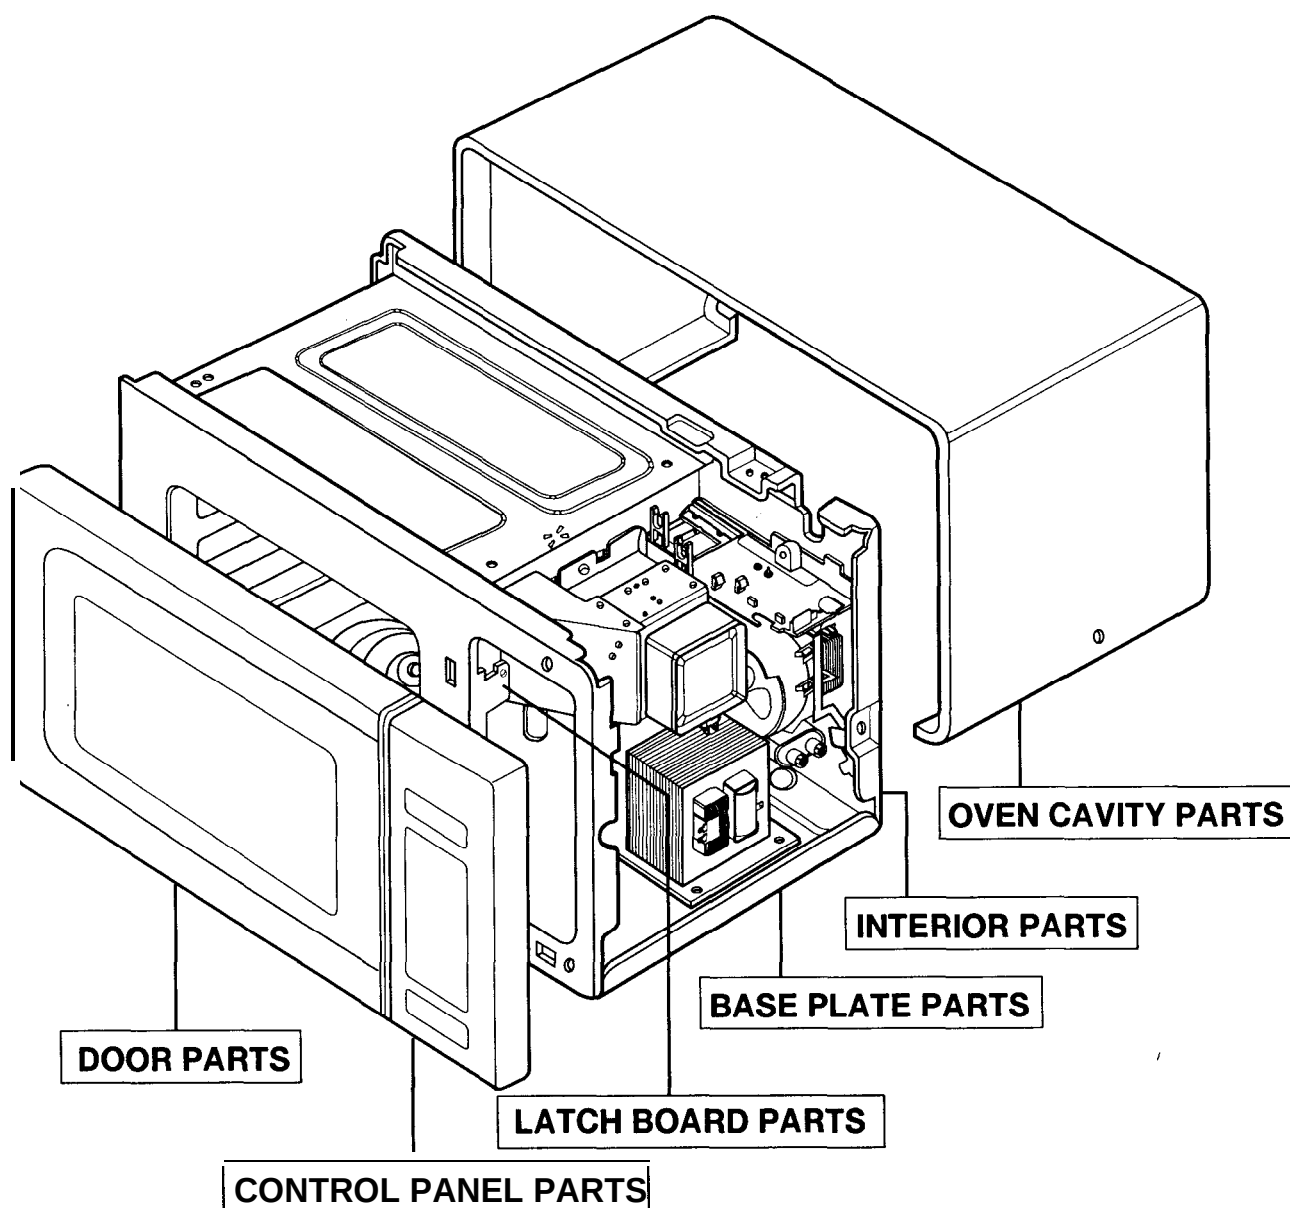


DOOR PARTS

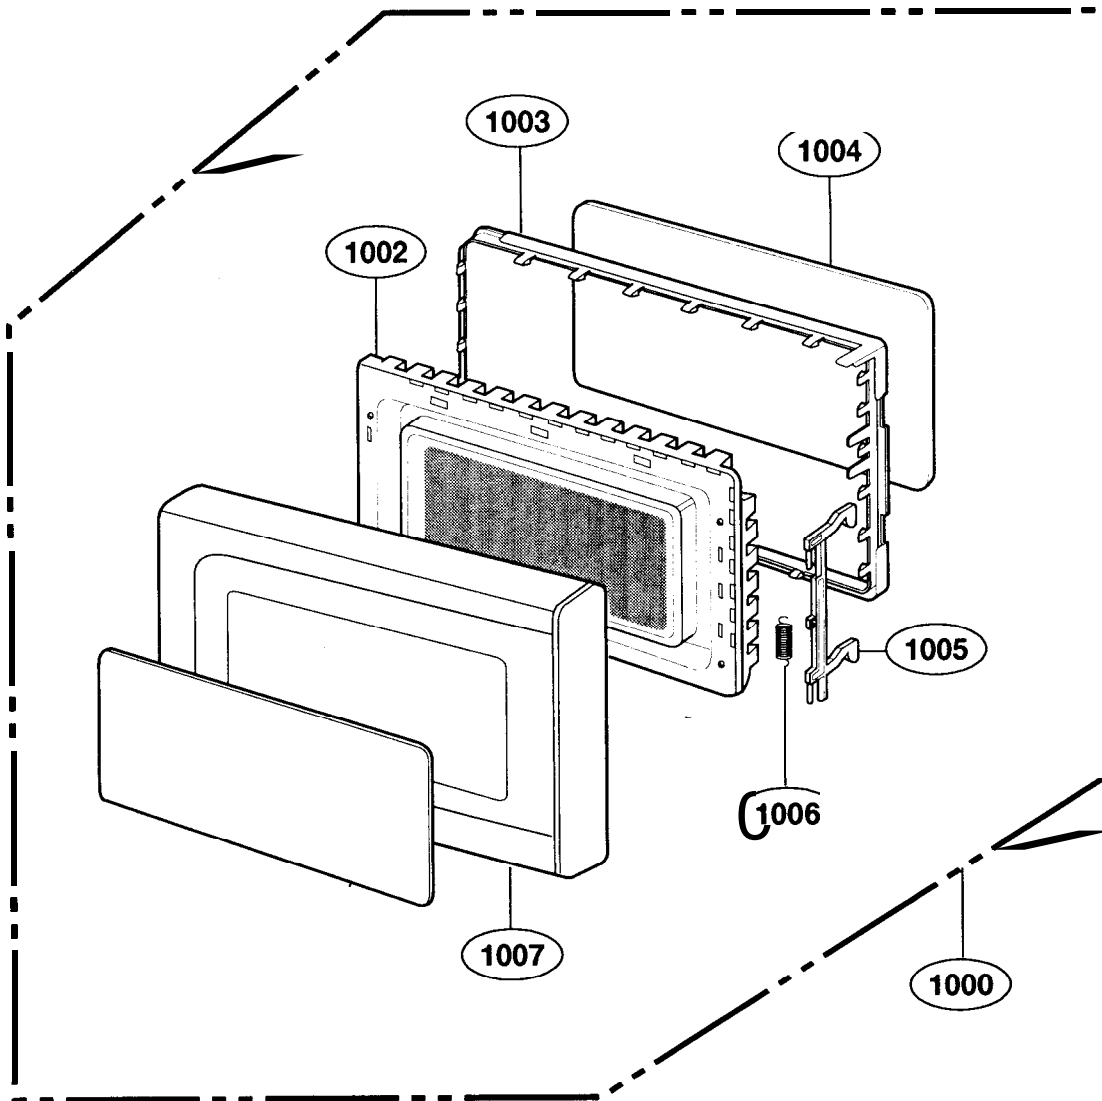


CONTROLLER PARTS

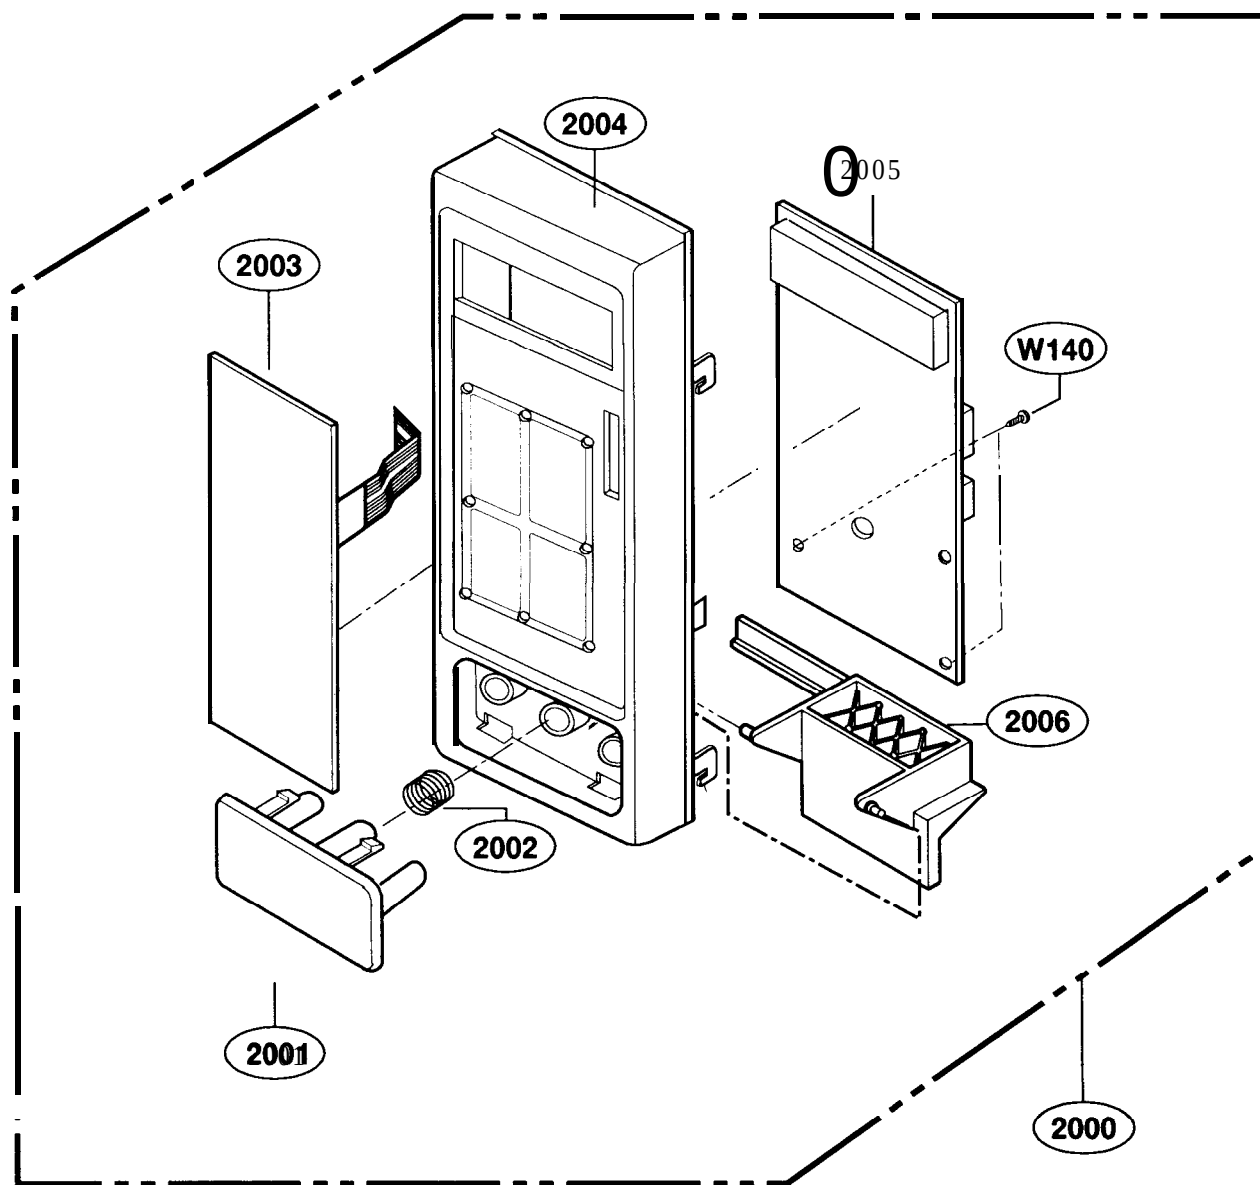

OVEN CAVITY PARTS

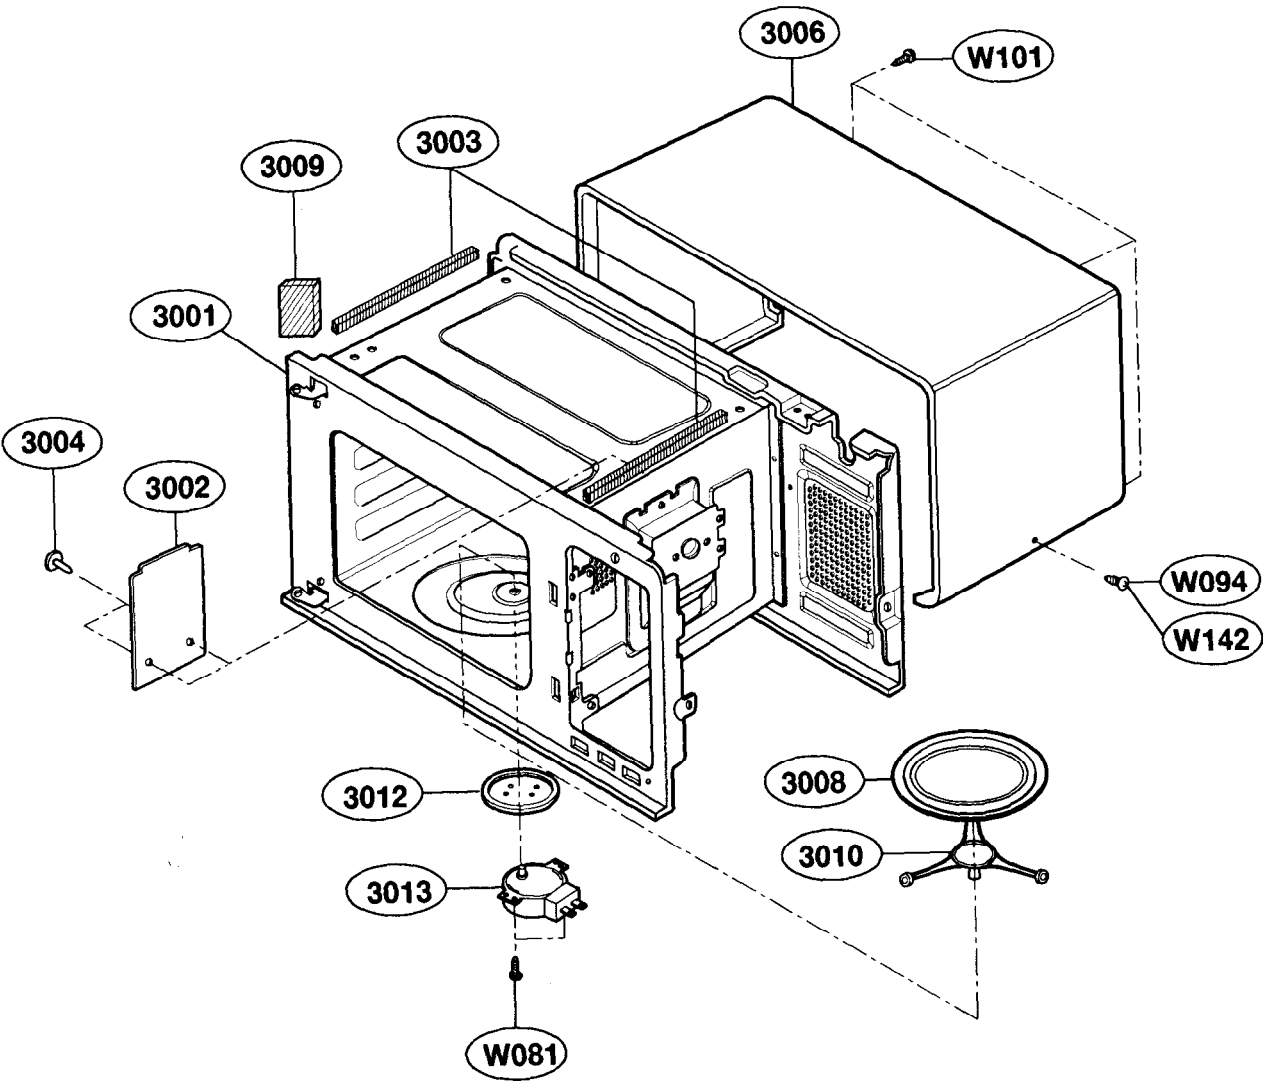


LATCH BOARD PARTS

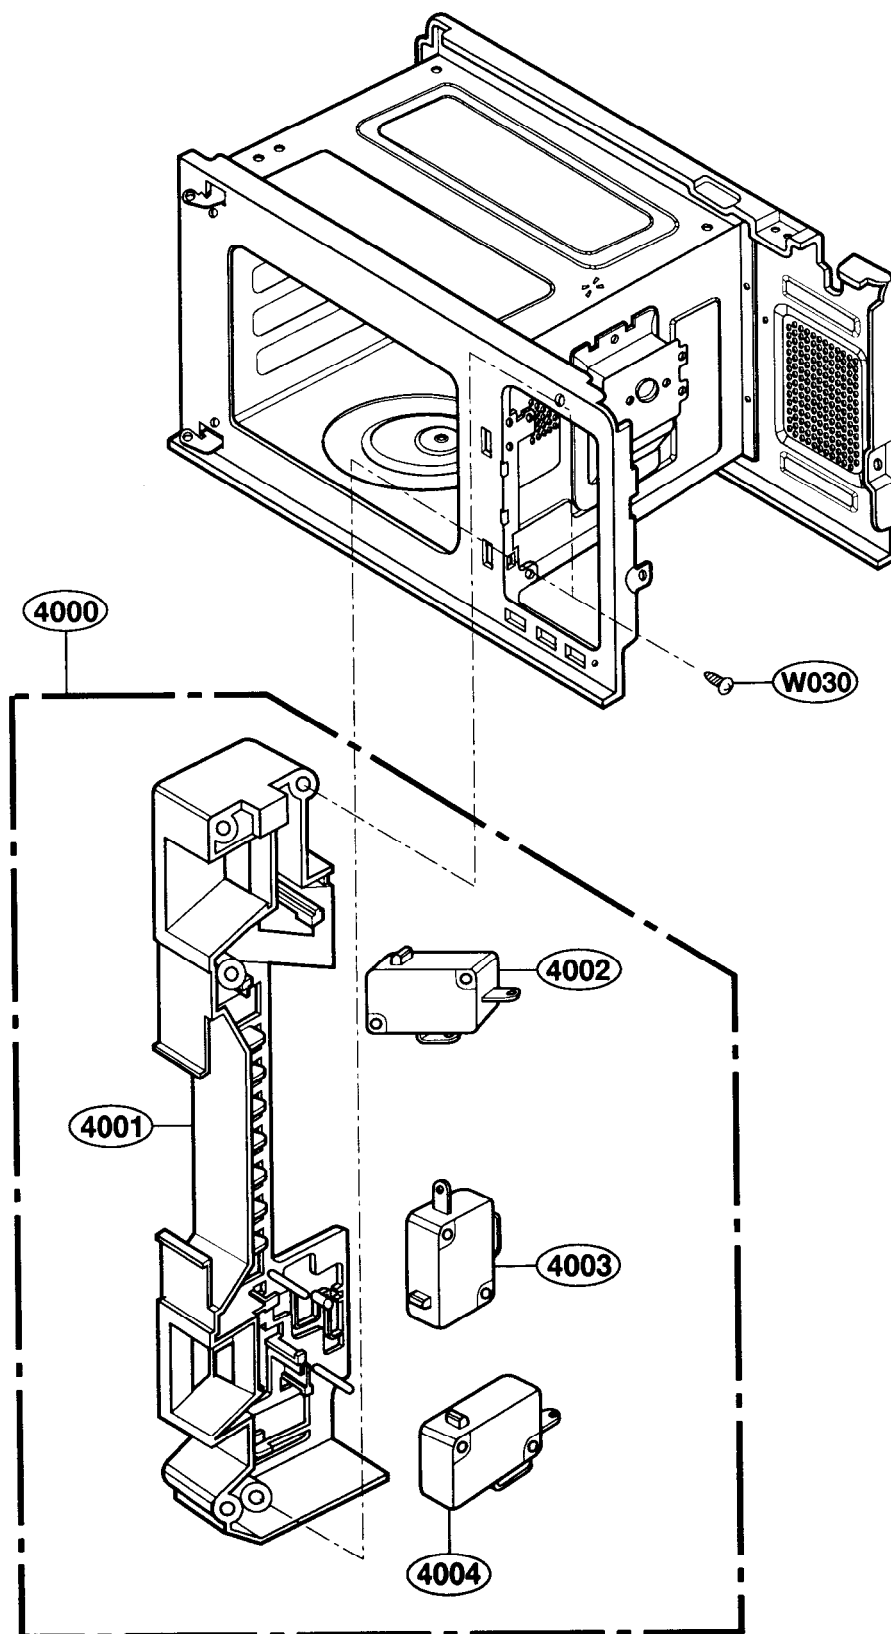

This exploded view diagram illustrates the assembly of a microwave oven. The main components and their associated parts are labeled as follows:

- 5008**: A multi-pin connector cable.
- W067**: A screw used for mounting various components.
- 5011**: A cable or hose assembly.
- 5012**: A circular component, likely a fan or filter.
- 5022**: A small cylindrical component.
- 5014**: A control panel or display unit.
- 5005**: A component, possibly a door latch or hinge.
- W106**: A screw used for mounting the control panel.
- 5002**: A component, possibly a door latch or hinge.
- W067**: A screw used for mounting the door latch.
- 5001**: A fan assembly.
- W112**: A screw used for mounting the door latch.
- 5013**: A component, possibly a door latch or hinge.
- W067**: A screw used for mounting the door latch.
- 5015**: A component, possibly a door latch or hinge.
- 5006**: A component, possibly a door latch or hinge.
- 5010**: A cable or hose assembly.
- W067**: A screw used for mounting the door latch.
- 5007**: A component, possibly a door latch or hinge.
- W106**: A screw used for mounting the door latch.
- 5016**: A component, possibly a door latch or hinge.
- W067**: A screw used for mounting the door latch.

BASE PLATE PARTS

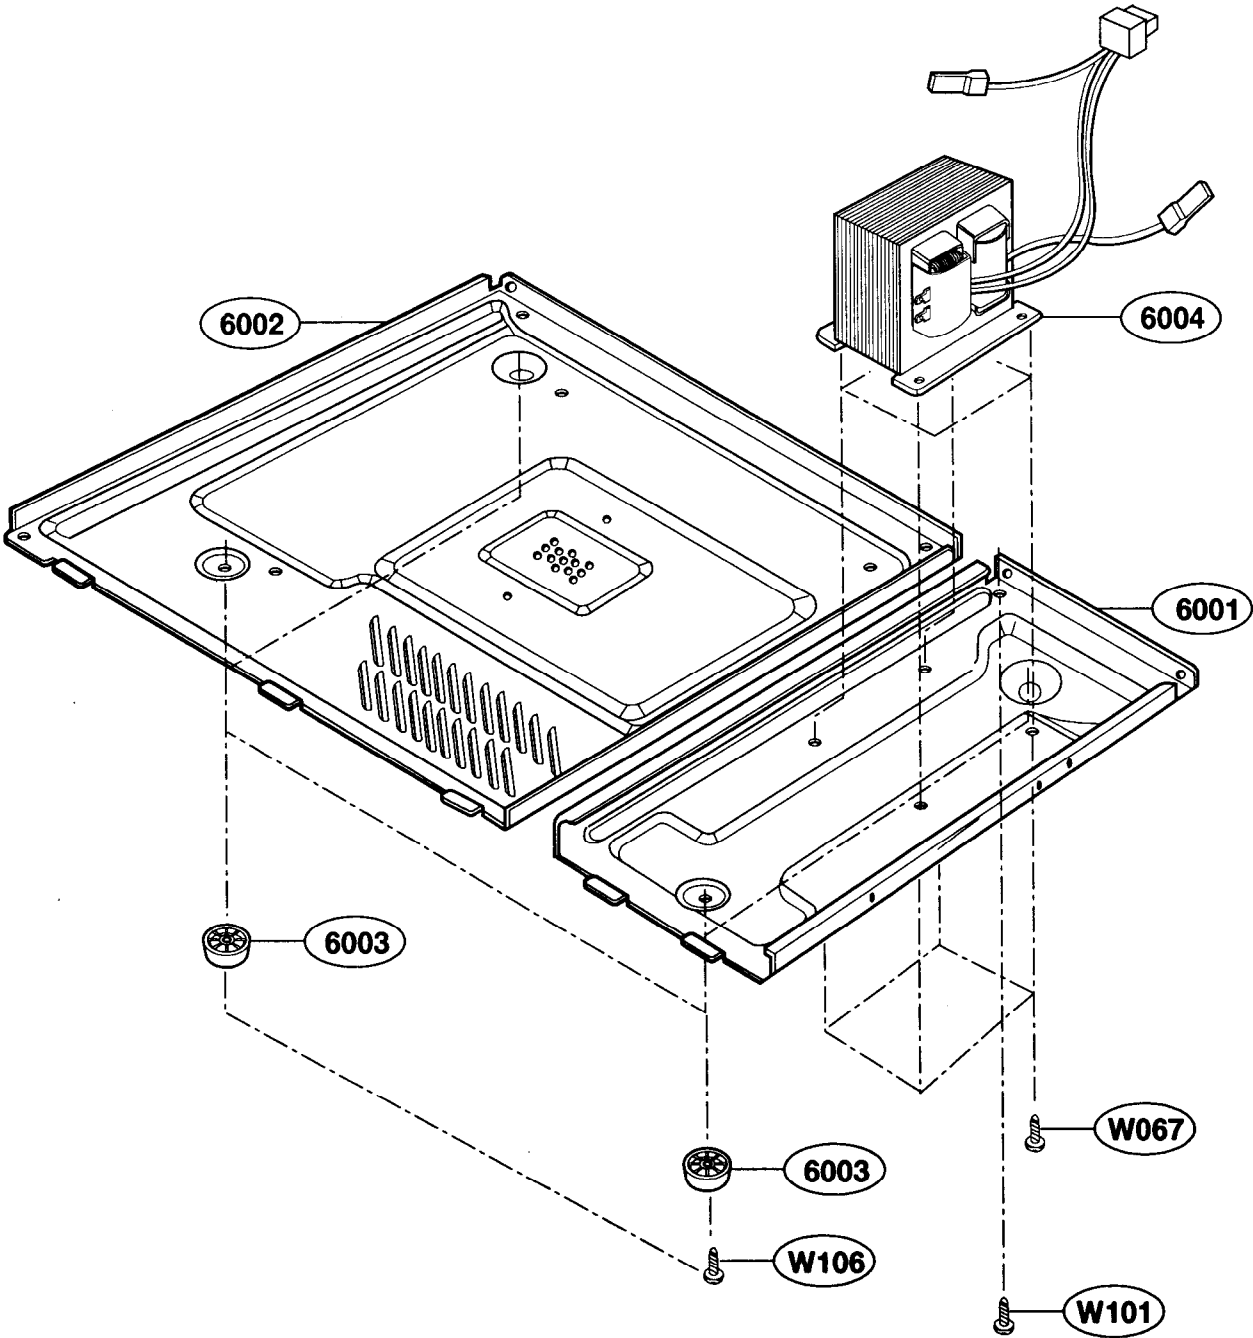

REPLACEMENT PARTS LIST

LOC. NO.	DESCRIPTION	DMW10W	DMW10B	REMARK
DOOR PARTS				
1000	DOOR ASS'Y, GROSS	3581W1A112P	3581 W1A112Q	S
1001	FRONT SCREEN, ALL	3352W 1 A075H	3352W 1 A075J	
1002	DOOR FRAME ASSY, ALL	3213W1A028E	3213W1A028B	
1003	CHOKE COVER, ALL	3552W 1 A026A		
1004	SEAL TAPE, ALL	3536WRA001 L		
1005	LATCH, ALL	4026W2A012A		S
1006	SPRING, ALL	4970WRA001 C		S
1007	PANEL, DOOR	3720W0D0078E	3720W0D078G	
CONTROLLER PARTS				
2000	CONTROLLER ASS'Y, MICOM	4781 W1M094R	4781 W1M094S	S
2001	BUTTON, RELEASE	5020W3G102D	5020W3G102C	
2002	BUTTON SPRING	4B72023A		
2003	KEY MEMBRANE, ALL	6638W2A181 A	6638W2A181 B	
2004	CONTROL PANEL, ALL	3572W1A121E	3572W1A121C	
2005	PCB ASS'Y (INTERNAL)	6871 W2J004H		
---	PCB ASS'Y (INTERNAL)	6871 W2S004H		
2006	LEVER RELEASE	4510W3L002A		
W140	PAN HEAD TAPPING SCREW	1TPL0402818		
OVEN CAVITY PARTS				
3001	CAVITY ASS'Y ALL	3461 W1A036B		
3002	CANOPY, MICA	3052W3M008A		
3004	RIVET ASS'Y, ALL	4051 W3A001A		
3006	OUT CASE	3112W1U017G	3112W1U017H	
3008*	TRAY, GLASS	3390W1 G003B		S
3009	CUSHION	3872244C		
3010*	ROTATING RING ASS'Y	5889W2A011		S
3013	MOTOR, SYNCHRONOUS	6549W2S002H		
	MOTOR, SYNCHRONOUS	6549WRS001 N		
	MOTOR, SYNCHRONOUS	2B72754K		
W081	PAN HEAD TAPPING SCREW	1 TPL0402418		
W094	PAN HEAD TAPPING SCREW	1 TTG0402422		
W101	PAN HEAD TAPPING SCREW	1 TTL0402418		
W142	PAN HEAD TAPPING SCREW		1TTL0402416	

S: SERVICE PARTS
A: ALTERNATE PARTS
N: NOT SERVICE PARTS

* Indicates parts available through The Dometic Corporation

LOC. NO.	DESCRIPTION	DMW10W	DMW10B	REMARK
LATCH BOARD PARTS				
4000	BOARD ASS'Y, LATCH	3501W1A003H		
4001	BOARD, LATCH	3500W1A004A		
4002	SWITCH, MICRO (SECONDARY)	3B73362F		S
	SWITCH, MICRO (SECONDARY)	3B73362E		A
4003	SWITCH, MICRO (MONITOR)	3B73361E		S
	SWITCH, MICRO (MONITOR)	3B73361D		A
4004	SWITCH, MICRO (PRIMARY)	3B73362F		S
	SWITCH, MICRO (PRIMARY)	3B73362E		A
W030	SCREW, SPECIAL	4B70188C		
INTERIOR PARTS				
5001	PROPELLER	2B72125A		
5002	GUIDE, SUCTION	4974W1S010A		
5005	MOTOR, FAN	2B73670B		
5006	CAPACITOR, HIGH VOLTAGE	6120W3H003G		
	CAPACITOR, HIGH VOLTAGE	6120WRH001F		
5007	BRACKET, HVC	4810W4C003A		
5008	LEAD WIRE ASS'Y	6877W1A131A		
5010	DIODE ASS'Y	6021W3B001A		
5011	POWER CORD ASS'Y	6411W2A002B		
5012	THERMOSTAT	6930WRT002C		
	THERMOSTAT	6930WRT001C		
5013	LAMP, BASELESS	6912W3B002L		S
	LAMP, BASELESS	6912W3B002G		A
5014	NOISE, FILTER	2B72130F		
5015	AIR DUCT	5262W2A020A		
5016	MAGNETRON, ALL	2B72740B		
5022	FUSE	3B74133H		S
W067	BINDING HD TAP TITE SCREW	1SBF0402418		
W106	TRUSS HEAD TP SCREW	1TTL0402818		
W112	TRUSS HEAD TP SCREW	1TTL0403818		
BASE PLATE PARTS				
6001	BASE PLATE - R	3302W1A035C		
6002	BASE PLATE - L	3302W1A036F		
6003	LEG	4B73900A		
6004	TRANSFORMER, HIGH VOLTAGE	6010W2H102B		
W067	BINDING HD TAP TITE SCREW	1SBF0402418		
W101	PAN HEAD TAPPING SCREW	1TTL0402418		

S: SERVICE PARTS
A: ALTERNATE PARTS
N: NOT SERVICE PARTS