

DOMETIC

HEATING

FURNACES

EN

Limit Switch Wire Rework

Service Bulletin

USA & Canada

Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

Service Center & Dealer Locations

Visit:
www.dometic.com


Read these instructions carefully.

Furnace Model	Serial Number Range	Field Kit Number	Kit Materials
AFS, AFM, DFS, DFM	73985322 – 81099541	31389	(1) Fiberglass Sleeve: 7" (length) x 1.5" (diameter)

1 SLEEVE INSTALLATION


This fix applies to all small and medium DF and AF door and less door furnace units.

1.1 Examining the limit switch wires

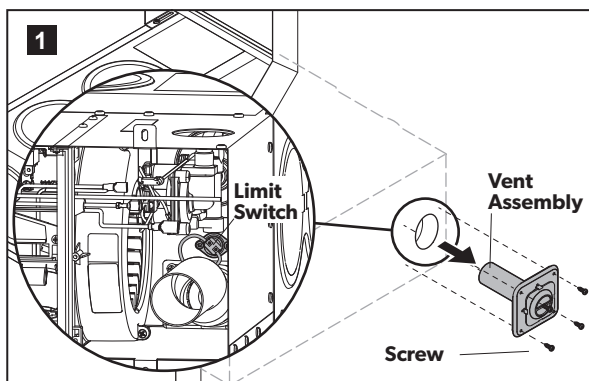

- Remove the vent assembly, and using a flashlight, look through the opening in the vent cover to inspect the exhaust vent area.
- Visually examine the limit switch wires for evidence of the following conditions:
 - Wires laying on the exhaust vent tube
 - Melting at any point along the length of the wire
- If either condition exists, contact the Dometic Technical Service department at 866-869-3118 and/or your OEM manufacturer for repair approval, prior to repairing any wires or continuing with this field repair.
- If no damage is present, proceed with this field repair.

1.2 Placing the sleeve on a DF/AF unit

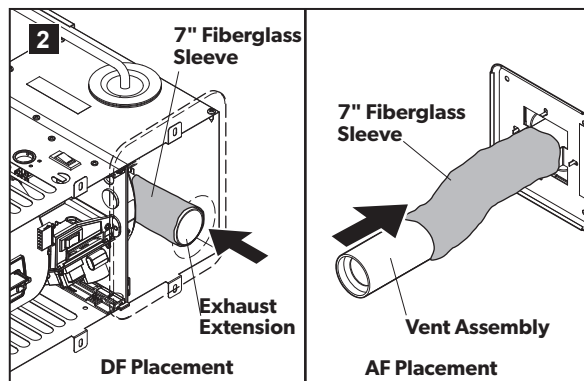

- Install the fiberglass sleeve:
 - For DF units: slide the fiberglass sleeve over the exhaust extension.
 - For AF units: slide the fiberglass sleeve over the vent assembly.
- Re-install the vent assembly.