



DOMETIC CORPORATION

1120 North Main Street, Elkhart, IN 46514

Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 32424
INSTALLATION INSTRUCTIONS
FURNACE REPLACEMENT
TRIM RING INSTALL 89-AFL

Revision A, 10/12/18

Installation Instructions- AFL Furnace with Flush Door

Instructions for removing "89" furnace with recessed door and replacing with "AFL" furnace with flush door.

This installation instruction is for use only when replacing an 89 series with an AFL series.

32422 KIT, RING TRIM AFL-89 BLACK #44

32423 KIT, RING TRIM AFL-89 WHITE #34



CAUTION

ONLY A QUALIFIED TECHNICIAN MUST REPLACE OR INSTALL UNIT

REMOVE "89" FURNACE:

1. Remove furnace by removing 4 door screws (7).
2. Remove screws from around the face of the bezel (8).
3. Bend sheet metal tabs out straight and remove bezel.
4. Remove vent cap assembly (6).
5. Remove two mounting brackets (10) from sides.
6. Disconnect furnace ducting and gas line.
7. Remove furnace (May be screwed down in rear).


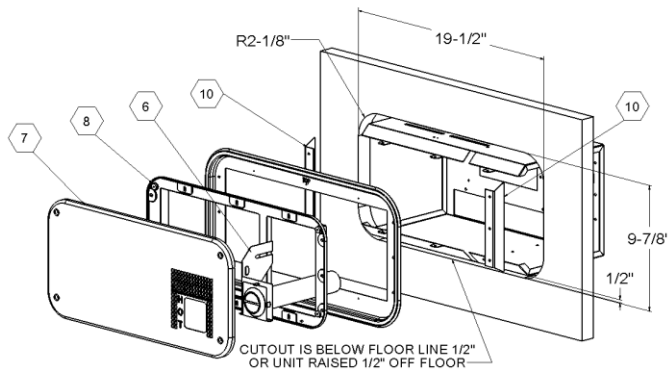


Figure 1

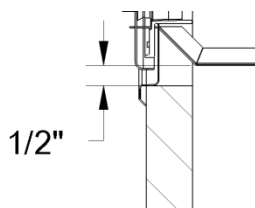

INSTALL "AFL" FURNACE:

1. If opening is below floor line router additional 1/2" for a total of 1" below the floor then measure up 11-1/8" for top cut.
2. Install wood shims or blocking between bezel tabs and wall cutout setting shim 5/16" from face of wall. Flush door mounting tabs should not have more than 1/16" gap or bezel could distort when screwed in place (See Fig 2).
3. Install furnace and connect ducting and gas line.
4. Caulk trim ring on both sides of part (6).
5. Place trim ring on back of bezel with flanges towards inside of coach (7).
6. Install bezel and trim ring into cutout and screw to framing. Make sure to keep the parts tight against the exterior wall. A frame work structure is required to fasten the bezel correctly.
7. Pull furnace forward until flush with bezel inside ring and put 6 screws thru bezel into furnace casing (Fig 2). For more detail information see installation manual supplied with furnace.

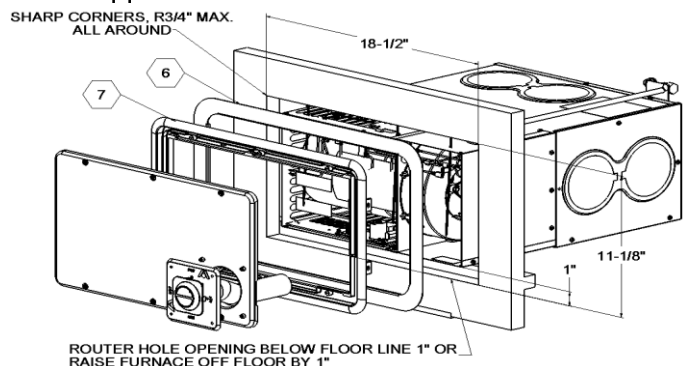


Figure 2

