

DOMETIC

HOT PRODUCTS

RANGE

EN

Burner Heads Replacement

Service Kit Instructions

USA & CANADA
Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

**Service Center & Dealer
Locations**
Visit: www.dometic.com

Range Models	Field Kit Number and Materials
RA35, RV35	Visit www.edometic.com for details.

1 Explanation of Symbols and Safety Instructions

This manual has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.

1.1 Recognize Safety Information

⚠ This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

1.2 Understand Signal Words

A signal word will identify safety messages and property damage messages, and it will indicate the degree or level of hazard seriousness.

⚠ WARNING

This indicates a hazardous situation that, if **not** avoided, could result in death or serious injury.

 
2 Removal: Sealed-Burner Range Models

⚠ WARNING: ELECTRICAL SHOCK, FIRE, AND/OR EXPLOSION HAZARD.

Turn off the gas and electrical supplies before servicing this equipment. Failure to obey this warning could result in death or serious injury.

i The images used in this document are for reference purposes only. Components and locations may vary according to specific range models.

This section describes how to remove the burner heads from sealed-burner range models.

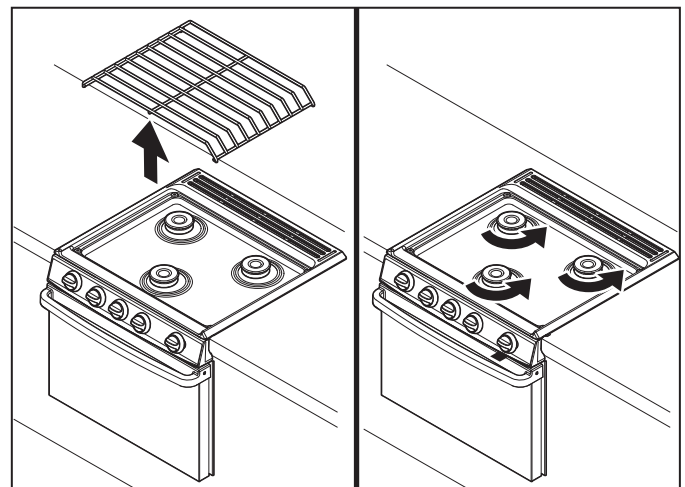

1 Removing the Burner Heads

1. Lift to remove the grate and place it in a secure area.
2. Twist the burner one quarter of a turn to disengage the burner from the cooktop.
3. Gently remove the burner assembly from the unit.
4. Unplug the piezo wires.

3 Removal: Open-Well Range Models

 
⚠ WARNING: ELECTRICAL SHOCK, FIRE, AND/OR EXPLOSION HAZARD.

Turn off the gas and electrical supplies before servicing this equipment. Failure to obey this warning could result in death or serious injury.

i The images used in this document are for reference purposes only. Components and locations may vary according to specific range models.

This section describes how to access the burner heads and remove them from open-well range models.


3.1 Accessing the Burner Heads

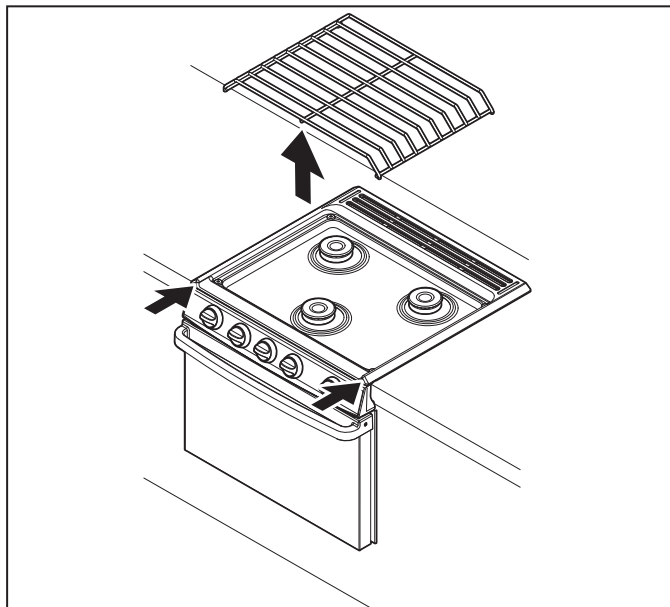

2 Accessing the Burner Heads

1. Lift to remove the grate and place it in a secure area.
2. Push the cooktop back until the front tabs disengage.
3. Gently lift the cooktop to expose the components.

 3.2 Removing the Burner Heads

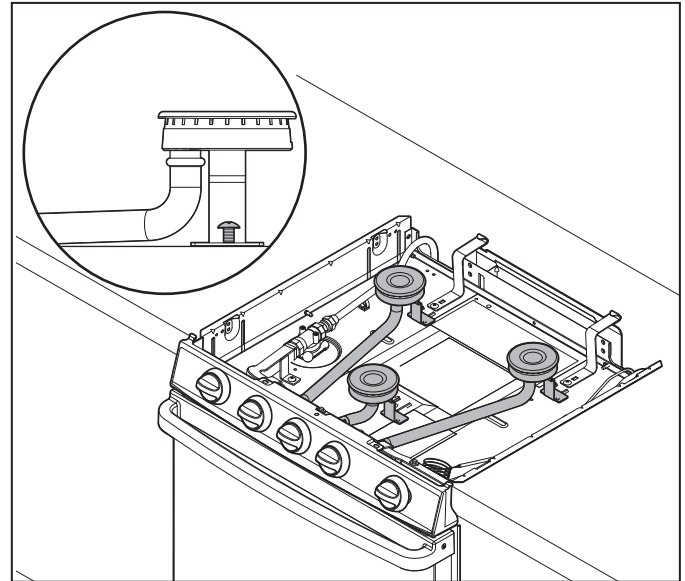

3 Removing the Burner Heads

1. Loosen the screw holding the burner head assembly to the burner box.
2. Gently pull the burner head assembly back and remove it from the unit.

4 Installation

To install the new burner head assemblies, complete the process described in section 2 or 3 (as appropriate) in reverse order.