

DOMETIC

HOT PRODUCTS

COOKTOP

 
EN R31 Range—Oven Light and Oven Piezo Models

Leaflet

This leaflet is intended to provide information on new features associated with the R31 Range. It is not intended to provide all information and warnings related to the product. Refer to your instruction and operation manual for additional important information and safety warnings.


CAUTION: ELECTRICAL SHOCK/FIRE HAZARD. Be sure to label all wires before working on the range. Wiring errors can cause improper and dangerous operation of the range. Failure to obey this caution could result in minor or moderate injury.

Oven Light Models

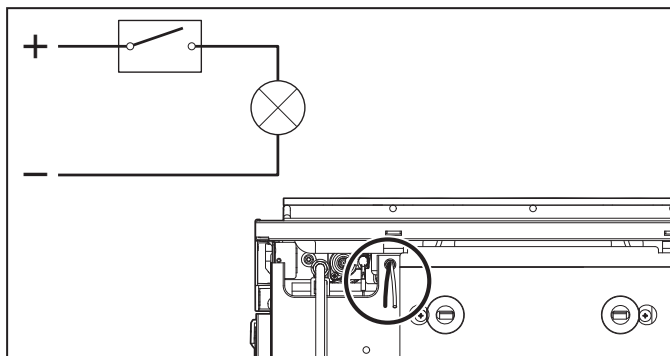

1 Connecting the Wire Leads


1. For ranges with an oven light, connect the two wire leads at the back of the range to a 12 VDC circuit that is fuse-protected with a max rating of no more than 5 A.
2. Connect the black wire to positive and the white wire to negative.
3. Verify proper operation of the range after servicing.

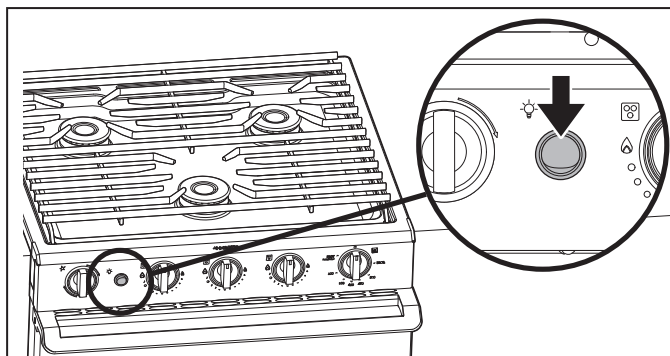

2 Pressing the ON Switch


4. To turn the oven light on, turn the switch on the control panel to the ON position.

Oven Piezo Ignitor Models

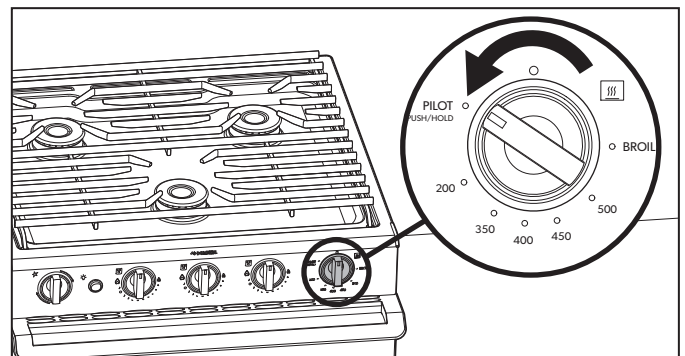

3 Turning the Oven Control Knob

1. For models with the Piezo ignitor, push in and rotate the oven control knob until it points to PILOT PUSH/HOLD.

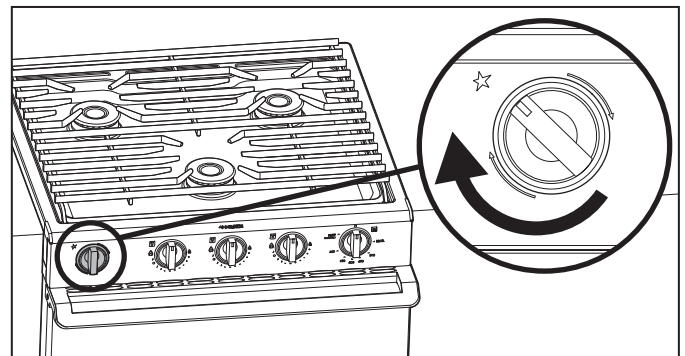

4 Turning the Spark Ignitor

2. Turn the spark ignitor knob clockwise until an audible click is heard. Repeat this step until the burner ignites.