



DOMETIC CORPORATION

1120 North Main Street, Elkhart, IN 46514


Please Visit: WWW.DOMETIC.COM

MPD 52905

RANGE INSTALLATION TRIM KIT

RV AND CV MODELS

Revision B, 10/19/18

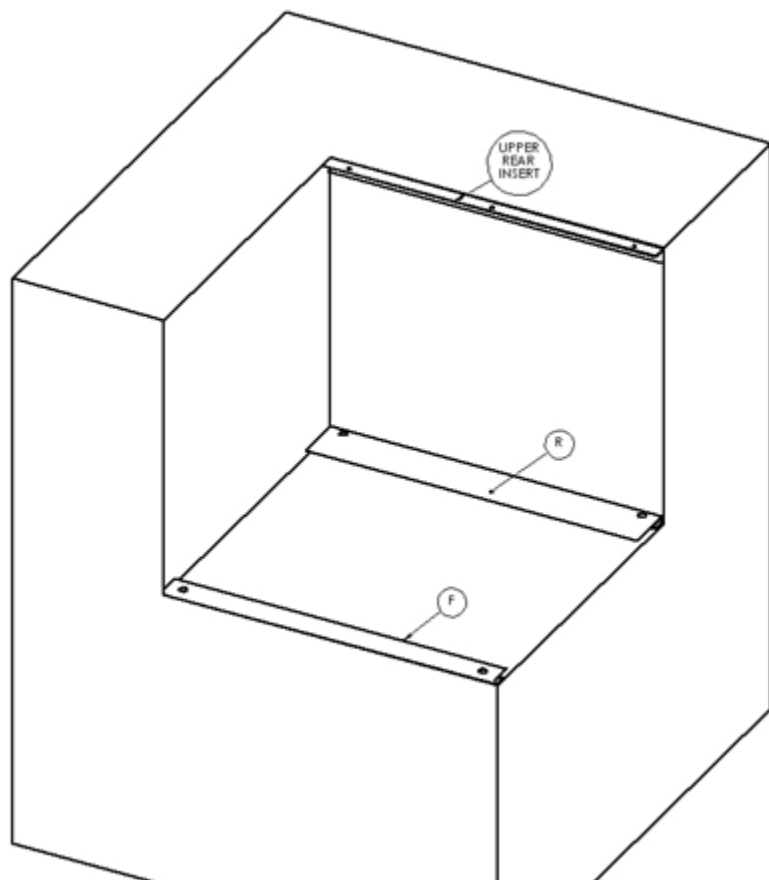

Range Installation Trim Kit

The large trim kit allows for replacement of a Magic Chef 22" range with a cabinet cutout of 20-5/8" wide x 19-7/16" deep x 21-13/16" tall with a Dometic 21" Range. The small trim kit allows for replacement of a Magic Chef 16" range with a cabinet cutout of 20-5/8" wide x 19-7/16" deep x 16-3/8" tall with a Dometic 17" range.

This kit comes with three trim pieces. The piece stamped with an "F" is the lower front insert pictured above. The piece stamped with an "R" is the lower rear insert pictured above. The unmarked piece is the upper rear insert.

Installation Procedure:

1. Uninstall the current range.
2. Place the lower rear insert against the back of the cutout. Locate the part with the flat side to the back of the cut out. Be sure the side with larger through holes and "R" emboss is located upward. Then use two wood screws to attach the insert to the cabinet.
3. Place the upper insert flat against the back of the cabinet. Locate the part so with the mounting holes against the back of the cutout. Verify that the top flat section of the part is located flush with the mounting counter top. Then with three wood screws attach the trim piece to the cutout.
4. Place the final piece, lower front insert, against the bottom of the cutout flush with the front of the cabinet. Locate the piece with the large holes, and the "F" emboss facing upward. After locating the piece flush with the front of the cabinet use two wood screws to attach the trim to the cutout.
5. After trim pieces have been installed as pictured above install your new Dometic range per the instructions in the range's manual.