



LITERATURE NUMBER MPD 53400

BURNER VALVE REPLACEMENT


Revision A, 10/19/18

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

For complete range & cooktop instructions consult MPD 56280

WARNING EXPLOSION OR FIRE

- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Refer to MPD 56280 for complete instructions.
- For assistance or additional information consult Dometic Consumer Service Department, a qualified installer, service agency or gas supplier.
- Follow directions exactly for proper installation, adjustment, service and maintenance.
- Shut off all gas appliances and pilot lights when refueling gasoline tanks, LP tanks or when vehicle is in motion.
- Dometic gas operated cooking appliances are for use with LP gas only, and for installation in recreation vehicles only (e.g. travel trailers, motor homes, tent campers, etc.).

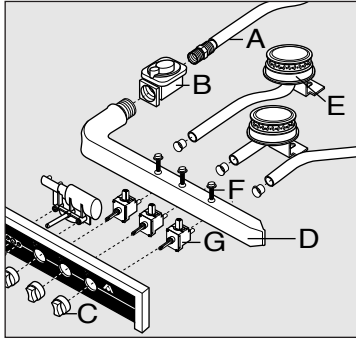

WARNING CARBON MONOXIDE POISONING

- Do not use any cooking appliance for space heating because of potential danger to occupants of vehicle and damage to operating components of range or cooktop.
- A window or air vent should be open slightly while using any cooking appliance. Gas flame consumes oxygen which must be replaced to assure proper combustion.

continued on backside



LITERATURE NUMBER MPD 53400

BURNER VALVE REPLACEMENT


Revision A, 10/19/18

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

For complete range & cooktop instructions consult MPD 56280

WARNING EXPLOSION OR FIRE

- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Refer to MPD 56280 for complete instructions.
- For assistance or additional information consult Dometic Consumer Service Department, a qualified installer, service agency or gas supplier.
- Follow directions exactly for proper installation, adjustment, service and maintenance.
- Shut off all gas appliances and pilot lights when refueling gasoline tanks, LP tanks or when vehicle is in motion.
- Dometic gas operated cooking appliances are for use with LP gas only, and for installation in recreation vehicles only (e.g. travel trailers, motor homes, tent campers, etc.).

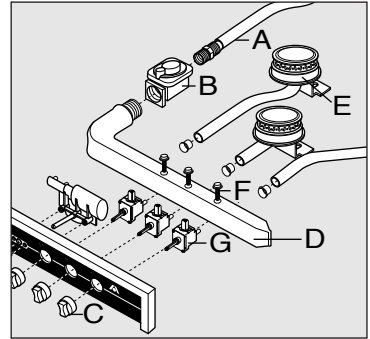

WARNING CARBON MONOXIDE POISONING

- Do not use any cooking appliance for space heating because of potential danger to occupants of vehicle and damage to operating components of range or cooktop.
- A window or air vent should be open slightly while using any cooking appliance. Gas flame consumes oxygen which must be replaced to assure proper combustion.

continued on backside



LITERATURE NUMBER MPD 53400

BURNER VALVE REPLACEMENT


Revision A, 10/19/18

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

For complete range & cooktop instructions consult MPD 56280

WARNING EXPLOSION OR FIRE

- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Refer to MPD 56280 for complete instructions.
- For assistance or additional information consult Dometic Consumer Service Department, a qualified installer, service agency or gas supplier.
- Follow directions exactly for proper installation, adjustment, service and maintenance.
- Shut off all gas appliances and pilot lights when refueling gasoline tanks, LP tanks or when vehicle is in motion.
- Dometic gas operated cooking appliances are for use with LP gas only, and for installation in recreation vehicles only (e.g. travel trailers, motor homes, tent campers, etc.).

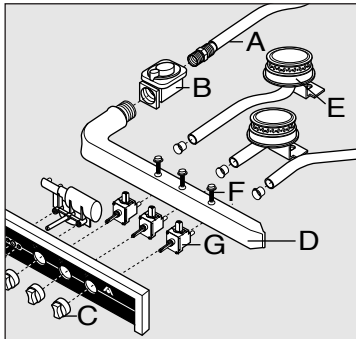

WARNING CARBON MONOXIDE POISONING

- Do not use any cooking appliance for space heating because of potential danger to occupants of vehicle and damage to operating components of range or cooktop.
- A window or air vent should be open slightly while using any cooking appliance. Gas flame consumes oxygen which must be replaced to assure proper combustion.

continued on backside



LITERATURE NUMBER MPD 53400

BURNER VALVE REPLACEMENT


Revision A, 10/19/18

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

For complete range & cooktop instructions consult MPD 56280

WARNING EXPLOSION OR FIRE


- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Refer to MPD 56280 for complete instructions.
- For assistance or additional information consult Dometic Consumer Service Department, a qualified installer, service agency or gas supplier.
- Follow directions exactly for proper installation, adjustment, service and maintenance.
- Shut off all gas appliances and pilot lights when refueling gasoline tanks, LP tanks or when vehicle is in motion.
- Dometic gas operated cooking appliances are for use with LP gas only, and for installation in recreation vehicles only (e.g. travel trailers, motor homes, tent campers, etc.).

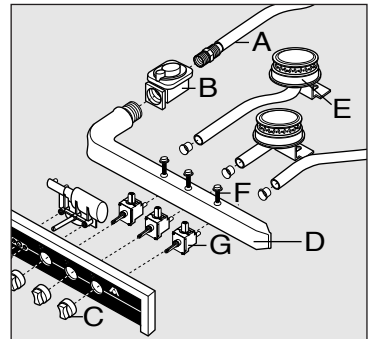

WARNING CARBON MONOXIDE POISONING

- Do not use any cooking appliance for space heating because of potential danger to occupants of vehicle and damage to operating components of range or cooktop.
- A window or air vent should be open slightly while using any cooking appliance. Gas flame consumes oxygen which must be replaced to assure proper combustion.

continued on backside

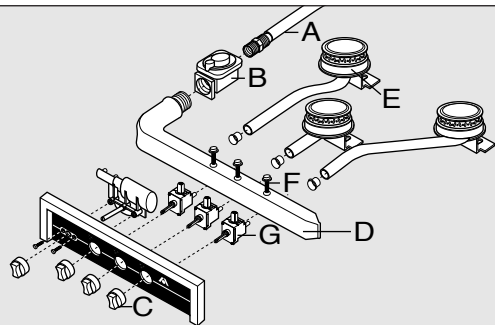

For complete range & cooktop instructions consult MPD 56280

REMOVAL PROCEDURE -

1. If range has an oven, set oven control to OFF.
2. Turn gas supply to range off at appliance shut-off valve or valve at gas bottles.
3. Remove range top.
4. Unscrew gas line-A from range regulator-B.
5. Remove all control knobs-C.
6. Remove retaining screws-F which secure manifold-D to burner box.
7. Remove top burners-E.
8. Raise manifold-D just enough to access burner valves.
9. Remove screw-F securing burner valve to manifold and remove valve-G.

INSTALLATION PROCEDURE -

1. Install new burner valve-G, torque to 20-25 in. lbs.
2. Reverse process to replace manifold-D, top burners-E and control knobs-C.
3. Attach gas supply line-A to regulator-B. All openings in cabinetry around gas line must be closed at time of installation.
4. Turn on gas supply.

CAUTION PRODUCT DAMAGE

- Two wrenches must be used for removal and installation of regulator. One wrench on collar of regulator and one wrench on gas line fitting or manifold.


WARNING EXPLOSION OR FIRE

- Do not use matches, candles or other sources of ignition to test fittings and gas lines for leaks.

WARNING PRODUCT DAMAGE

- Do not raise manifold more than necessary. The gas line to pilot can be damaged.

5. Check all connections for gas leaks using a non-corrosive leak detection fluid. Do not use a soap and water solution. Leak testing in excess of 8 oz. per square inch (1/2 psi) of air pressure will invalidate warranty.

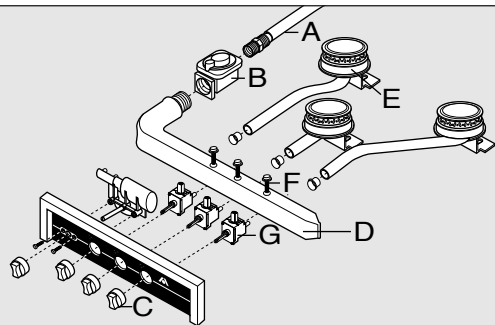

For complete range & cooktop instructions consult MPD 56280

REMOVAL PROCEDURE -

1. If range has an oven, set oven control to OFF.
2. Turn gas supply to range off at appliance shut-off valve or valve at gas bottles.
3. Remove range top.
4. Unscrew gas line-A from range regulator-B.
5. Remove all control knobs-C.
6. Remove retaining screws-F which secure manifold-D to burner box.
7. Remove top burners-E.
8. Raise manifold-D just enough to access burner valves.
9. Remove screw-F securing burner valve to manifold and remove valve-G.

INSTALLATION PROCEDURE -

1. Install new burner valve-G, torque to 20-25 in. lbs.
2. Reverse process to replace manifold-D, top burners-E and control knobs-C.
3. Attach gas supply line-A to regulator-B. All openings in cabinetry around gas line must be closed at time of installation.
4. Turn on gas supply.

CAUTION PRODUCT DAMAGE

- Two wrenches must be used for removal and installation of regulator. One wrench on collar of regulator and one wrench on gas line fitting or manifold.


WARNING EXPLOSION OR FIRE

- Do not use matches, candles or other sources of ignition to test fittings and gas lines for leaks.

WARNING PRODUCT DAMAGE

- Do not raise manifold more than necessary. The gas line to pilot can be damaged.

5. Check all connections for gas leaks using a non-corrosive leak detection fluid. Do not use a soap and water solution. Leak testing in excess of 8 oz. per square inch (1/2 psi) of air pressure will invalidate warranty.

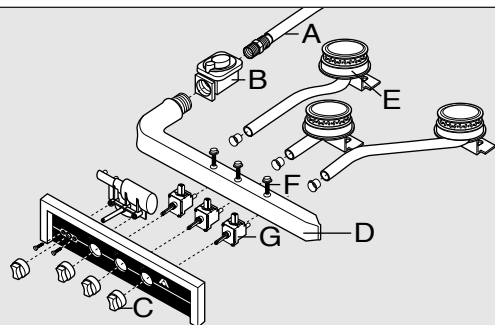

For complete range & cooktop instructions consult MPD 56280

REMOVAL PROCEDURE -

1. If range has an oven, set oven control to OFF.
2. Turn gas supply to range off at appliance shut-off valve or valve at gas bottles.
3. Remove range top.
4. Unscrew gas line-A from range regulator-B.
5. Remove all control knobs-C.
6. Remove retaining screws-F which secure manifold-D to burner box.
7. Remove top burners-E.
8. Raise manifold-D just enough to access burner valves.
9. Remove screw-F securing burner valve to manifold and remove valve-G.

INSTALLATION PROCEDURE -

1. Install new burner valve-G, torque to 20-25 in. lbs.
2. Reverse process to replace manifold-D, top burners-E and control knobs-C.
3. Attach gas supply line-A to regulator-B. All openings in cabinetry around gas line must be closed at time of installation.
4. Turn on gas supply.

CAUTION PRODUCT DAMAGE

- Two wrenches must be used for removal and installation of regulator. One wrench on collar of regulator and one wrench on gas line fitting or manifold.


WARNING EXPLOSION OR FIRE

- Do not use matches, candles or other sources of ignition to test fittings and gas lines for leaks.

WARNING PRODUCT DAMAGE

- Do not raise manifold more than necessary. The gas line to pilot can be damaged.

5. Check all connections for gas leaks using a non-corrosive leak detection fluid. Do not use a soap and water solution. Leak testing in excess of 8 oz. per square inch (1/2 psi) of air pressure will invalidate warranty.

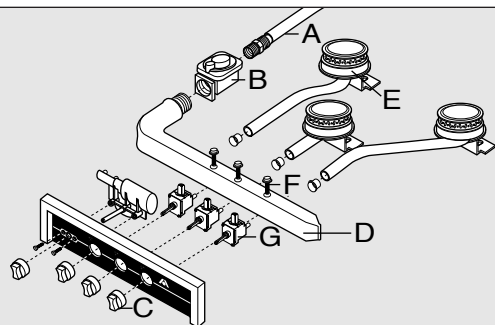

For complete range & cooktop instructions consult MPD 56280

REMOVAL PROCEDURE -

1. If range has an oven, set oven control to OFF.
2. Turn gas supply to range off at appliance shut-off valve or valve at gas bottles.
3. Remove range top.
4. Unscrew gas line-A from range regulator-B.
5. Remove all control knobs-C.
6. Remove retaining screws-F which secure manifold-D to burner box.
7. Remove top burners-E.
8. Raise manifold-D just enough to access burner valves.
9. Remove screw-F securing burner valve to manifold and remove valve-G.

INSTALLATION PROCEDURE -

1. Install new burner valve-G, torque to 20-25 in. lbs.
2. Reverse process to replace manifold-D, top burners-E and control knobs-C.
3. Attach gas supply line-A to regulator-B. All openings in cabinetry around gas line must be closed at time of installation.
4. Turn on gas supply.

CAUTION PRODUCT DAMAGE

- Two wrenches must be used for removal and installation of regulator. One wrench on collar of regulator and one wrench on gas line fitting or manifold.

WARNING EXPLOSION OR FIRE

- Do not use matches, candles or other sources of ignition to test fittings and gas lines for leaks.

WARNING PRODUCT DAMAGE

- Do not raise manifold more than necessary. The gas line to pilot can be damaged.

5. Check all connections for gas leaks using a non-corrosive leak detection fluid. Do not use a soap and water solution. Leak testing in excess of 8 oz. per square inch (1/2 psi) of air pressure will invalidate warranty.