


TOP PILOT VALVE REPLACEMENT

Effective 11/21/07

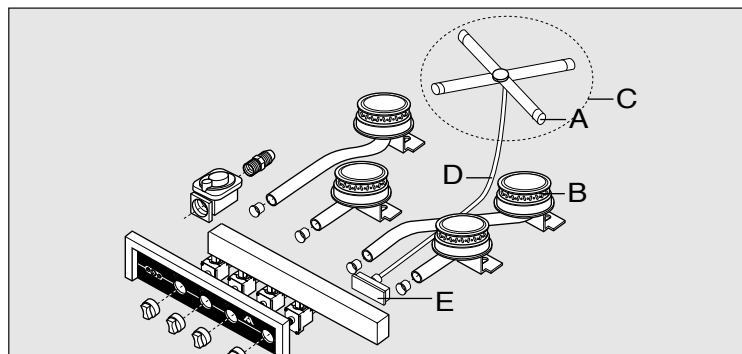

For complete Wedgewood range & cooktop instructions consult MPD 56280.

⚠ WARNING EXPLOSION OR FIRE

- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Refer to MPD 56280 for complete instructions.
- For assistance or additional information consult Atwood Consumer Service Department, a qualified installer, service agency or the gas supplier.
- Follow directions exactly for proper installation, adjustment, service and maintenance.

⚠ WARNING EXPLOSION OR FIRE


- Wait five (5) minutes before attempting to light pilot if the pilot extinguishes itself after lighting.

REMOVAL PROCEDURE-

1. Shut off the gas supply to the appliance at the appliance shut off valve or the valve on the gas bottle.
2. Remove range top.
3. Remove the pilot gas supply line-D from the pilot valve-E.
4. Remove the top pilot valve-E from the manifold.

TOP PILOT VALVE REPLACEMENT

Effective 11/21/07

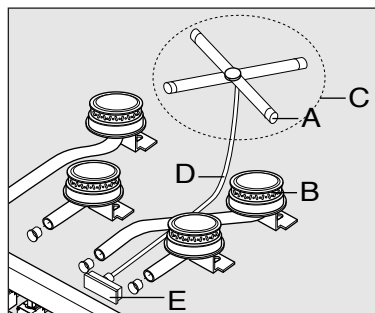

INSTALLATION PROCEDURE-

1. Apply a small amount of pipe sealant suitable for use in a LP gas system to the external threads on the valve. Screw the new valve into the manifold. Position valve so that shut-off stem of valve is accessible from top of valve.
2. Attach pilot line to top pilot valve.

⚠ CAUTION PRODUCT DAMAGE

- Two wrenches must be used for removal and installation of pilot. One wrench on the valve body and one wrench on gas line fitting.

3. After the installation is complete turn on the gas supply.

⚠ WARNING EXPLOSION OR FIRE

- Do not use matches, candles or other sources of ignition to test fittings and gas lines for leaks.

4. Check all connections for gas leaks using a non-corrosive leak detection fluid. Do not use a soap and water solution. Leak testing in excess of 8 oz. per square inch (1/2 psi) of air pressure will invalidate warranty.
5. If there are no leaks light pilot following the lighting instructions.

To light range pilot:

- a. Verify gas supply is sufficient.
- b. Turn all controls to OFF.
- c. Lift or remove range top.
- d. Turn pilot supply valve ON.
- e. Light pilot.

Note: The range pilot can be adjusted by the brass screw on the pilot supply valve. Turn screw clockwise to decrease flame; counterclockwise to increase flame. Pilot flame should extend 3/8" above pilot assembly cup.

- f. Close (or replace) range top.
- g. To extinguish range pilot, simply turn pilot supply valve OFF.

Aftermarket Replacement Service Part

Quarter page actual size.
(Shown enlarged)