



Atwood Mobile Products LLC

1120 North Main Street • Elkhart, IN 46514

PHONE: 574•264•2131 FAX: 574•262•2550

INTERNET: <http://www.atwoodmobile.com>

Literature Number MPD 57562

RANGE/OVEN DOOR REMOVAL AND REPLACEMENT INSTRUCTIONS

ENGLISH

Effective 11/19/08

SAFETY ALERT SYMBOLS

Safety Symbols alerting you to potential personal safety hazards. Obey all safety messages following these symbols.



WARNING

avoid possible
injury or death



CAUTION

avoid possible
injury and/or property damage

FOR YOUR SAFETY READ ALL INSTRUCTIONS BEFORE INSTALLATION

RANGE/OVEN DOOR REMOVAL AND REPLACEMENT INSTRUCTIONS

1. Open oven door so that the hinges on each side of the door are visible. Place a metal pin (nail, cotter pin etc) in the hole (FIG A) of the hinges on each side of the door. This will stop the hinges on each side of the door from closing completely.

2. Close the door so that the metal pin stops the hinges on each side of the door from folding up completely.
3. Lift the door up and off the hinges on each side of the door and away from the range.
4. To replace the door on the hinges on each side of the door, line up the hinge slots in the door panel with the hinges and allow the door to slide onto the hinges.
5. Open the door so as to relieve the pressure of the closed hinges from the metal pins and remove the pins from the hinges.
6. Allow the door to close

