

 


DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER **MPD 90048**  
**THERMOSTAT & ECO**  
**REPLACEMENT**

Combination Gas/Electric Models

Revision B, 10/22/18

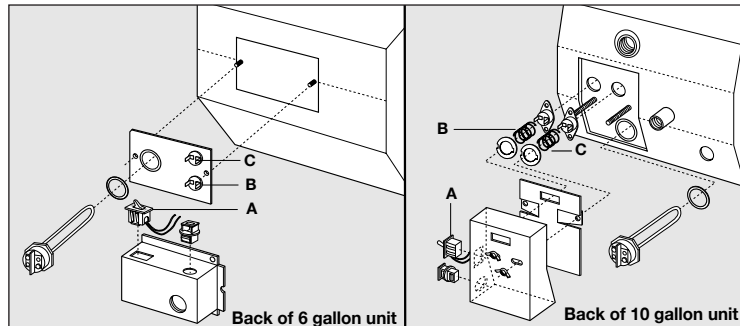

For complete water heater instructions consult MPD - 93755, 93756, 93758.

**⚠ WARNING**  
**ELECTROCUTION**

- Before servicing disconnect 120 volt power source.

**⚠ CAUTION**  
**ELECTRICAL DAMAGE**

- Label all wires before disconnecting when servicing.
- Verify proper operation after servicing.

**REMOVAL PROCEDURES -**  
**Rear Mount:**

1. Remove power from the circuit by placing the appropriate circuit breaker switch in the OFF position. Water heater junction box switch-A must be in OFF position also.
2. Remove nuts, junction box cover and insulation and/or insulator paper.
3. Unplug female connectors from thermostat-B and re-settable ECO-C.
4. Remove washer, springs, thermostat and re-settable ECO from under the tabs of the retaining plate openings.

continued backside

 


DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER **MPD 90048**  
**THERMOSTAT & ECO**  
**REPLACEMENT**

Combination Gas/Electric Models

Revision B, 10/22/18

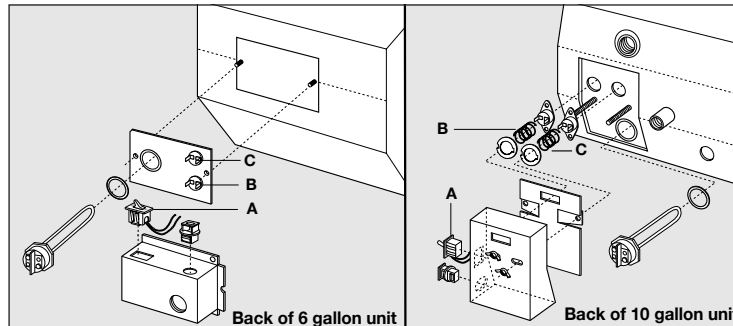

For complete water heater instructions consult MPD - 93755, 93756, 93758.

**⚠ WARNING**  
**ELECTROCUTION**

- Before servicing disconnect 120 volt power source.

**⚠ CAUTION**  
**ELECTRICAL DAMAGE**

- Label all wires before disconnecting when servicing.
- Verify proper operation after servicing.

**REMOVAL PROCEDURES -**  
**Rear Mount:**

1. Remove power from the circuit by placing the appropriate circuit breaker switch in the OFF position. Water heater junction box switch-A must be in OFF position also.
2. Remove nuts, junction box cover and insulation and/or insulator paper.
3. Unplug female connectors from thermostat-B and re-settable ECO-C.
4. Remove washer, springs, thermostat and re-settable ECO from under the tabs of the retaining plate openings.

continued backside

 


DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER **MPD 90048**  
**THERMOSTAT & ECO**  
**REPLACEMENT**

Combination Gas/Electric Models

Revision B, 10/22/18

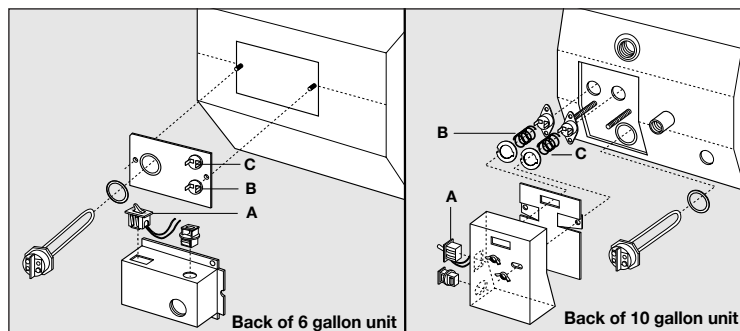

For complete water heater instructions consult MPD - 93755, 93756, 93758.

**⚠ WARNING**  
**ELECTROCUTION**

- Before servicing disconnect 120 volt power source.

**⚠ CAUTION**  
**ELECTRICAL DAMAGE**

- Label all wires before disconnecting when servicing.
- Verify proper operation after servicing.

**REMOVAL PROCEDURES -**  
**Rear Mount:**

1. Remove power from the circuit by placing the appropriate circuit breaker switch in the OFF position. Water heater junction box switch-A must be in OFF position also.
2. Remove nuts, junction box cover and insulation and/or insulator paper.
3. Unplug female connectors from thermostat-B and re-settable ECO-C.
4. Remove washer, springs, thermostat and re-settable ECO from under the tabs of the retaining plate openings.

continued backside

 


DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER **MPD 90048**  
**THERMOSTAT & ECO**  
**REPLACEMENT**

Combination Gas/Electric Models

Revision B, 10/22/18

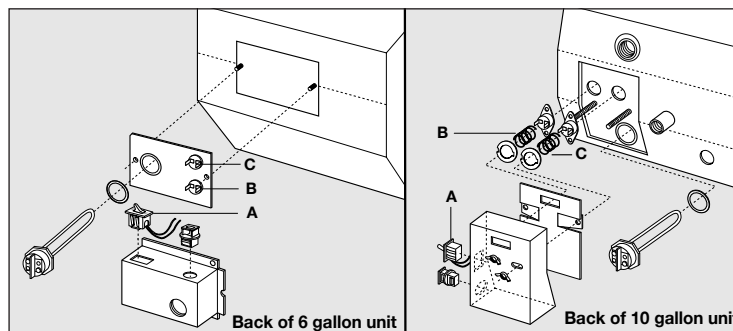

For complete water heater instructions consult MPD - 93755, 93756, 93758.

**⚠ WARNING**  
**ELECTROCUTION**

- Before servicing disconnect 120 volt power source.

**⚠ CAUTION**  
**ELECTRICAL DAMAGE**

- Label all wires before disconnecting when servicing.
- Verify proper operation after servicing.

**REMOVAL PROCEDURES -**  
**Rear Mount:**

1. Remove power from the circuit by placing the appropriate circuit breaker switch in the OFF position. Water heater junction box switch-A must be in OFF position also.
2. Remove nuts, junction box cover and insulation and/or insulator paper.
3. Unplug female connectors from thermostat-B and re-settable ECO-C.
4. Remove washer, springs, thermostat and re-settable ECO from under the tabs of the retaining plate openings.

continued backside

 


DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

# LITERATURE NUMBER MPD 90048 THERMOSTAT & ECO REPLACEMENT

Combination Gas/Electric Models

Revision B, 10/22/18

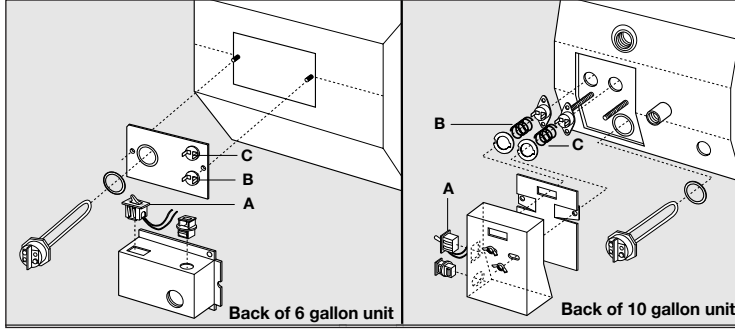

For complete water heater instructions consult MPD - 93755, 93756, 93758.

## INSTALLATION PROCEDURES - Rear Mount:

1. Place thermostat-B and re-settable ECO-C in the retaining plate openings.
2. Replace spring with smaller end toward the tank.
3. Replace washer and verify that washer is under the tabs of the retaining plate opening.
4. Replace female connectors on thermostat and re-settable ECO as shown in the wiring diagram of IOM.
5. Replace insulator paper, junction box cover and nuts. (Make sure the fiber glass insulation is in the junction cover.

6. Place the appropriate circuit breaker switch to the ON position.
7. Place switch on junction box cover to ON position to verify proper operation.

### CAUTION PRODUCT FAILURE

- Do not operate water heater without water in tank.

 


DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

# LITERATURE NUMBER MPD 90048 THERMOSTAT & ECO REPLACEMENT

Combination Gas/Electric Models

Revision B, 10/22/18

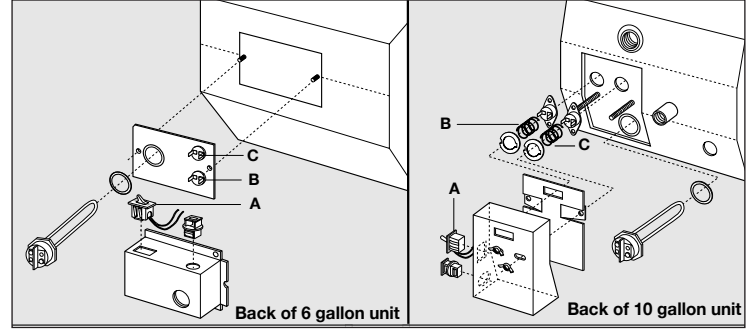

For complete water heater instructions consult MPD - 93755, 93756, 93758.

## INSTALLATION PROCEDURES - Rear Mount:

1. Place thermostat-B and re-settable ECO-C in the retaining plate openings.
2. Replace spring with smaller end toward the tank.
3. Replace washer and verify that washer is under the tabs of the retaining plate opening.
4. Replace female connectors on thermostat and re-settable ECO as shown in the wiring diagram of IOM.
5. Replace insulator paper, junction box cover and nuts. (Make sure the fiber glass insulation is in the junction cover.

6. Place the appropriate circuit breaker switch to the ON position.
7. Place switch on junction box cover to ON position to verify proper operation.

### CAUTION PRODUCT FAILURE

- Do not operate water heater without water in tank.

 


DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

# LITERATURE NUMBER MPD 90048 THERMOSTAT & ECO REPLACEMENT

Combination Gas/Electric Models

Revision B, 10/22/18

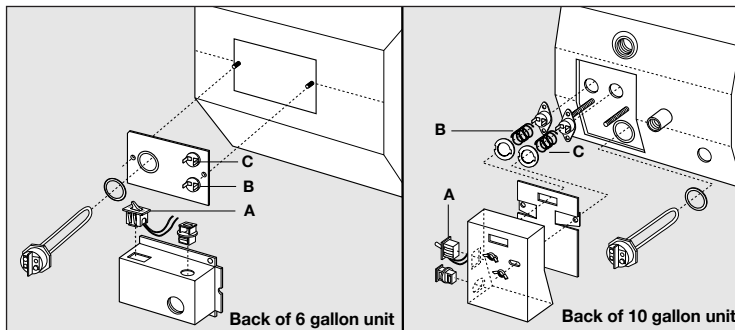

For complete water heater instructions consult MPD - 93755, 93756, 93758.

## INSTALLATION PROCEDURES - Rear Mount:

1. Place thermostat-B and re-settable ECO-C in the retaining plate openings.
2. Replace spring with smaller end toward the tank.
3. Replace washer and verify that washer is under the tabs of the retaining plate opening.
4. Replace female connectors on thermostat and re-settable ECO as shown in the wiring diagram of IOM.
5. Replace insulator paper, junction box cover and nuts. (Make sure the fiber glass insulation is in the junction cover.

6. Place the appropriate circuit breaker switch to the ON position.
7. Place switch on junction box cover to ON position to verify proper operation.

### CAUTION PRODUCT FAILURE

- Do not operate water heater without water in tank.

 


DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

# LITERATURE NUMBER MPD 90048 THERMOSTAT & ECO REPLACEMENT

Combination Gas/Electric Models

Revision B, 10/22/18

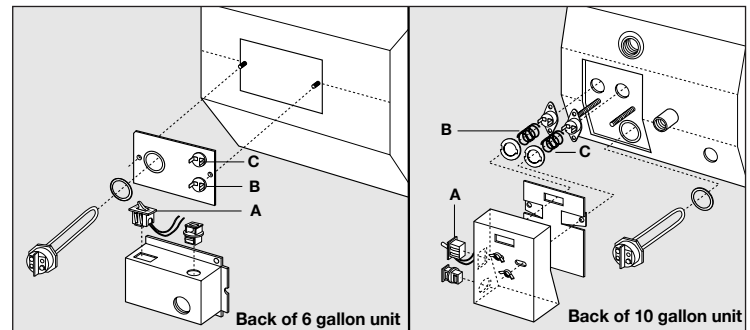

For complete water heater instructions consult MPD - 93755, 93756, 93758.

## INSTALLATION PROCEDURES - Rear Mount:

1. Place thermostat-B and re-settable ECO-C in the retaining plate openings.
2. Replace spring with smaller end toward the tank.
3. Replace washer and verify that washer is under the tabs of the retaining plate opening.
4. Replace female connectors on thermostat and re-settable ECO as shown in the wiring diagram of IOM.
5. Replace insulator paper, junction box cover and nuts. (Make sure the fiber glass insulation is in the junction cover.

6. Place the appropriate circuit breaker switch to the ON position.
7. Place switch on junction box cover to ON position to verify proper operation.

### CAUTION PRODUCT FAILURE

- Do not operate water heater without water in tank.