



DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 90093

WATER HEATER in Baggage Compartment

Revision A, 10/22/18

MANUFACTURER'S SPECIAL INSTALLATION INSTRUCTIONS

Installation of Water Heater in Baggage Compartment

WARNING

Personal Injury/Product Failure

- The installation must insure that the water heater exhaust and fresh air intake are completely separated from the living area of the vehicle.
- There must be no possibility of this appliance interfering with the operation of another gas appliance or another gas appliance interfering with the operation of this appliance.

1. The water heater must be installed to the vehicle following the instructions in the IOM (MPD 93756) supplied by Dometic or an alternate method that has been approved by Dometic.
2. Attach the door as described in the IOM (MPD 93756).
3. The opening in the baggage door must provide a 1/2" clearance between it and the top, bottom, and sides of the flue box extension.
4. Position the water heater so the flue box extension protrudes no less than 1/4" from the outside surface of the baggage door.



DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 90093

WATER HEATER in Baggage Compartment

Revision A, 10/22/18

MANUFACTURER'S SPECIAL INSTALLATION INSTRUCTIONS

Installation of Water Heater in Baggage Compartment

WARNING


Personal Injury/Product Failure

- The installation must insure that the water heater exhaust and fresh air intake are completely separated from the living area of the vehicle.
- There must be no possibility of this appliance interfering with the operation of another gas appliance or another gas appliance interfering with the operation of this appliance.


1. The water heater must be installed to the vehicle following the instructions in the IOM (MPD 93756) supplied by Dometic or an alternate method that has been approved by Dometic.
2. Attach the door as described in the IOM (MPD 93756).
3. The opening in the baggage door must provide a 1/2" clearance between it and the top, bottom, and sides of the flue box extension.
4. Position the water heater so the flue box extension protrudes no less than 1/4" from the outside surface of the baggage door.

5. Frame the opening in the baggage door with a suitable material to protect the foam core from exposure to flue gases.


Assure when bending flanges over sealant, that the sealant fills the lanced openings and that the flange is bent a full 90° and is flat to the enclosure.

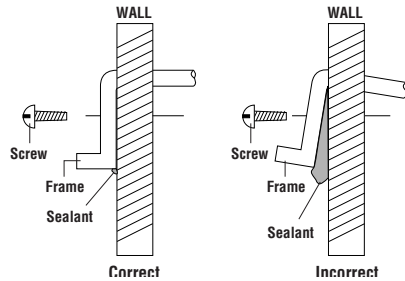

Assure the thermal cut-off (TCO) is positioned horizontally and in close proximity to the openings in the air adjustment shutter.

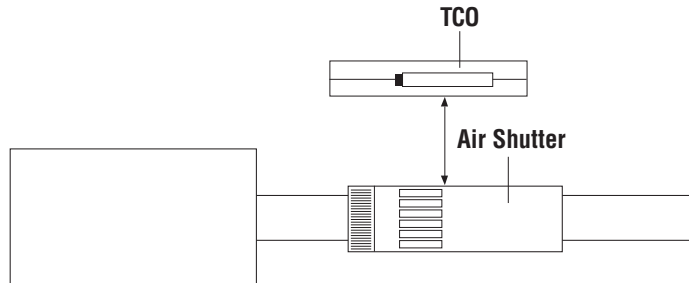


Assure there is a 1/2" (.500) (12mm) minimum distance between the outer surface of the water heater door and the inside surface of the baggage door. Use minimum 3/4" (.75) (18mm) bumpers if necessary to guarantee spacing.

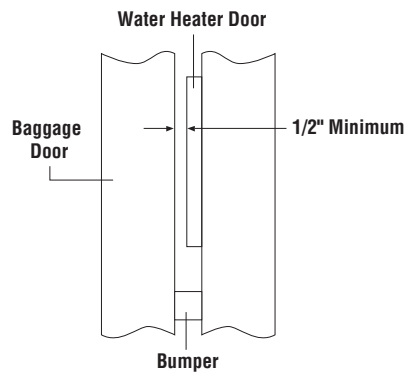


6. Follow the normal installation instructions for making gas, water and electrical connections.

5. Frame the opening in the baggage door with a suitable material to protect the foam core from exposure to flue gases.


Assure when bending flanges over sealant, that the sealant fills the lanced openings and that the flange is bent a full 90° and is flat to the enclosure.

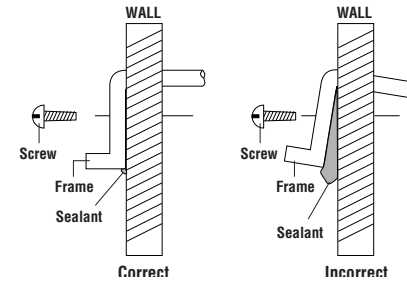

Assure the thermal cut-off (TCO) is positioned horizontally and in close proximity to the openings in the air adjustment shutter.

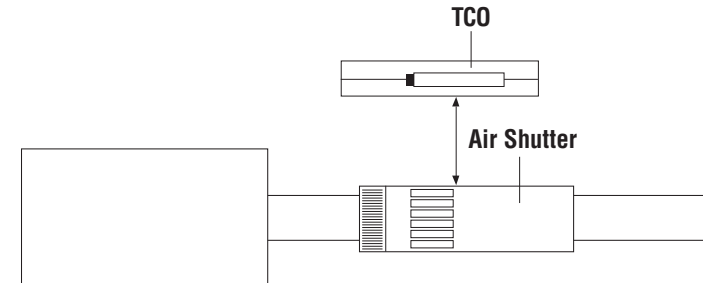

Assure there is a 1/2" (.500) (12mm) minimum distance between the outer surface of the water heater door and the inside surface of the baggage door. Use minimum 3/4" (.75) (18mm) bumpers if necessary to guarantee spacing.

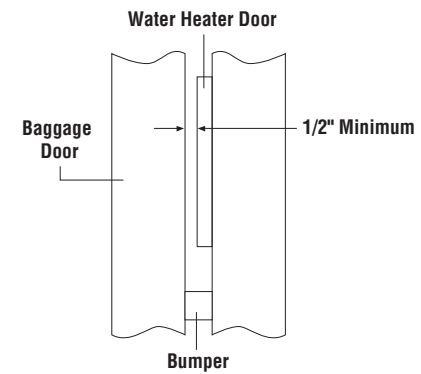

6. Follow the normal installation instructions for making gas, water and electrical connections.