

EN Pressure/Temperature (P/T) Relief Valve Replacement
Service Kit Instructions**USA & CANADA**

Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN, USA 46514

Service Center & Dealer Locations
Visit: www.dometic.com

1 Explanation of Symbols and Safety Instructions

This SKI has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.

1.1 Recognize Safety Information

 **This is the safety alert symbol.** It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

1.2 Understand Signal Words

A signal word will identify safety messages and property damage messages, and it will indicate the degree or level of hazard seriousness.

 WARNING

This indicates a hazardous situation that, if **not** avoided, could result in death or serious injury.

2 Operation Specifications

- 0.50 or 0.75 in. (130 or 190 mm) pipe thread connection for a tank outlet
- 75 or 150 psi pressure
- 210° F (99° C)

 In RVs, a p/t relief valve that weeps during the heating cycle may signal it is necessary to restore the internal air pocket within the Dometic water heater. To re-establish this air pocket, refer to your owner's manual.

 Images used in this document are for reference purposes only.

REVISION C 91260 1/20 | ©2020 Dometic Corporation

EN Pressure/Temperature (P/T) Relief Valve Replacement
Service Kit Instructions**USA & CANADA**

Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN, USA 46514

Service Center & Dealer Locations
Visit: www.dometic.com

1 Explanation of Symbols and Safety Instructions

This SKI has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.

1.1 Recognize Safety Information

 **This is the safety alert symbol.** It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

1.2 Understand Signal Words

A signal word will identify safety messages and property damage messages, and it will indicate the degree or level of hazard seriousness.

 WARNING

This indicates a hazardous situation that, if **not** avoided, could result in death or serious injury.

2 Operation Specifications

- 0.50 or 0.75 in. (130 or 190 mm) pipe thread connection for a tank outlet
- 75 or 150 psi pressure
- 210° F (99° C)

 In RVs, a p/t relief valve that weeps during the heating cycle may signal it is necessary to restore the internal air pocket within the Dometic water heater. To re-establish this air pocket, refer to your owner's manual.

 Images used in this document are for reference purposes only.

REVISION C 91260 1/20 | ©2020 Dometic Corporation

EN Pressure/Temperature (P/T) Relief Valve Replacement
Service Kit Instructions**USA & CANADA**

Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN, USA 46514

Service Center & Dealer Locations
Visit: www.dometic.com

1 Explanation of Symbols and Safety Instructions

This SKI has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.

1.1 Recognize Safety Information

 **This is the safety alert symbol.** It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

1.2 Understand Signal Words

A signal word will identify safety messages and property damage messages, and it will indicate the degree or level of hazard seriousness.

 WARNING

This indicates a hazardous situation that, if **not** avoided, could result in death or serious injury.

2 Operation Specifications

- 0.50 or 0.75 in. (130 or 190 mm) pipe thread connection for a tank outlet
- 75 or 150 psi pressure
- 210° F (99° C)

 In RVs, a p/t relief valve that weeps during the heating cycle may signal it is necessary to restore the internal air pocket within the Dometic water heater. To re-establish this air pocket, refer to your owner's manual.

 Images used in this document are for reference purposes only.

REVISION C 91260 1/20 | ©2020 Dometic Corporation

EN Pressure/Temperature (P/T) Relief Valve Replacement
Service Kit Instructions**USA & CANADA**

Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN, USA 46514

Service Center & Dealer Locations
Visit: www.dometic.com

1 Explanation of Symbols and Safety Instructions

This SKI has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.

1.1 Recognize Safety Information

 **This is the safety alert symbol.** It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

1.2 Understand Signal Words

A signal word will identify safety messages and property damage messages, and it will indicate the degree or level of hazard seriousness.

 WARNING

This indicates a hazardous situation that, if **not** avoided, could result in death or serious injury.

 
2 Operation Specifications

- 0.50 or 0.75 in. (130 or 190 mm) pipe thread connection for a tank outlet
- 75 or 150 psi pressure
- 210° F (99° C)

 In RVs, a p/t relief valve that weeps during the heating cycle may signal it is necessary to restore the internal air pocket within the Dometic water heater. To re-establish this air pocket, refer to your owner's manual.

 Images used in this document are for reference purposes only.

REVISION C 91260 1/20 | ©2020 Dometic Corporation

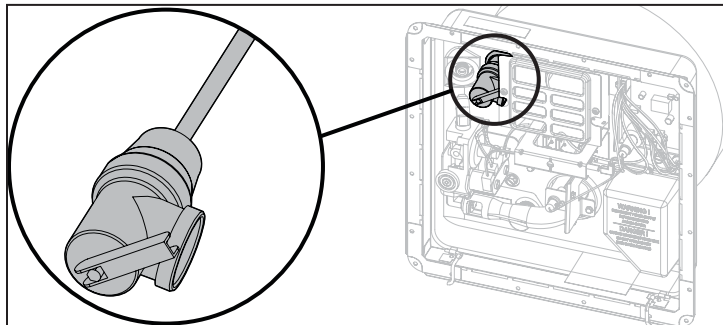

3 P/T Relief Valve Removal

 
⚠ WARNING: FIRE, EXPLOSION HAZARD, OR SCALDING INJURY. Failure to obey the following warnings could result in death or serious injury.

- Do **not** place a valve, plug, or reducing coupling on the outlet part of the relief valve. Do **not** plug the relief valve.
- Shut off the gas supply at the LP container before disconnecting a gas line.
- Turn off the water heater and allow the water to cool before opening the P/T relief valve to establish air space. Storage water **must** be cool.
 1. Shut off the LP gas.
 2. Turn off the water supply and drain the tank.
 3. Unscrew the p/t relief valve with a pipe or adjustable wrench.

4 P/T Relief Valve Installation

NOTICE: Do **not** operate the water heater without water in the tank. Failure to obey this notice could cause damage to the water heater.

1. Apply pipe sealant to the external threads of the valve.
2. Screw the new p/t relief valve firmly into the tank fitting.
3. Rotate the opening of the p/t relief valve toward the flue box.
4. Turn on the water supply and check for leaks.
5. Turn on the LP gas and check for leaks.

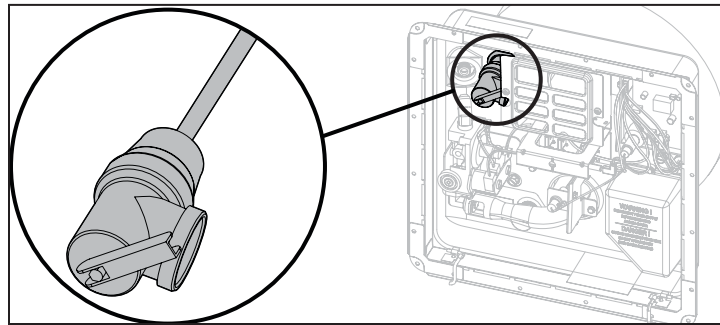

3 P/T Relief Valve Removal

 
⚠ WARNING: FIRE, EXPLOSION HAZARD, OR SCALDING INJURY. Failure to obey the following warnings could result in death or serious injury.

- Do **not** place a valve, plug, or reducing coupling on the outlet part of the relief valve. Do **not** plug the relief valve.
- Shut off the gas supply at the LP container before disconnecting a gas line.
- Turn off the water heater and allow the water to cool before opening the P/T relief valve to establish air space. Storage water **must** be cool.
 1. Shut off the LP gas.
 2. Turn off the water supply and drain the tank.
 3. Unscrew the p/t relief valve with a pipe or adjustable wrench.

4 P/T Relief Valve Installation

NOTICE: Do **not** operate the water heater without water in the tank. Failure to obey this notice could cause damage to the water heater.

1. Apply pipe sealant to the external threads of the valve.
2. Screw the new p/t relief valve firmly into the tank fitting.
3. Rotate the opening of the p/t relief valve toward the flue box.
4. Turn on the water supply and check for leaks.
5. Turn on the LP gas and check for leaks.

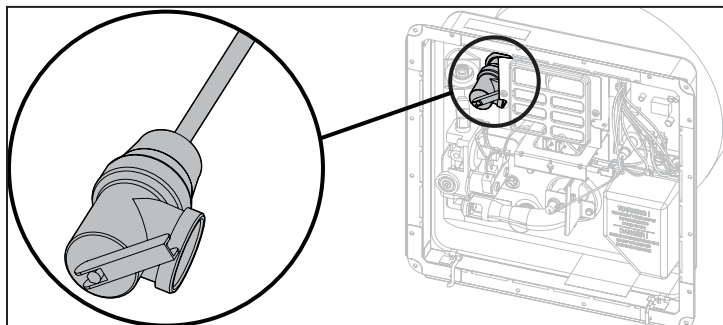

3 P/T Relief Valve Removal

 
⚠ WARNING: FIRE, EXPLOSION HAZARD, OR SCALDING INJURY. Failure to obey the following warnings could result in death or serious injury.

- Do **not** place a valve, plug, or reducing coupling on the outlet part of the relief valve. Do **not** plug the relief valve.
- Shut off the gas supply at the LP container before disconnecting a gas line.
- Turn off the water heater and allow the water to cool before opening the P/T relief valve to establish air space. Storage water **must** be cool.
 1. Shut off the LP gas.
 2. Turn off the water supply and drain the tank.
 3. Unscrew the p/t relief valve with a pipe or adjustable wrench.

4 P/T Relief Valve Installation

NOTICE: Do **not** operate the water heater without water in the tank. Failure to obey this notice could cause damage to the water heater.

1. Apply pipe sealant to the external threads of the valve.
2. Screw the new p/t relief valve firmly into the tank fitting.
3. Rotate the opening of the p/t relief valve toward the flue box.
4. Turn on the water supply and check for leaks.
5. Turn on the LP gas and check for leaks.

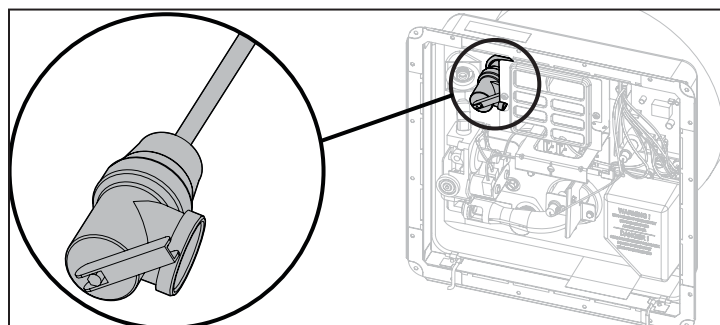

3 P/T Relief Valve Removal

⚠ WARNING: FIRE, EXPLOSION HAZARD, OR SCALDING INJURY. Failure to obey the following warnings could result in death or serious injury.

- Do **not** place a valve, plug, or reducing coupling on the outlet part of the relief valve. Do **not** plug the relief valve.
- Shut off the gas supply at the LP container before disconnecting a gas line.
- Turn off the water heater and allow the water to cool before opening the P/T relief valve to establish air space. Storage water **must** be cool.
 1. Shut off the LP gas.
 2. Turn off the water supply and drain the tank.
 3. Unscrew the p/t relief valve with a pipe or adjustable wrench.

4 P/T Relief Valve Installation

NOTICE: Do **not** operate the water heater without water in the tank. Failure to obey this notice could cause damage to the water heater.

1. Apply pipe sealant to the external threads of the valve.
2. Screw the new p/t relief valve firmly into the tank fitting.
3. Rotate the opening of the p/t relief valve toward the flue box.
4. Turn on the water supply and check for leaks.
5. Turn on the LP gas and check for leaks.