




LITERATURE NUMBER MPD 91627

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

THERMOCOUPLE REPLACEMENT

Revision A, 10/30/18

For both Jade and Robertshaw pilot thermocouple assemblies

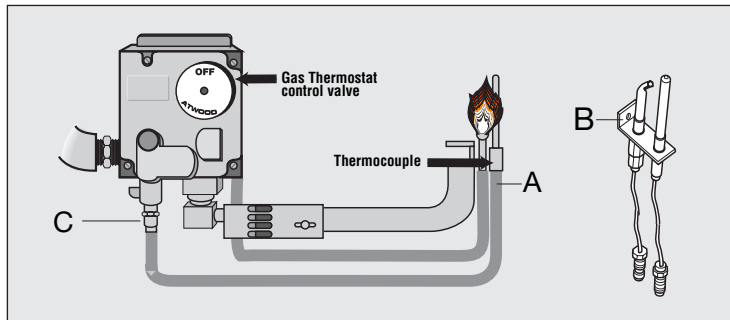

For complete water heater instructions consult MPD 93756.

WARNING **FIRE AND/OR EXPLOSION**

- Use with LP gas only.
- Installation in Recreation Vehicles only. RV's are recreation vehicles designed as temporary living quarters for recreation, camping, or travel use having their own power or towed by another vehicle.

REMOVAL PROCEDURE

1. Turn gas thermostat control valve to OFF position.
2. Grasp thermocouple tube-A and pull out firmly from pilot bracket-B.
3. Unscrew thermocouple lead-C from gas control.

INSTALLATION PROCEDURE

1. Insert new thermocouple into pilot bracket and push in until completely sealed.
2. Screw thermocouple lead into thermostat finger tight, then additional 1/4 turn with wrench.




LITERATURE NUMBER MPD 91627

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

THERMOCOUPLE REPLACEMENT

Revision A, 10/30/18

For both Jade and Robertshaw pilot thermocouple assemblies

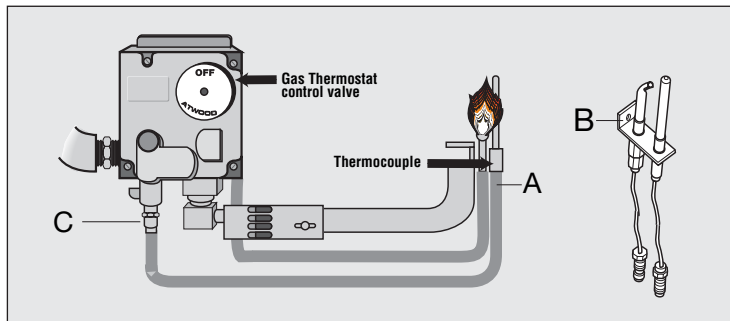

For complete water heater instructions consult MPD 93756.

WARNING **FIRE AND/OR EXPLOSION**

- Use with LP gas only.
- Installation in Recreation Vehicles only. RV's are recreation vehicles designed as temporary living quarters for recreation, camping, or travel use having their own power or towed by another vehicle.

REMOVAL PROCEDURE

1. Turn gas thermostat control valve to OFF position.
2. Grasp thermocouple tube-A and pull out firmly from pilot bracket-B.
3. Unscrew thermocouple lead-C from gas control.

INSTALLATION PROCEDURE

1. Insert new thermocouple into pilot bracket and push in until completely sealed.
2. Screw thermocouple lead into thermostat finger tight, then additional 1/4 turn with wrench.




LITERATURE NUMBER MPD 91627

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

THERMOCOUPLE REPLACEMENT

Revision A, 10/30/18

For both Jade and Robertshaw pilot thermocouple assemblies

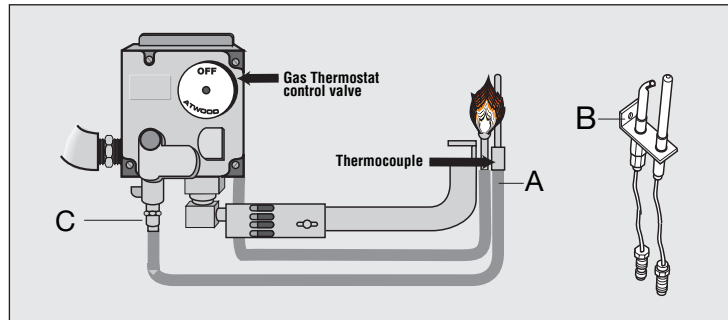

For complete water heater instructions consult MPD 93756.

WARNING **FIRE AND/OR EXPLOSION**

- Use with LP gas only.
- Installation in Recreation Vehicles only. RV's are recreation vehicles designed as temporary living quarters for recreation, camping, or travel use having their own power or towed by another vehicle.

REMOVAL PROCEDURE

1. Turn gas thermostat control valve to OFF position.
2. Grasp thermocouple tube-A and pull out firmly from pilot bracket-B.
3. Unscrew thermocouple lead-C from gas control.

INSTALLATION PROCEDURE

1. Insert new thermocouple into pilot bracket and push in until completely sealed.
2. Screw thermocouple lead into thermostat finger tight, then additional 1/4 turn with wrench.




LITERATURE NUMBER MPD 91627

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

THERMOCOUPLE REPLACEMENT

Revision A, 10/30/18

For both Jade and Robertshaw pilot thermocouple assemblies

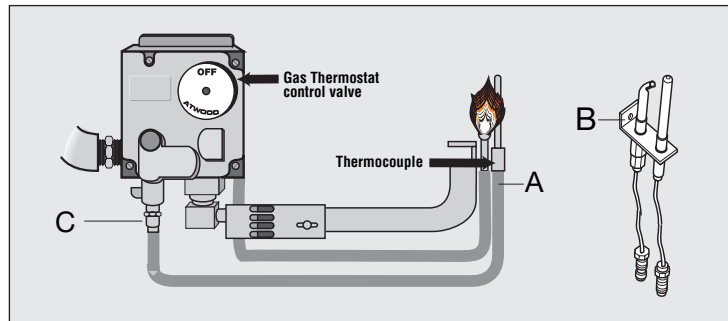

For complete water heater instructions consult MPD 93756.

WARNING **FIRE AND/OR EXPLOSION**

- Use with LP gas only.
- Installation in Recreation Vehicles only. RV's are recreation vehicles designed as temporary living quarters for recreation, camping, or travel use having their own power or towed by another vehicle.

REMOVAL PROCEDURE

1. Turn gas thermostat control valve to OFF position.
2. Grasp thermocouple tube-A and pull out firmly from pilot bracket-B.
3. Unscrew thermocouple lead-C from gas control.

INSTALLATION PROCEDURE

1. Insert new thermocouple into pilot bracket and push in until completely sealed.
2. Screw thermocouple lead into thermostat finger tight, then additional 1/4 turn with wrench.