

 


DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 93218

FLUE BOX ASSEMBLY REPLACEMENT

Revision B, 10/30/18

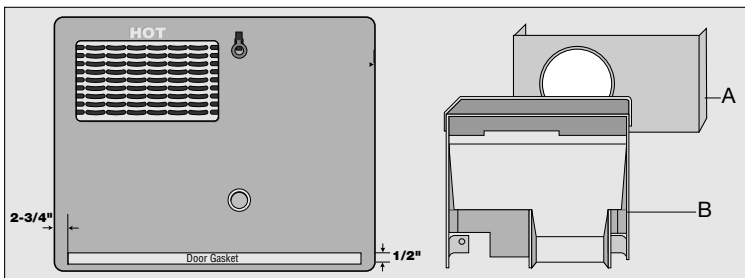

For complete water heater instructions consult MPD - 93755, 93756, 93758.

COMPLETE SHUT DOWN

Spark Ignition Models:

- Turn remote switch to "OFF" position.
- Remove red wire from left hand terminal of ECO switch (ECO to valve).

Pilot Light Models:

- Turn lighting dial to "OFF" position.

REMOVAL PROCEDURE

- Remove screw in upper front right-hand corner and lower left rear corner.
- Flue box will pull free.

INSTALLATION PROCEDURE

- Place flue gasket (A) over exhaust tube located in upper left-hand corner of heater. Be sure flanges face inward toward heater.
- Position flue box assembly (B) over flue tube and gasket (A) and screw in place.



BURN / SCALDING INJURY

- Water Heater must be completely shut down and cool before installing flue box to avoid skin burns or other injuries.

 


DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 93218

FLUE BOX ASSEMBLY REPLACEMENT

Revision B, 10/30/18

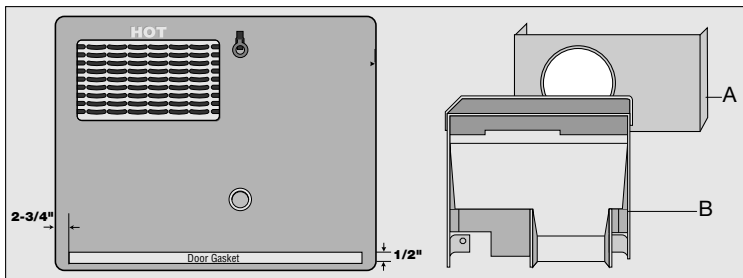

For complete water heater instructions consult MPD - 93755, 93756, 93758.

COMPLETE SHUT DOWN

Spark Ignition Models:

- Turn remote switch to "OFF" position.
- Remove red wire from left hand terminal of ECO switch (ECO to valve).

Pilot Light Models:

- Turn lighting dial to "OFF" position.

REMOVAL PROCEDURE

- Remove screw in upper front right-hand corner and lower left rear corner.
- Flue box will pull free.

INSTALLATION PROCEDURE

- Place flue gasket (A) over exhaust tube located in upper left-hand corner of heater. Be sure flanges face inward toward heater.
- Position flue box assembly (B) over flue tube and gasket (A) and screw in place.



BURN / SCALDING INJURY

- Water Heater must be completely shut down and cool before installing flue box to avoid skin burns or other injuries.

 


DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 93218

FLUE BOX ASSEMBLY REPLACEMENT

Revision B, 10/30/18

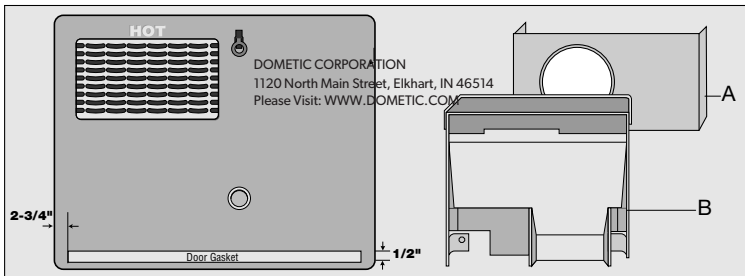

For complete water heater instructions consult MPD - 93755, 93756, 93758.

COMPLETE SHUT DOWN

Spark Ignition Models:

- Turn remote switch to "OFF" position.
- Remove red wire from left hand terminal of ECO switch (ECO to valve).

Pilot Light Models:

- Turn lighting dial to "OFF" position.

REMOVAL PROCEDURE

- Remove screw in upper front right-hand corner and lower left rear corner.
- Flue box will pull free.

INSTALLATION PROCEDURE

- Place flue gasket (A) over exhaust tube located in upper left-hand corner of heater. Be sure flanges face inward toward heater.
- Position flue box assembly (B) over flue tube and gasket (A) and screw in place.



BURN / SCALDING INJURY

- Water Heater must be completely shut down and cool before installing flue box to avoid skin burns or other injuries.

 


DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 93218

FLUE BOX ASSEMBLY REPLACEMENT

Revision B, 10/30/18

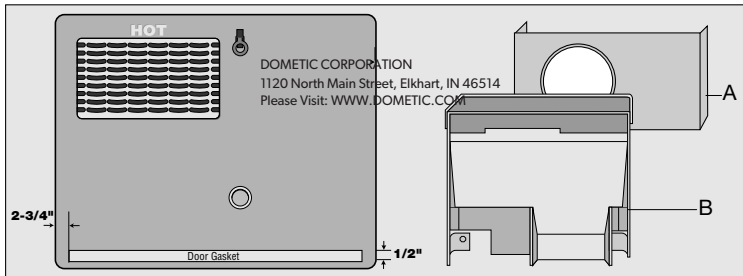

For complete water heater instructions consult MPD - 93755, 93756, 93758.

COMPLETE SHUT DOWN

Spark Ignition Models:

- Turn remote switch to "OFF" position.
- Remove red wire from left hand terminal of ECO switch (ECO to valve).

Pilot Light Models:

- Turn lighting dial to "OFF" position.

REMOVAL PROCEDURE

- Remove screw in upper front right-hand corner and lower left rear corner.
- Flue box will pull free.

INSTALLATION PROCEDURE

- Place flue gasket (A) over exhaust tube located in upper left-hand corner of heater. Be sure flanges face inward toward heater.
- Position flue box assembly (B) over flue tube and gasket (A) and screw in place.



BURN / SCALDING INJURY

- Water Heater must be completely shut down and cool before installing flue box to avoid skin burns or other injuries.