

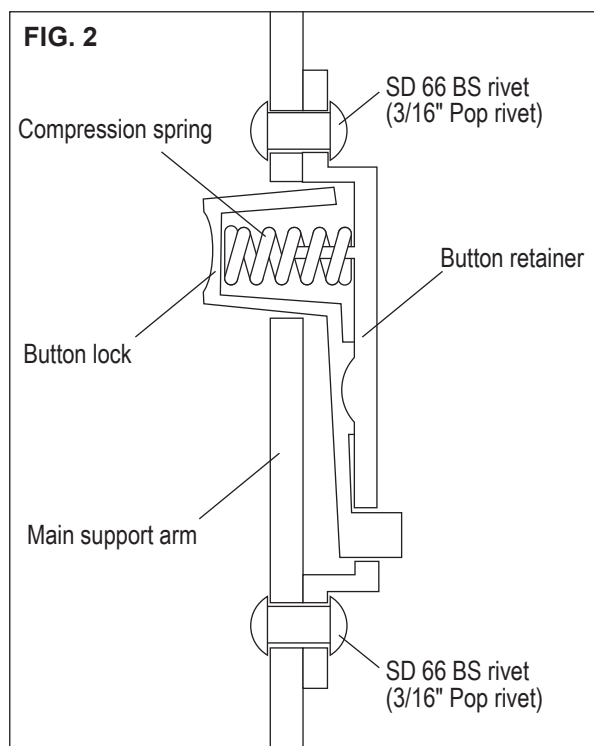



1. Open awning and raise rafter arms up to the slider catches. Dismount the support arm of the defective side from the bottom mounting bracket. Slide out the adjustable arm from the main support arm. (FIG.1)
2. Drill out the two rivets holding the deluxe lift handle assembly in place. Use a 3/16" diameter drill bit.
3. Drill out the rivets using #7 of 3/16" diameter drill bit and remove the defective push button assembly.
4. Assembly new push button as shown (FIG. 2), and secure in place using SD 66 BS rivets (3/16" diameter pop rivets).
5. Secure deluxe lift handle to the main arm assembly using two 3/16" x 3/8" grip pop rivets.
6. Slide adjustable arm back into main support arm and return hardware to mounted position.

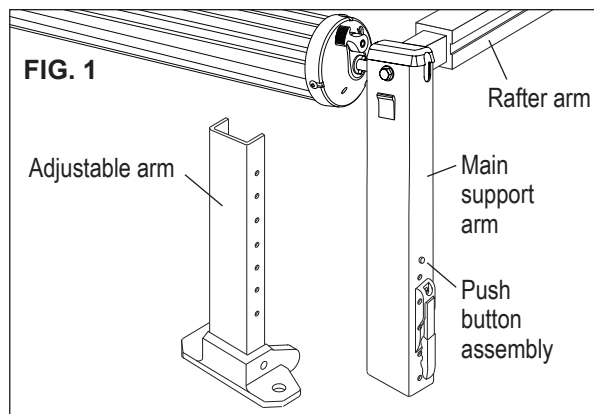

Slider Catch and Pushbutton Service Instructions

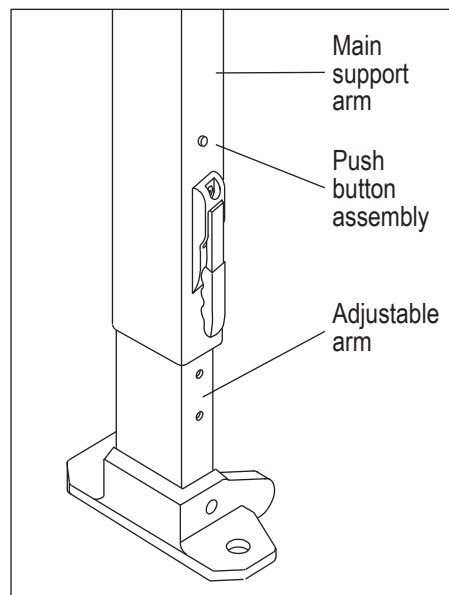

830023P001

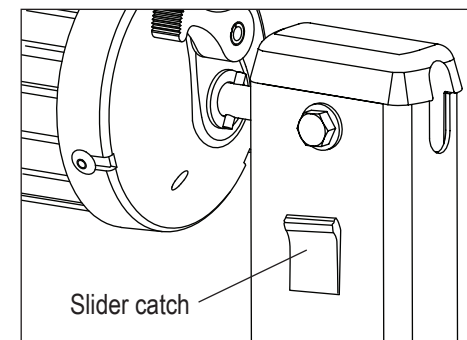

830472P002

WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

IMPORTANT: These instructions must stay with the unit. Owner read carefully.

Dometic Corporation
1120 North Main Street
Elkhart, IN 46514 USA

Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8 Canada

SERVICE CENTER &
DEALER LOCATIONS
Please Visit:

www.eDometic.com

830472.002 SLIDER CATCH REMOVAL AND REPLACEMENT

A. Slider Catch Removal

Dometic has used two different slider catch assemblies in the manufacturing of their hardware. One (Style 1) uses two pop rivets to hold it in place, the other (Style 2) slider catch snaps together. (FIG. 2 & 3)

Style 1

Extend the awning and remove the two pop rivets from the inside of the Main Support Arm with a 1/8" diameter drill. Remove the slider catch. (FIG. 1 & 2)

Style 2

Extend the awning and insert a small flat bladed screwdriver into the seam between the back and front of the catch. Pry the back off and remove the slider catch. (FIG. 1 & 3)

B. Slider Catch Replacement

1. Insert the new Slider Catch through the hole in the main arm from the front. (FIG. 4)
2. Insert the lip of the back into the lower ledge. Place the spring between the back of the slider catch and the Main Support Arm. Snap the back of the slider into the front piece being careful not to allow the spring to come out. (FIG. 4)

