


Travel Lock Kit

Service Instructions

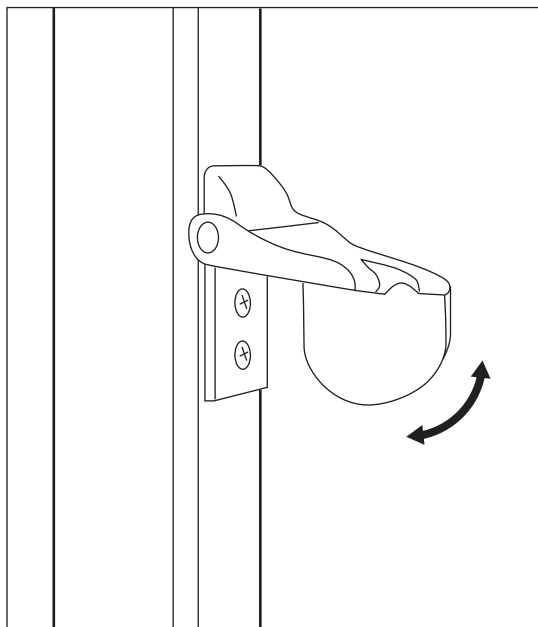

WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

IMPORTANT: These instructions must stay with the unit. Owner read carefully.

Dometic Corporation
1120 North Main Street
Elkhart, IN 4651 USA


Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8 Canada

SERVICE CENTER &
DEALER LOCATIONS
Please Visit:

www.eDometic.com

Travel Lock Kit

Service Instructions

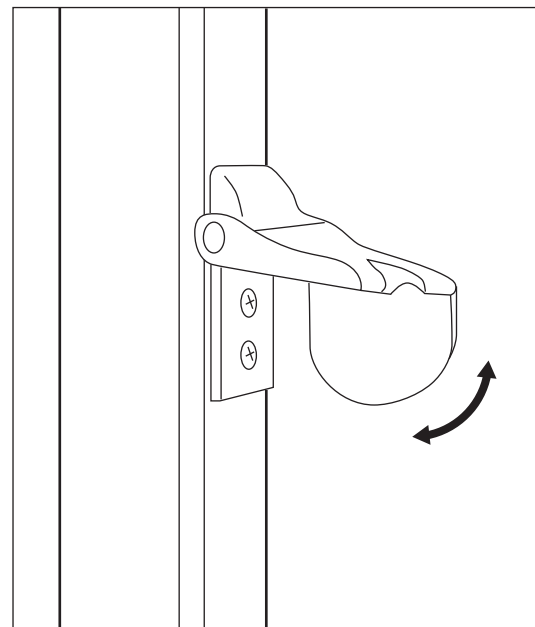

WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

IMPORTANT: These instructions must stay with the unit. Owner read carefully.

Dometic Corporation
1120 North Main Street
Elkhart, IN 46516 USA

Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8 Canada

SERVICE CENTER &
DEALER LOCATIONS
Please Visit:

www.eDometic.com

INSTALLATION

A. Position Travel Lock on right side of both main support arms approximately 36" from bottom of arms.

B. Fit each lock to curve of arm so that lock is perpendicular to face of arm and flush with inside rafter arm.

C. Mark location of Travel Lock. Flip lock upward into the unlocked position and mark location of first of the two mounting holes .

Drill one hole at a time to guarantee proper alignment of Travel Lock. Using 3/16" drill bit, drill the first hole. Secure Travel Lock through this first hole with Pop Rivet. Check alignment of Travel Lock then repeat for second hole. Repeat procedure for remaining arm.

NOTE: To replace existing Travel Lock, drill out rivets (or screws). Use holes to reattach with new rivets or reuse screws.

D. Open awning and install Rubber Bumper on main rafter arm. Repeat on other main arm.




OPERATION

To UNLOCK arm:

Rotate upward away from arm until lock is free from arm. Repeat on other side. The awning can now be operated.

To LOCK arm:

Close awning into its travel position. Using one hand, squeeze main support arm and rafter arm together, then with other hand rotate Travel Lock downward to its locked position. Repeat for other main support arm.

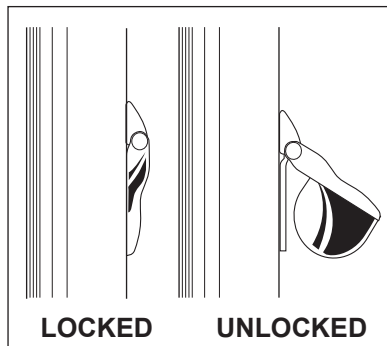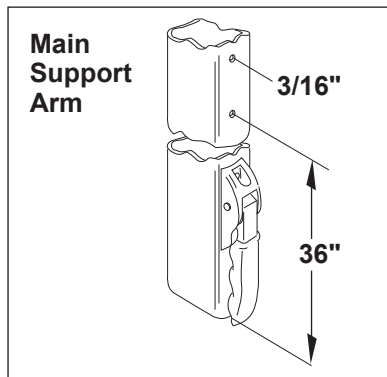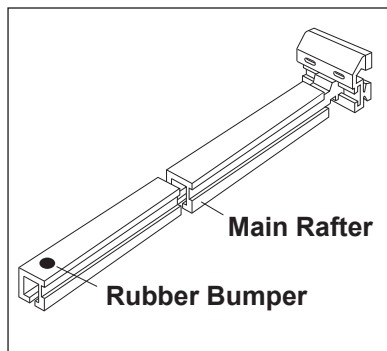

INSTALLATION

A. Position Travel Lock on right side of both main support arms approximately 36" from bottom of arms.

B. Fit each lock to curve of arm so that lock is perpendicular to face of arm and flush with inside rafter arm.

C. Mark location of Travel Lock. Flip lock upward into the unlocked position and mark location of first of the two mounting holes .

Drill one hole at a time to guarantee proper alignment of Travel Lock. Using 3/16" drill bit, drill the first hole. Secure Travel Lock through this first hole with Pop Rivet. Check alignment of Travel Lock then repeat for second hole. Repeat procedure for remaining arm.

NOTE: To replace existing Travel Lock, drill out rivets (or screws). Use holes to reattach with new rivets or reuse screws.

D. Open awning and install Rubber Bumper on main rafter arm. Repeat on other main arm.

OPERATION

To UNLOCK arm:

Rotate upward away from arm until lock is free from arm. Repeat on other side. The awning can now be operated.

To LOCK arm:

Close awning into its travel position. Using one hand, squeeze main support arm and rafter arm together, then with other hand rotate Travel Lock downward to its locked position. Repeat for other main support arm.

