



KIT, SHUT-OFF VALVE WITH PROTECTOR

3108706.023 Kit Includes:

2007709047 Gas Shut-Off Valve

2930811019 Washer Protector

3107952.024 Instructions

WARNING

Before disconnecting any LP gas line, shut off LP gas at supply source. Also cap supply line at refrigerator when disconnected. Failure to follow this instruction could create a fire or explosion causing severe personal injury or death.

WARNING

This kit must be installed by a qualified serviceman who is familiar with LP gas systems and refrigerators. Some states require LP gas service personnel to be certified.

FIG. 1A


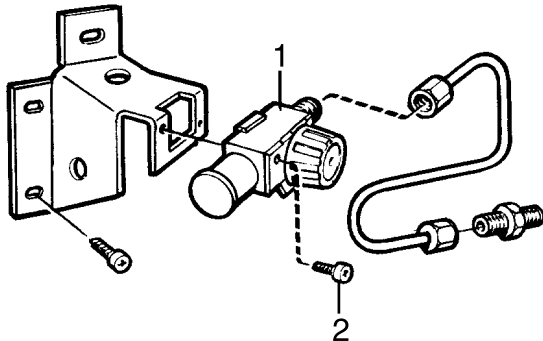


FIG. 1B

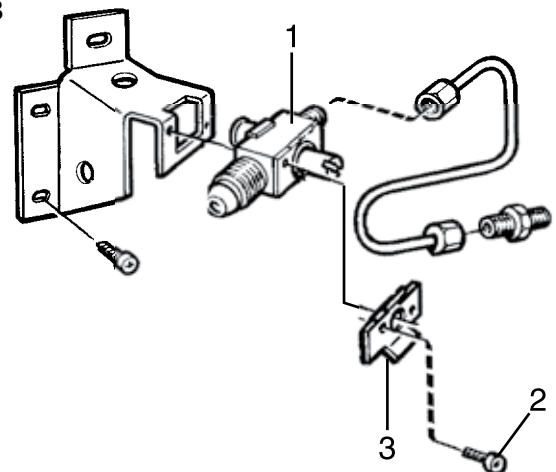

Part number 2007709047 shut-off valve had two different style valves. (See FIG. 1A & 1B)

When replacing the valve with knob (Item 1) as shown in FIG. 1A, a washer protector must be installed for proper valve function. This will prevent the valve shaft from being depressed which could cause the valve to leak.

Remove the two screws (Item 2) that mount the old valve to bracket. (See FIG. 1A) Place the new valve (Item 1) in position with washer protector (Item 3) on front of valve as shown in FIG. 1B. Mount new valve and protector with the two screws removed from old valve.

Check all connections in the LP gas system (at back of refrigerator) for gas leaks. The LP gas supply must be turned on. Apply a non-corrosive bubble solution to all LP connections. The appearance of bubbles indicates a leak and should be repaired immediately by a QUALIFIED SERVICEMAN WHO IS FAMILIAR WITH LP GAS SYSTEMS AND REFRIGERATORS.



WARNING

DO NOT USE A FLAME
TO CHECK FOR GAS LEAKS.

REVISION

Form No. 3107952.024 7/07

(Replaces 3107952.016)

© 2007 Dometic Corporation

LaGrange, IN 46761