



A&E Systems®
by Dometic

FABRIC REPLACEMENT INSTRUCTIONS FOR OASIS AWNING

Models 960(XX)56.(X)(XX) and 961(XX)56.(X)(XX)

TOOLS REQUIRED:

Drill	1/2" Socket & Ratchet
1/8" Drill Bit	Step Ladder
Phillips Screwdriver	1/8" x 3/8" Aluminum Pop Rivet
Pop Rivet Tool	Gray Tape






A. GENERAL INSTRUCTIONS

The fabric on an Oasis Box Awning can be changed with little effort, provided the servicer follows the procedure outlined in these instructions.

Read and understand the instructions before attempting to change the fabric.

B. FABRIC REMOVAL


1. Extend awning 18–20 inches.
2. Wrap gray tape around the rafter elbows to prevent them from extending. See FIG. 1.
3. Remove two plastic rivets from right box cover and separate from right end cap. See FIG. 2.
4. Drill out the 1/8" pop rivet and remove the screws that secure the end cap to the case. Remove end cap from casing. See FIG. 3.
5. Loosen the 1/2" locknut holding the lead rail end cap. Slide end cap off lead rail. See FIG. 4.
6. Remove the two (2) #6 screws that hold the fabric in place on each end of the lead rail. See FIG. 5.

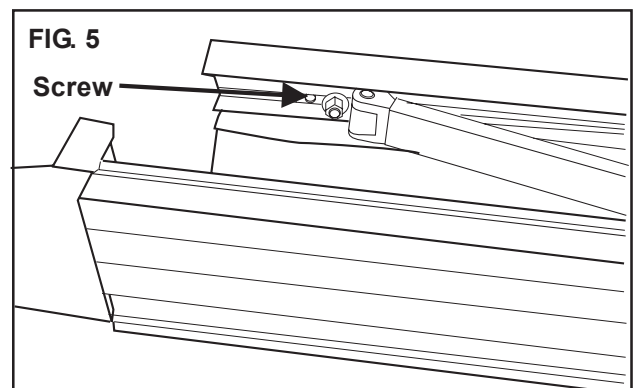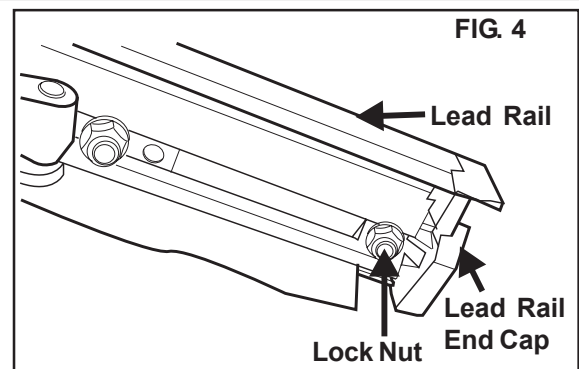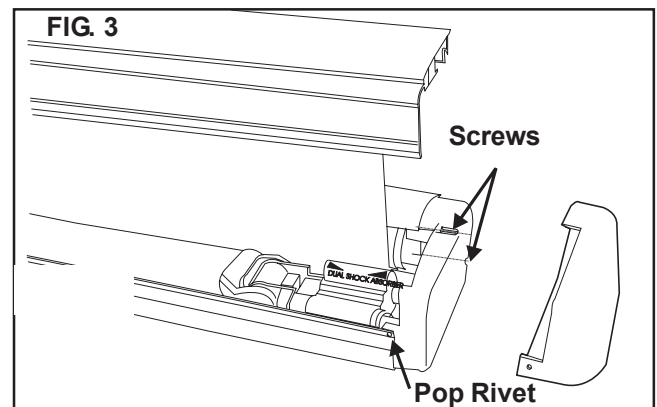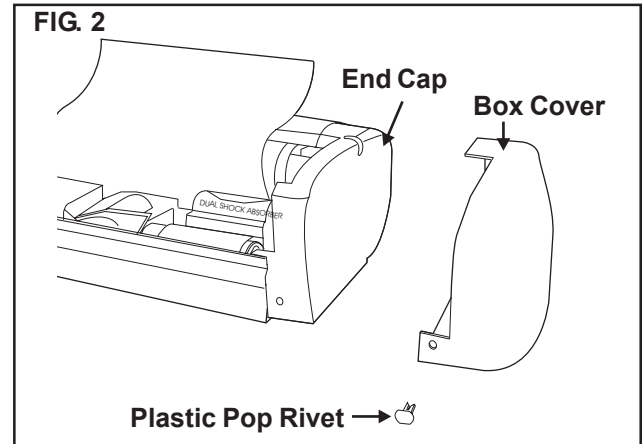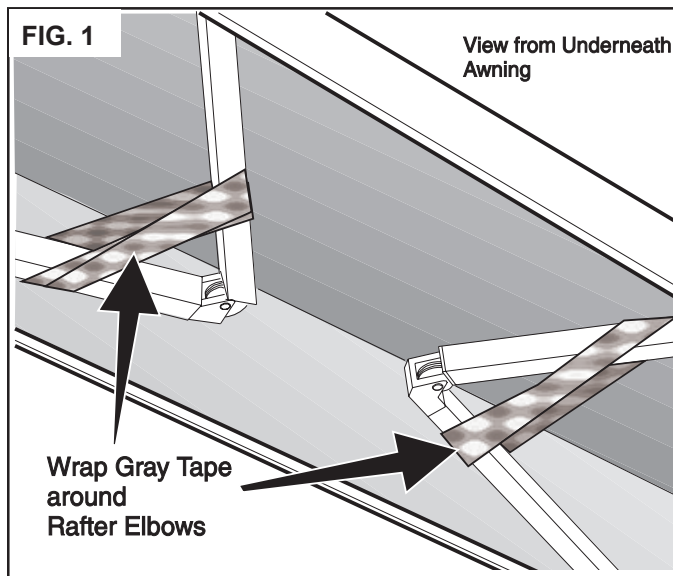

REVISION

Form No. 3109637.003 9/00
(French 3109638.001)
©2000 The Dometic Corporation
LaGrange, IN 46761


- Grasp roller tube with fabric on it and the fabric next to lead rail. Slide the roller tube and fabric out of the casing and lead rail at the same time. See FIG. 6.

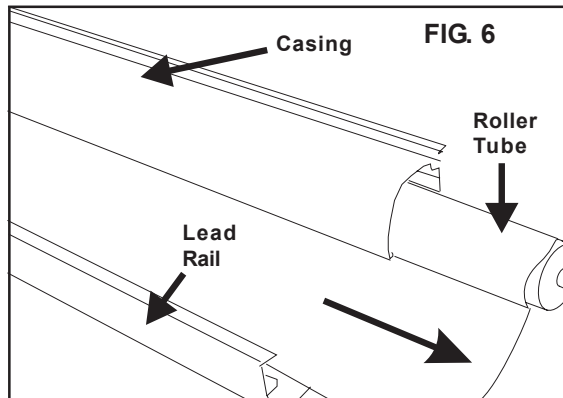


- Unroll the fabric on a clean surface. Slide the roller tube off the fabric.

C. FABRIC REPLACEMENT


- Lay replacement fabric on top of original fabric. This will prevent damage to new fabric. Make sure new fabric is correct size and color, and that the top of the fabric is facing up.
- Slide roller tube on the poly rope so the round shaft will be on the right side when fabric is rolled onto the tube. Center fabric on roller tube and trim poly rope even with the roller tube. Roll fabric onto roller tube with bottom of fabric on outside. Leave 18" to 20" unrolled. Trim poly rope to 3/4" to 1" on unrolled fabric. See FIG. 7.

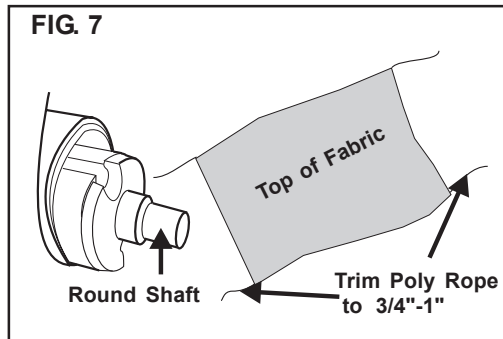


- Slide roller tube into the case and the poly rope into the lead rail at the same time. Two people will make this operation easier. See FIG. 8.

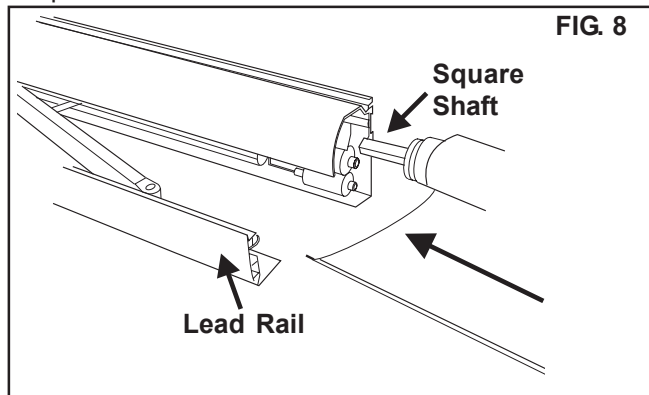


- Slide the square shaft on the roller tube in to the gear housing on left-hand end of case. It may be necessary to turn crank to align gear box and square shaft. See FIG. 9.

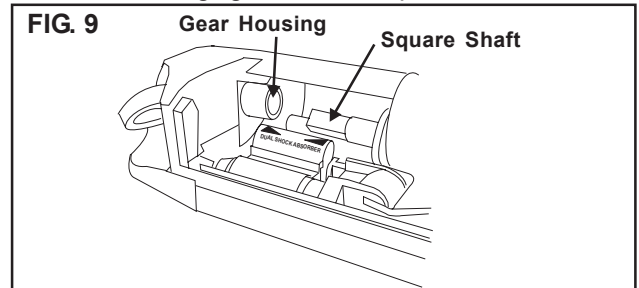


- Replace right end cap. Be sure shaft of roller tube is in its proper place. Replace both screws and 1/8" pop rivet. See FIG. 10.

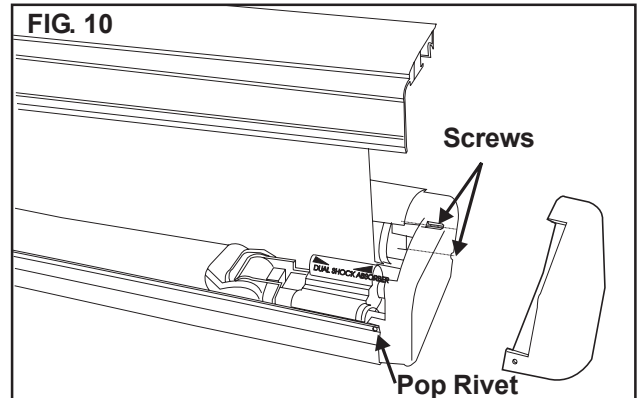

- Center fabric in the lead rail. Replace the two (2) #6 screws used to hold the fabric in place. See FIG. 11.

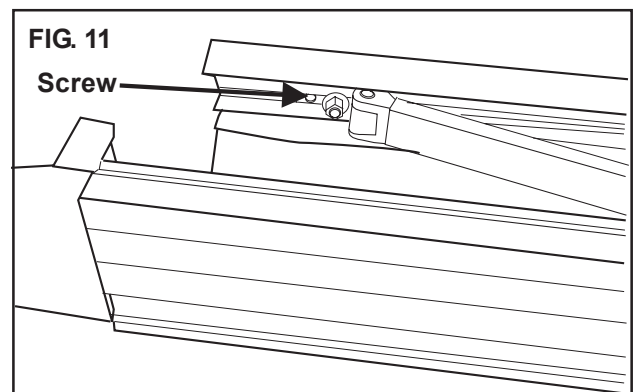

- Slide lead rail end cap into place and tighten 1/2" lock nut. See FIG. 12.

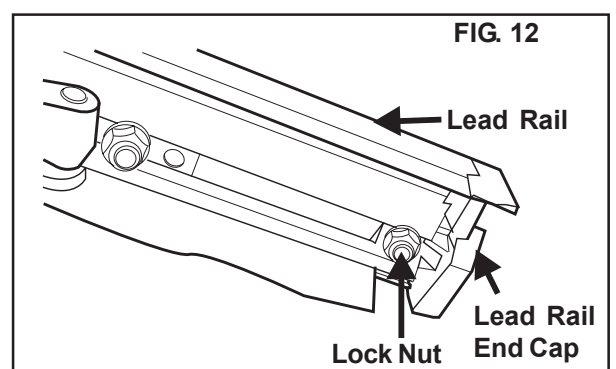

- Replace end cap covers. Crank fabric onto roller tube until the pressure is off the tape. Remove tape and operate awning several times.