

ProShade Assembly

12' , 14' , 16' & 18'

USA

SERVICE OFFICE
Dometic Corporation
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA

Dometic Distribution
866 Langs Drive
Cambridge, Ontario
CANADA N3H 2N7
519-653-4390

For Service Center
Assistance Call:
800-544-4881

 WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

 AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de cet appareil doit être effectuée par un réparateur qualifié. Toute modification de cet appareil peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

INSTALLATION & OPERATING INSTRUCTIONS

Model

3308590.003 - 12'

3308590.052 - 14'

3308590.060 - 16'

3308590.102 - 18'

REVISION

Form No. 3309294.019 12/04
(Replaces 3309294.001)
(French No. 3309308.017)
©2004 Dometic Corporation
LaGrange, IN 46761

Important: These Instructions
must stay with unit.
Owner read carefully.

GENERAL INFORMATION

Important: Read all of the following steps before beginning installation.

Dometic Corporation reserves the right to modify appearances and specifications without notice.


CAUTION

Fabric Damage Alert. If your WeatherPro awning automatically rolls up with the ProShade and tie down straps still in place, as soon as wind conditions permit, open the awning and remove the straps. If the awning is going to be in the closed position for an extended period of time the ProShade should also be removed. Failure to follow these instructions can cause wrinkling and/or unwanted patterns.

CAUTION

Paint Damage Alert. Do not travel with the ProShade rolled up in the awning. If the awning fabric or slats are in contact with the RV side wall, damage to paint on RV side wall could occur.

FIG. 1

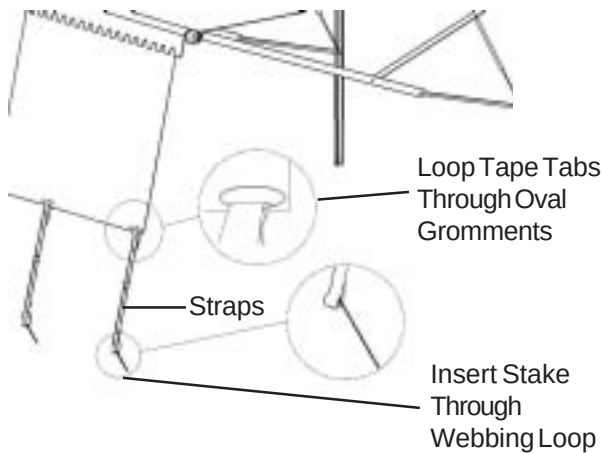

INSTALLATION INSTRUCTIONS

A. ProShade Installation

1. Insert ProShade into open accessory channel on roller tube with loop tape tabs at each corner facing away from side of RV as shown in Fig. 1.
2. Insert hook tape end of strap, face down through oval grommets on bottom hem of shade. Pull enough strap through to mate a few inches of the hook tape with loop on same strap. There is a total of 3 straps--one for each of the 3 grommets on the bottom hem of your ProShade.
3. Pull strap to ground until slightly taut. Insert tent stake through webbing loop at bottom end of strap as shown in Fig. 1.
4. Drive stake into ground at an angle as shown to keep tension on strap. Unfasten and readjust hook tape and loop tape if necessary to keep tension on strap.

Note: Be sure to drive stake into ground at an angle to keep tension on strap.