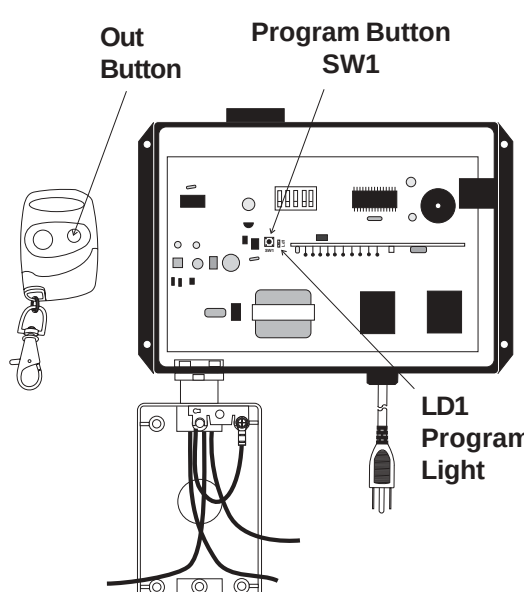


3308992.001 LA-03 FOB Kit
This kit contains:
1-3308858.004 FOB
1-3309461.006 FOB Programming
Instructions

General Instructions

1. These instructions must be read and understood before attempting to program the electronic board.
2. This programming procedure should be done by a Dometic Service Center or a qualified service technician.

	⚠ WARNING SHOCK HAZARD The LA-03 control box requires that 120 volts AC be applied to the circuit board, when it is reprogrammed. Do not insert metal object inside control box. Death, personal injury and damage to electronic board could result. Use only a non-conductive material to depress programming button inside control box.	3308347.008 Control Box Less Cover 
--	--	--

PROCEDURE:

1. Remove four (4) screws from control box cover and lift cover to expose circuit board.
2. Make sure 120 VAC power is **"ON"**.
3. Use a **non conductive rod** to press and release Programming Button (SW1). Programming Indicator Light (LD1) will illuminate.
4. Press and hold Patio Awning FOB **"OUT"** Button for four (4) seconds or until light (LD1) goes off.
5. Release FOB Patio Awning **"OUT"** Button. This completes the programming process.
6. Place control box cover on control box and secure with four (4) screws .
7. Test awning operation.