



RECORD THIS UNIT INFORMATION FOR
FUTURE REFERENCE:
Model Number _____
Serial Number _____
Date Purchased _____

RAMP STAND SERVICE KIT FOR XTEND A-ROOM™ RAMP ROOM

USA
SERVICE OFFICE
Dometic Corporation
2320 Industrial Parkway
Elkhart, IN 46515
574-294-2511

CANADA
Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5LB
CANADA
519-720-9578

**For Service Center
Assistance Call:**
800-544-4881

WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de cet appareil doit être effectuée par un réparateur qualifié. Toute modification de cet appareil peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

INSTALLATION INSTRUCTIONS

Model

3311176.000U

SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating instructions.

UNDERSTAND SIGNAL WORDS

A signal word, **WARNING** OR **CAUTION** is used with the safety-alert symbol. They give the level of risk for potential injury.

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION used without the safety alert symbol indicates, a potentially hazardous situation which, if not avoided, may result in property damage.

Read and follow all safety information and instructions.

GENERAL INSTRUCTIONS


WARNING

These instructions must be read and understood before installation of this kit. Modification of this product can be extremely hazardous and could result in personal injury and/or property damage.

These ramp stands are designed to be used with the XTend A-ROOM™ ramp room.

Important: Read the entire Installation and Operating Instructions carefully before starting the installation.

SPECIFICATIONS

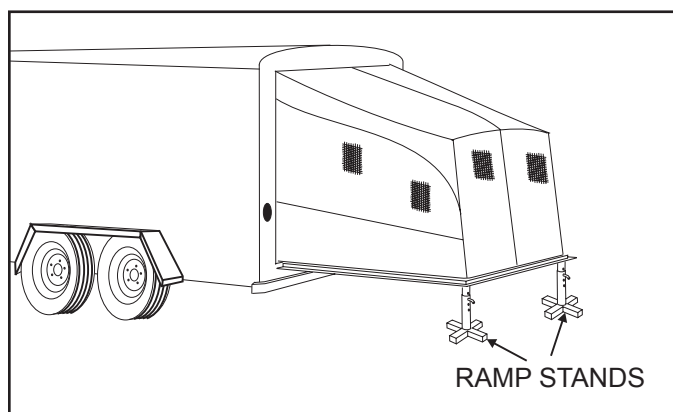

MODEL	954086.000 Min./Max.	954091.000 Min./Max.
*Ramp Stand	16"/28"	16"/28"
Range Capacity	1,200 lbs.	1,200 lbs.
*Ramp stand adjusts with one inch increments.		

INSTALLATION

Park the trailer on flat and level surface for the initial installation. This will insure that the X Tend A-Room™ will be straight and square with the trailer and the weight of ramp and ramp room is distributed between both stands.

A. Ramp Stand Assembly


1. Find the channel with a threaded nylon insert . Place the threaded nylon insert with the notch up.
2. Place the channel with a hole across the channel with the nylon insert on top forming the letter "X". See FIG. 1
3. The stand pole with the stud bolt is screwed into the nylon insert through the channel with the hole. This should be tightened so there is no movement.
4. The top stand pole slides on the bottom assembly and is locked in place with the ball pin. See Fig. 1.

Note: Each ramp stand has a rubber cap on the top plate to prevent scratching of the ramp.

B. Ramp Preparation


1. Place ramp stands at the approximate positions for each corner of the ramp. If tread plate set that came with the complete X-Tend A-Room™ was installed, place ramp stands under ramp at tread plate locations. If terrain is not level, add leveling blocks such as Lynx Levelers® or similar as necessary to even out weight and level ramp on stands.

FIG. 1

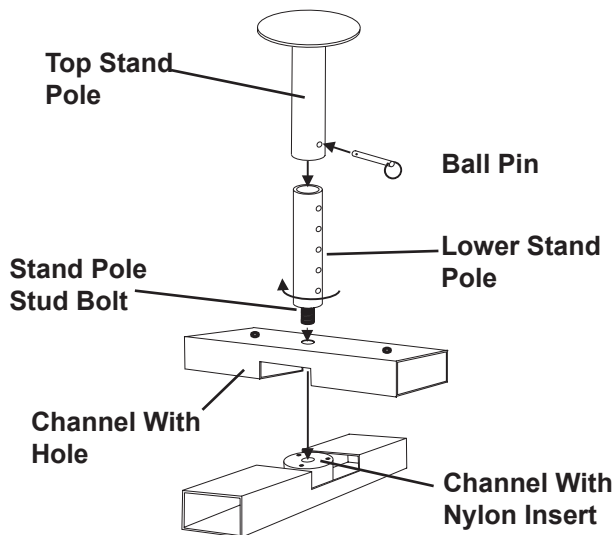

2. Pull the ball pin and raise/lower each ramp stand to the approximate position where the ramp will be approximately level. Align stand extension with the closest hole in the base and replace the stand pin.
3. Move the ramp stands in position under ramp's door frame corners, where ramp is strongest or where tread plate set has been installed. See Fig. 2.

FIG. 2

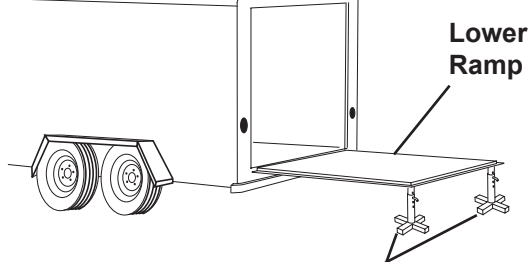

Place Stands Under Door Frame Corners

CAUTION

Failure to place stands under ramp's door frame could cause damage to door's outer surface when ramp is placed under load.

4. Insert the tent stakes through the holes on the channel into the ground to prevent ramp stand from shifting. See FIG. 3

FIG. 3

