



RECORD THIS UNIT INFORMATION FOR
FUTURE REFERENCE:

Model Number _____

Serial Number _____

Date Purchased _____

Video Screen Assembly 7' X 7'

USA

SERVICE OFFICE
Dometic, LLC
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA

Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

For Service Center
Assistance Call:
800-544-4881

WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de cet appareil doit être effectuée par un réparateur qualifié. Toute modification de cet appareil peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

INSTALLATION & OPERATING INSTRUCTIONS

Model
3312063CQ.000 - 7'

REVISION:

Form No. 3312065.018 2/09
(Replaces 3312065.000)
©2009 Dometic, LLC
LaGrange, IN 46761

Important: These Instructions must
stay with unit. Owner read carefully.

SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating instructions.

UNDERSTAND SIGNAL WORDS

A signal word, **WARNING** OR **CAUTION** is used with the safety-alert symbol. They give the level of risk for potential injury.

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION used without the safety alert symbol indicates, a potentially hazardous situation which, if not avoided, may result in property damage.

Read and follow all safety information and instructions.

GENERAL INFORMATION


Important: Read all of the following steps before beginning installation.

Dometic, LLC reserves the right to modify appearances and Specifications without notice.


INSTALLATION INSTRUCTIONS

A. Video Screen Installation

1. Insert Video Screen into open accessory channel on roller tube as shown in Fig. 1

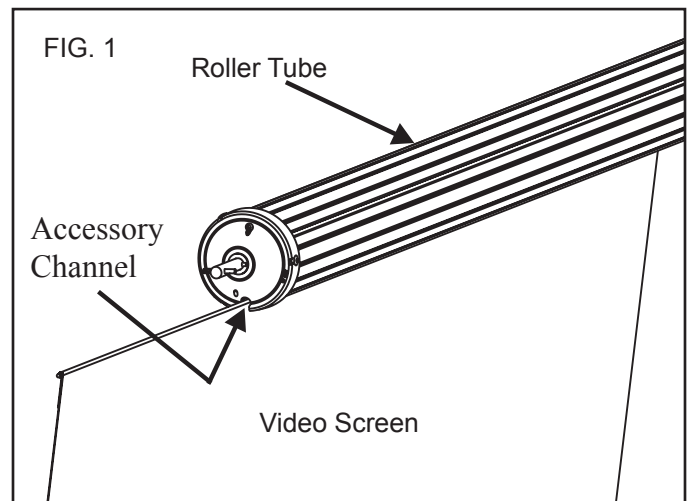

2. Insert stainless steel rod, provided by your RV dealer, through bottom pocket of screen to weigh the fabric assembly down. See FIG. 2

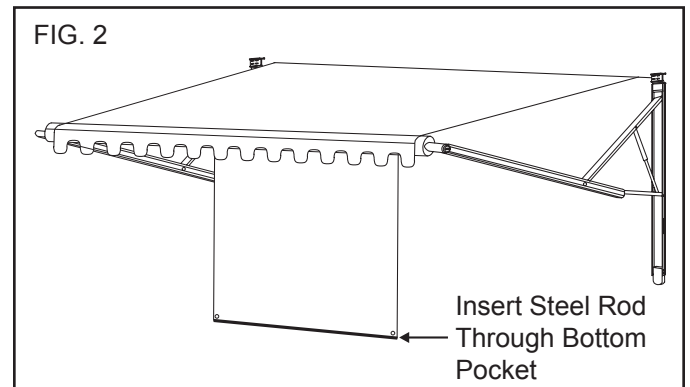

CAUTION

Fabric Damage Alert. If the awning is going to be in the closed position for an extended period of time, the Video Screen should be removed. Failure to follow these instructions can cause wrinkling and/or unwanted patterns on fabric.

CAUTION

Paint Damage Alert. Do not travel with the Video Screen rolled up in the awning. If the awning fabric or slats are in contact with the RV side wall, damage to paint on RV side wall could occur.

STORAGE INSTRUCTIONS

A. Video Screen Removal

1. Remove steel rod from bottom pocket on Video Screen assembly.
2. Slide Video Screen assembly out from accessory channel on roller tube and roll fabric along poly-rope to store. Be sure fabric is dry before storing.
3. Store fabric assembly in dry place.