



When ordering parts, always state:
MODEL NO. - PRODUCT NO. - QUANTITY -
PART NUMBER - DESCRIPTION
For Electric Details also state:
VOLTAGE - WATTAGE

MICROWAVE OVEN

USA
SERVICE OFFICE
Dometic, LLC
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA
Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

 
For Service Center
Assistance Call:
800-544-4881

MODELS:
DOTRM15B
DOTRM15SS

PARTS LIST

**MODEL
DOTRM15
Series**


UPPER OVEN CAVITY PARTS

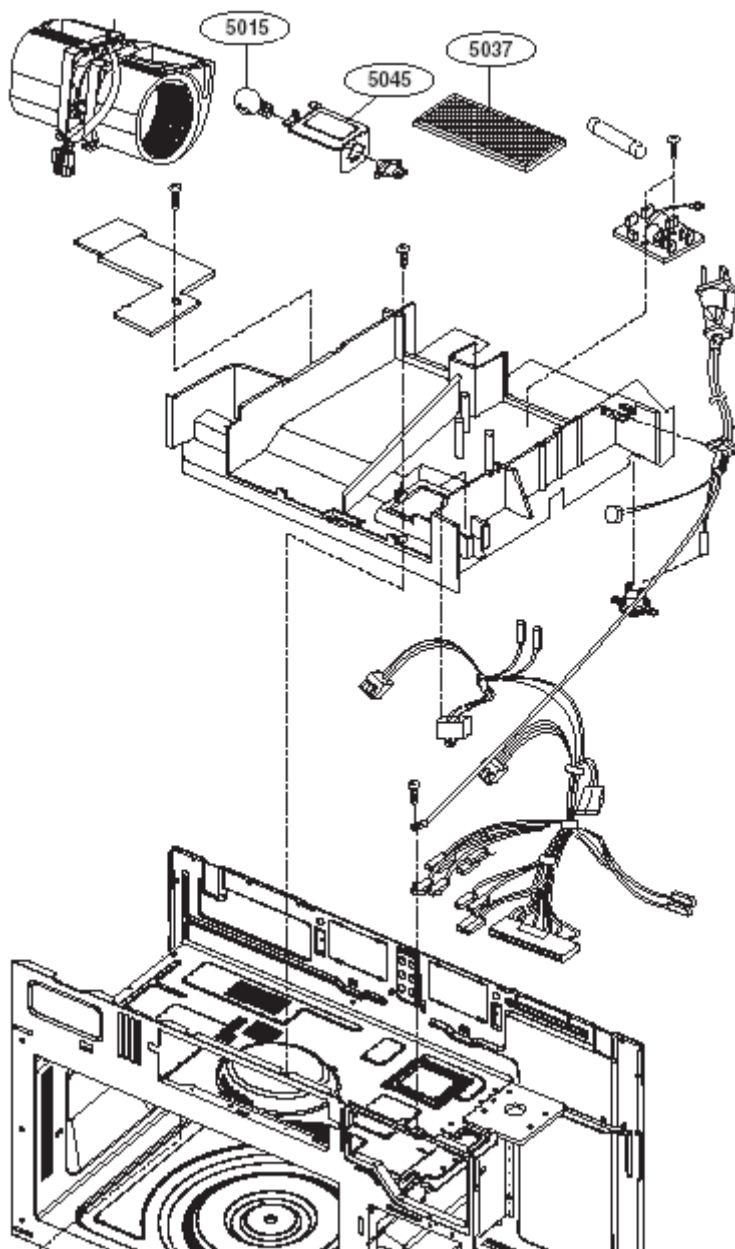

Only Those Parts Identified With An Index Number Are Available For Service Replacement.

Index No.	Part Number	Description
5015	6912W1Z004A	Light bulb (cavity)
5037	5230W1A011B	Charcoal filter
5045	3550W1A189A	Light bulb cover (cavity)

 
LOWER OVEN CAVITY PARTS

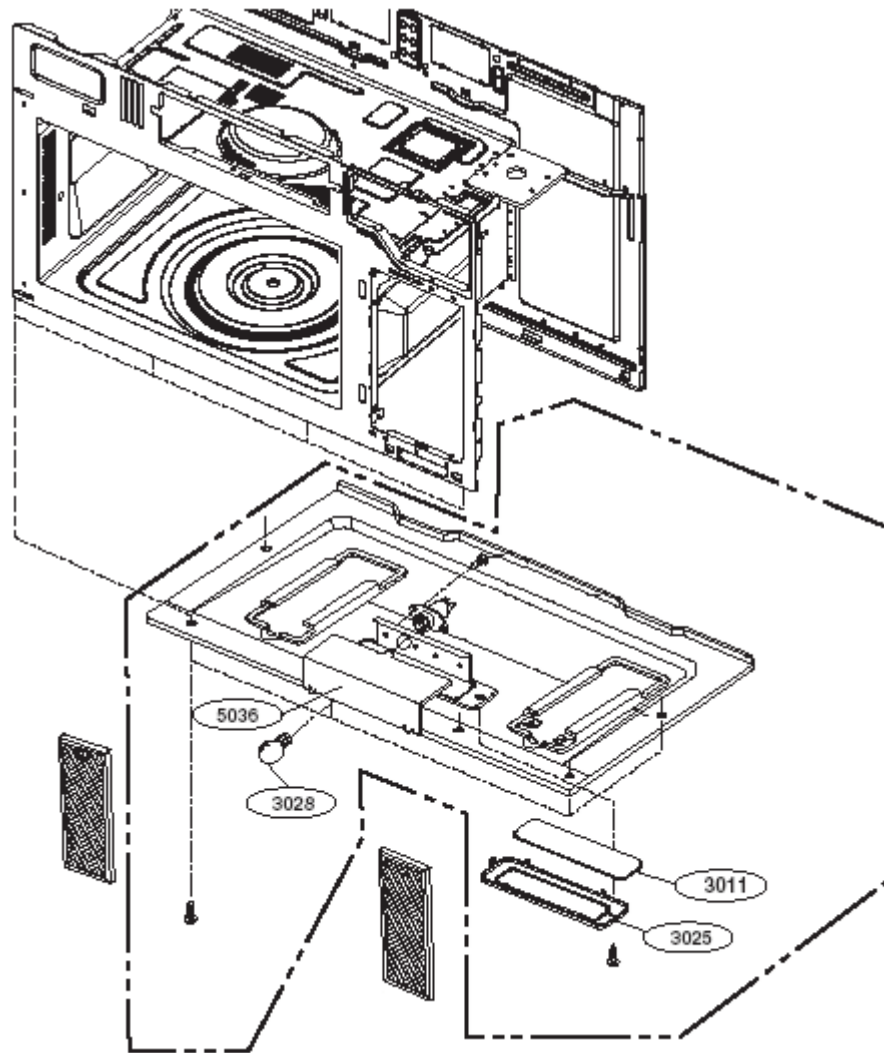

Only Those Parts Identified With An Index Number Are Available For Service Replacement.

Index No.	Part Number	Description
3011	4890W1A045A	Window, glass
3025	4810W1A150C	Window bracket
3028	6912W1Z004B	Light bulb (cook top)
5036	3550W3A095C	Light bulb cover (cook top)

 MISCELLANEOUS PARTS

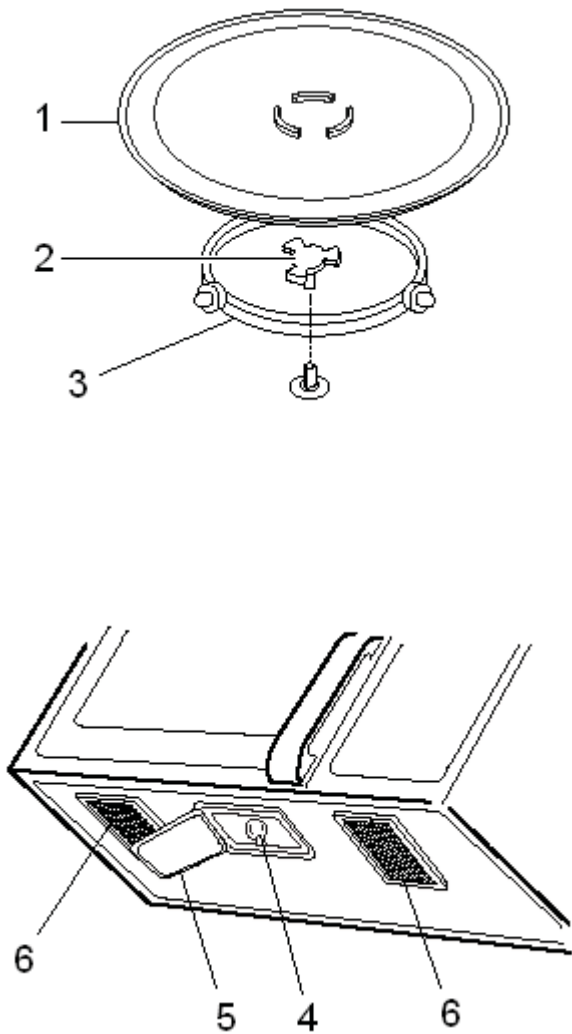

Only Those Parts Identified With An Index Number Are Available For Service Replacement.

Index No.	Part Number	Description
1	1B71961H	Turntable
2	4370W1A006B	Turntable sprocket
3	5889W2A012F	Turntable ring
4	6912W1Z004B	Light bulb (cook top)
5	4810W1A150C	Window bracket
6	5230W1A012B	Grease filter