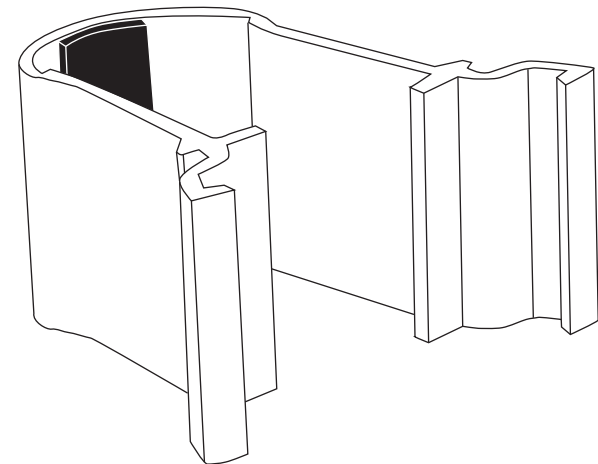


Travel Lock Service Kit

Service Instructions

**⚠ WARNING**

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

IMPORTANT: These instructions must stay with the unit. Owner read carefully.

Dometic Corporation
1120 North Main Street
Elkhart, IN 46514 USA

Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8 Canada

**SERVICE CENTER &
DEALER LOCATIONS**
Please Visit:

www.eDometic.com

SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating instructions.

UNDERSTAND SIGNAL WORDS

A signal word , WARNING OR CAUTION is used with the safety-alert symbol. They give the level of risk for potential injury.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



When used without the safety alert symbol indicates, a potentially hazardous situation which, if not avoided, may result in property damage.

Read and follow all safety information and instructions.

GENERAL INSTRUCTIONS



These instructions must be read and understood before installation of this kit. This kit must be installed by a Dometic Service Center or a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

IMPORTANT: The travel lock must be installed at the correct distance from the edge of the main rafter (DIM “A”) for optimum effectiveness. Dometic cannot assume responsibility for failures caused by incorrect installation of this travel lock kit.

Rafter Length (DIM “L”)	DESCRIPTION	Travel Lock Location (DIM “A”)
66.00"	STANDARD	20.75"
48.00"	RAINSLED	2.75"
34.65"	RAINSLED, SHORT	2.75"
66.00"	X-TALL & XX-TALL, STANDARD	20.75"
66.00"	X-TALL & XX-TALL, RAINSHED	20.75"
42.65"	SUNCHASER II TC	19.50"
38.00"	X-SHORT	12.75"

INSTALLATION

- A. Identify the Main Rafter extrusion in the rafter assembly to be serviced. The Main Rafter extrusion is attached at the top end to the Top Bracket, which in turn is attached to the coach wall. See Figure 1 (NOTE: other components, such as the Knob and Secondary Rafter, have been omitted from the figure for clarity.)
- B. Measure the total length of the Main Rafter extrusion and find its description in the table below. Find the corresponding value for DIM “A”.
- C. Mark the location of the Travel Lock (DIM “A”) on the Main Rafter extrusion with a light pencil mark.
- D. Note that the Travel Lock and Main Rafter extrusion have design features that must snap together. See Figure 2.
- E. Carefully peel off the backing of the tape on the inside of the Travel Lock and snap onto the Main Rafter extrusion using the pencil mark as a guide.
- F. Apply firm pressure to the curved surface of the Travel Lock to ensure good contact between the tape and the Main Rafter extrusion.

