



RECORD THIS INFORMATION FOR FUTURE
REFERENCE:


Model Number _____
Serial Number _____
Date Purchased _____
Retailer / Qualified Installer _____

USA
SERVICE OFFICE
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

CANADA
Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA

**SERVICE CENTER &
DEALER LOCATIONS**
Please Visit:
www.eDometic.com

3314015.000 REMOTE KIT

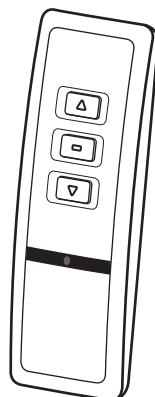

SERVICE INSTRUCTIONS

3314015.000
REMOTE KIT

REVISION A
Form No. 3313851.000 12/06
(French 3314016.000_A)
©2016 Dometic Corporation
LaGrange, IN 46761

**Important: These Instructions must
stay with unit. Owner read carefully.**

GENERAL INSTRUCTIONS

These instructions apply to:

202(XX)(XX).000(#) 9500E Cassette Awnings
203(XX)(XX).000(#) DA20E Cassette Awnings

This kit consists of:

- (1) Service Instructions
- (1) Awning Remote

Dometic Corporation reserves the right to modify appearances and specifications without notice.


PROCEDURE

A. Install Remote Holster

NOTICE

Do not expose remote and remote holster to weather, extreme temperatures, or long hours in direct sunlight. Failure to obey this notice could result in property damage.

1. Locate a suitable location for remote holster that's protected from weather and other adverse conditions, and install with two screws. See FIG. 1.

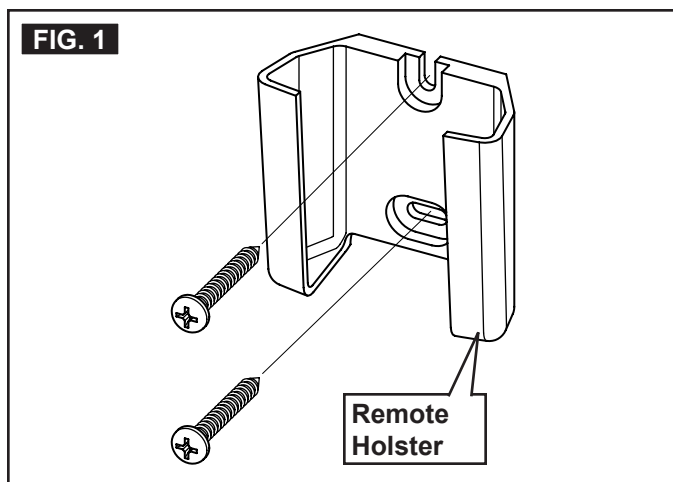

B. Program Remote

This replacement remote will need to be programmed to the awning motor to function. Any controls (remote, wind sensor, solar sensor, etc.) currently programmed to motor will be cleared from motor memory.

Note: To program additional remote controls, follow the instructions that came with the accessory kit. Up to five controls (remote, wind sensor, solar sensor, etc.) may be added to operate the awning if desired.

Refer to the operating instructions that came with your awning for troubleshooting.

1. Make sure power is supplied to awning motor.
2. Turn off and on power supply to awning motor twice.
 - a. Turn OFF and wait (10) seconds.
 - b. Turn ON and wait (10) seconds.
 - c. Turn OFF and wait (10) seconds.
 - d. Turn ON and proceed to step "3".
3. Press and hold the program button on back of awning remote. See FIG. 2.

While holding the program button, the awning motor should go through a jog cycle twice.

- a. Waits (10) seconds, then jogs momentarily.
- b. Waits another (10) seconds, then jogs momentarily again.

Note: If awning motor does not respond to remote, verify LED lights momentarily (on remote) when a button is pressed. If LED does not light, install new batteries. See FIG. 3.

FIG. 2


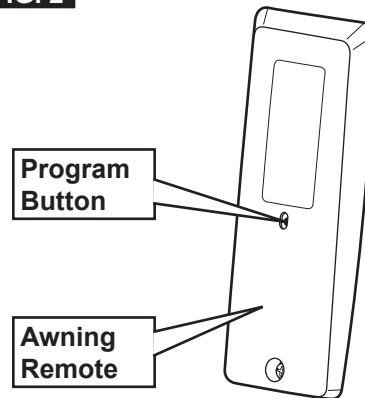


FIG. 3

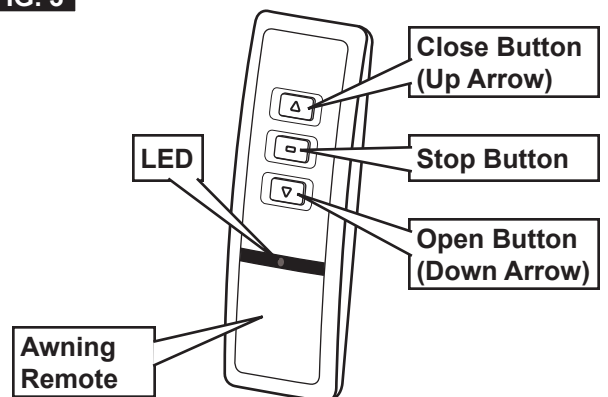

4. If jog cycle is not successful, restart from step "2".
5. If jog cycle is successful, release program button and proceed to next step.


Note: The remote will now be activated, and any prior controls (remote, wind sensor, solar sensor, etc.) will be cleared from motor memory.

6. Press and hold the close (up) and open (down) buttons simultaneously until awning motor jogs. See FIG. 3.
7. Press the close (up) or open (down) button briefly to verify awnings motor direction. See FIG. 3.
 - a. If awning travels in the wrong direction, press and hold the stop button for approximately (3) seconds. Awning motor should jog momentarily.
 - b. Press the close (up) or open (down) button briefly again to verify direction has been corrected.

Note: Do not attempt other programming until the awning motor direction is correct. Otherwise, a full reset will be required again (restarting from step "2").

8. Press and hold the close button (up arrow) until awning is fully closed. See FIG. 3.
9. Press and hold the open button (down arrow) until lead rail is in correct out limit position, and awning fabric is taut. See FIG. 3 and 4.


Note: You may adjust position up or down using remote, to ensure there is no sag in awning fabric. See FIG. 5. Remote will stop awning motor if button is held longer than (10) seconds. If this happens, release button and press again until desired position is reached.

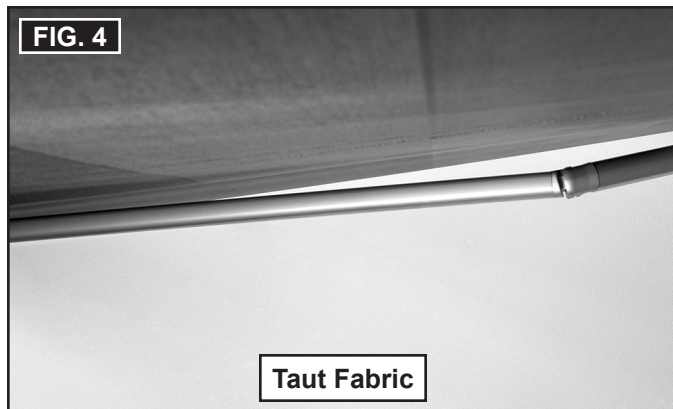

10. Press and hold the close (up) and stop buttons simultaneously until awning motor begins to run. See FIG. 3.
11. Press the stop button to stop the awning motor's travel. See FIG. 3.
12. With the awning motor stopped, press and hold the stop button until awning motor jogs. This programs the awning out limit set in step "10". See FIG. 3.
13. Press the program button on back of awning remote. Awning motor should jog momentarily. See FIG. 2.

Note: The awning motor and remote should now be in "user mode". The close (up) or open (down) buttons on remote, no longer need to be held to move awning to closed or out limits.

14. Verify awning motor and remote functionality.
 - a. Press the open button (down arrow) briefly on awning remote. Awning should extend to out limit. See FIG. 3.
15. Place remote into remote holster when not in use. See FIG. 6.

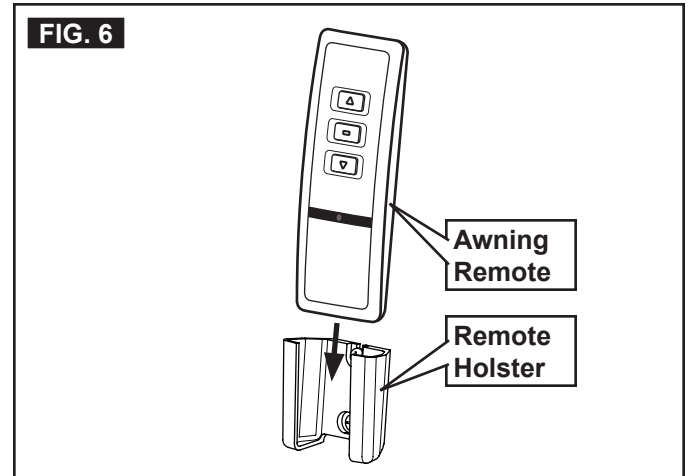

C. Operate Remote

1. See "Procedure" in awning Operating Instructions for specific operating information.