



RECORD THIS INFORMATION FOR FUTURE
REFERENCE:

Date Installed _____

Installed By _____

Product Serial Number _____

USA

SERVICE OFFICE
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

CANADA

Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA

SERVICE CENTER & DEALER LOCATIONS

Visit:
www.eDometic.com

3313470.083 KIT, SVC AIR BAFFLE

SERVICE INSTRUCTIONS

**KIT, SVC AIR BAFFLE
3313470.083**

REVISION A

Form No. 3314600.000 02/17

(French 3314621.000_A)

©2017 Dometic Corporation
LaGrange, IN 46761



Read these instructions carefully. These
instructions **MUST** stay with this product.

INTRODUCTION

These instructions apply to Dometic model RM1350 refrigerator only. Use the following procedure to ensure a properly installed, and properly functioning unit.

Dometic Corporation reserves the right to modify appearances and specifications without notice.

TABLE OF CONTENTS

INTRODUCTION	2
DOCUMENT SYMBOLS	2
IMPORTANT SAFETY INSTRUCTIONS.....	3
A. Recognize Safety Information	3
B. Understand Signal Words.....	3
C. Supplemental Directives.....	3
D. General Safety Messages	3
GENERAL INFORMATION.....	3
A. Scope Of Delivery.....	3
PROCEDURE.....	4
A. Installation Preparation.....	4
B. Air Baffle Installation.....	4
C. Reinstall Refrigerator.....	5

DOCUMENT SYMBOLS



Indicates additional information that is not related to physical injury.



Indicates step-by-step instructions.

IMPORTANT SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

A. Recognize Safety Information



This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

B. Understand Signal Words

A signal word will identify safety messages and property damage messages, and will indicate the degree or level of hazard seriousness.



WARNING **WARNING!** indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION **CAUTION!** indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE. is used to address practices not related to physical injury.

C. Supplemental Directives



Read and follow all safety information and instructions to avoid possible injury or death.

Read and understand these instructions before servicing this product.

Incorrect servicing can lead to serious injury. Follow all service instructions.

D. General Safety Messages



WARNING **FAILURE** to obey the following warnings could result in death or serious injury.

- This product **MUST** be serviced by a Dometic Corporation Service Center or a qualified service technician.
- Do **NOT** modify this product beyond the scope of these service instructions. Modification (beyond these service instructions) can be extremely hazardous.



CAUTION **FAILURE** to obey the following cautions could result in injury.

- **CUT HAZARD.** Wear protective gloves while handling or working near sheet metal components. Sheet metal parts could have sharp edges.

GENERAL INFORMATION

A. Scope Of Delivery


- (1) Service Instructions
- (1) Air Baffle

PROCEDURE

A. Installation Preparation

 The air baffle is installed through the upper side vent. To do this you will need to slide the refrigerator forward approximately 6 inches.


-  1. Turn refrigerator off at the control panel. Refer to RM1350 Operating Instructions.
2. **WARNING! ELECTRICAL SHOCK HAZARD.** Disconnect 120 Vac power from RV. Failure to obey this warning could result in death or serious injury.
3. **NOTICE.** Disconnect the positive (+) 12 Vdc terminal from supply battery. Otherwise, damage to unit could occur.
4. **WARNING! FIRE OR EXPLOSION HAZARD.** Turn off LP gas at supply tank. Failure to obey this warning could result in death or serious injury.
5. **CAUTION! BURN HAZARD.** Allow cooling unit piping to cool before touching. Failure to obey this caution could result in injury.
6. Remove lower vent.
7. Disconnect 120 Vac power cord from receptacle at rear of refrigerator.
8. Disconnect 12 Vdc power supply at rear of refrigerator. Tape or cap ends of wiring.
9. **NOTICE.** Use back up wrench to avoid damaging equipment. See (FIG. 1).
Disconnect and cap LP gas line at rear of refrigerator.

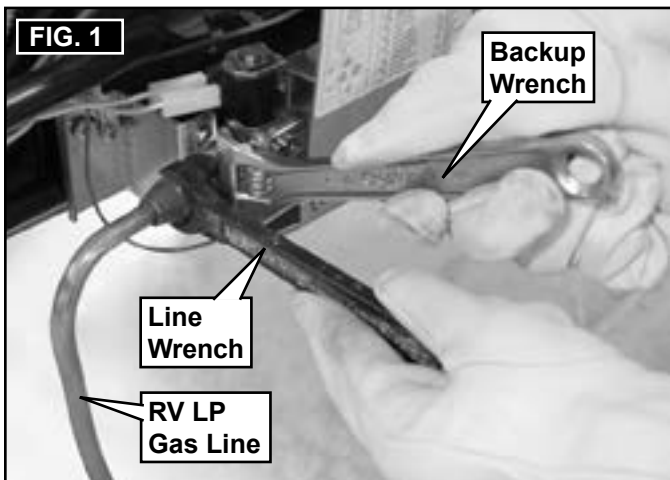


10. Remove installation screws and slide refrigerator out of alcove approximately 6 inches.
11. Remove upper vent.

B. Air Baffle Installation

-  1. Grasp air baffle as shown and insert into upper vent. See (FIG. 2).

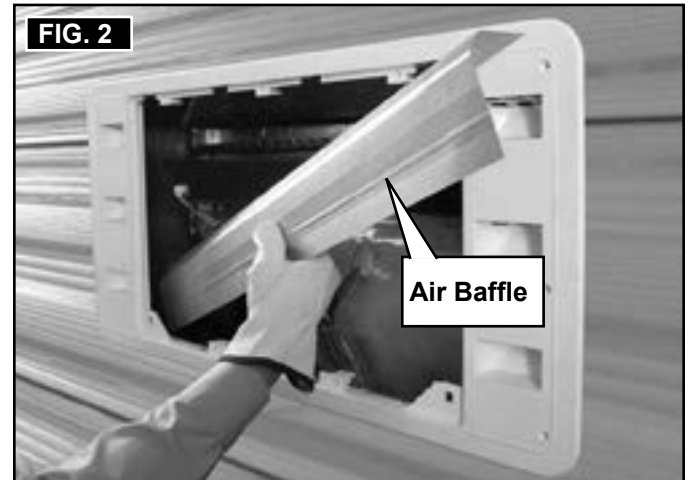


2. Slide air baffle behind cooling unit frame. See (FIG. 3) & (FIG. 4). Refrigerator shown not installed for demonstration purposes.

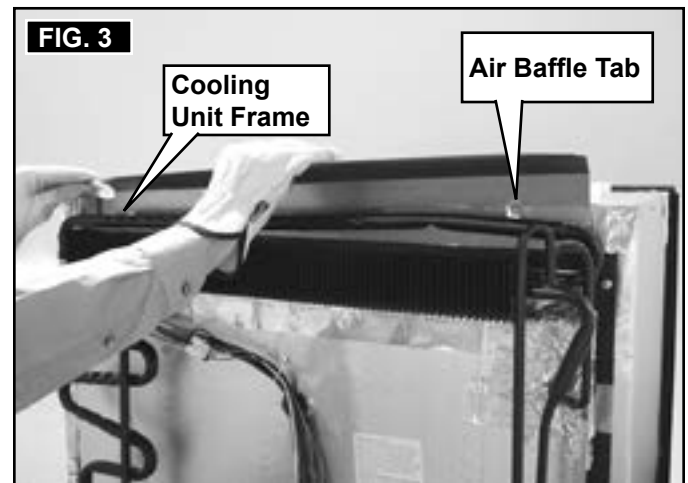

PROCEDURE

3. When in correct position the air baffle tabs should rest on top of the cooling unit fins. See (FIG. 5).

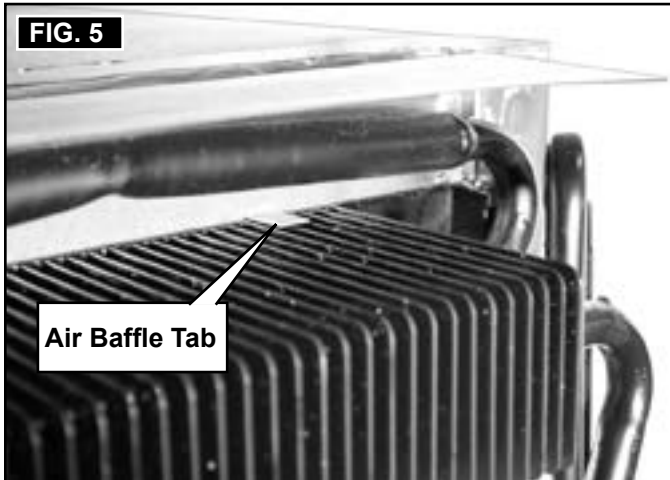

C. Reinstall Refrigerator

1. Return refrigerator to original position and install installation screws.
2. Reconnect the 120 Vac power cord.
3. Reconnect the 12 Vdc power supply.
4. **NOTICE.** Use backup wrench technique to avoid damaging equipment. See (FIG. 1).

Reconnect the LP gas line.

5. Turn on LP gas supply.
6. **WARNING! FIRE OR EXPLOSION HAZARD.** Never use an open flame to check for gas leaks. Failure to obey this warning could result in death or serious injury.

Check LP gas line and all fittings for leaks using an approved solution. The appearance of bubbles indicates a leak and should be repaired immediately.

7. Reinstall lower and upper vent.
8. Restore 120 Vac and 12 Vdc power.



This completes the air baffle installation.