



RECORD THIS INFORMATION FOR FUTURE
REFERENCE:


Model Number _____
Serial Number _____
Date Purchased _____
Retailer / Qualified Installer _____

USA
SERVICE OFFICE
Dometic, LLC
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA
Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

**For Service Center
Assistance Call:**
800-544-4881

**3313981.000
REMOTE KIT**

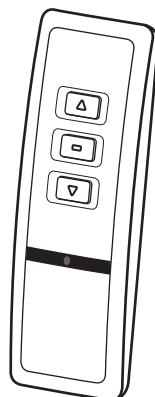

INSTALLATION & OPERATING INSTRUCTIONS

**3313981.000
REMOTE KIT**

3314040.000

Form No. 3314040.000 02/11
(French 3314041.000)
©2011 Dometic, LLC
LaGrange, IN 46761

**Important: These Instructions must
stay with unit. Owner read carefully.**

GENERAL INSTRUCTIONS

These instructions apply to:

202(XX)(XX).000(#) 9500E Cassette Awnings
203(XX)(XX).000(#) DA20(XX) Cassette Awnings

This kit consists of:

- (1) Installation & Operating Instructions
- (1) Awning Remote

Dometic, LLC reserves the right to modify appearances and specifications without notice.


PROCEDURE

A. Install Remote Holster

NOTICE

Do not expose remote and remote holster to weather, extreme temperatures, or long hours in direct sunlight. Failure to obey this notice could result in property damage.

1. Locate a suitable location for remote holster that's protected from weather and other adverse conditions, and install with two screws. See FIG. 1.

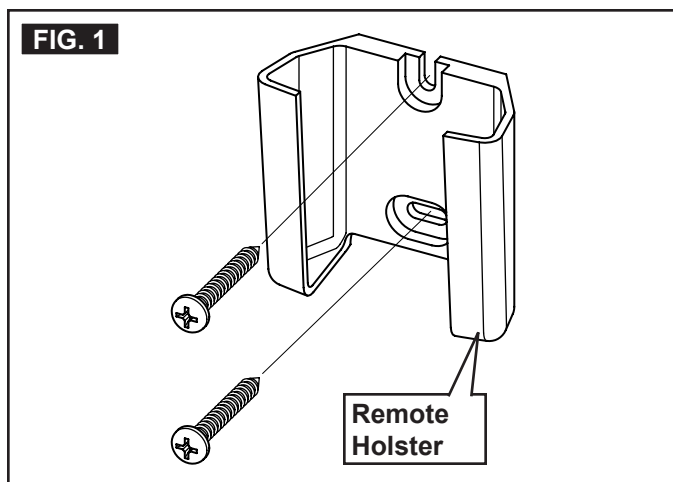

B. Activate Additional Remote


Up to five controls (remote, wind sensor, solar sensor, etc.) may be added to operate the awning if desired.

Note: Refer to the operating instructions that came with your awning if this remote is a replacement, and no other remote is programmed to the awning.

1. Make sure power is supplied to awning motor.


Note: There should already be at least one remote programmed to the awning motor at this stage.

2. Using a remote that already controls the awning motor, press and hold the program button on back for approximately (3) seconds. Awning motor should jog momentarily. See FIG. 2.

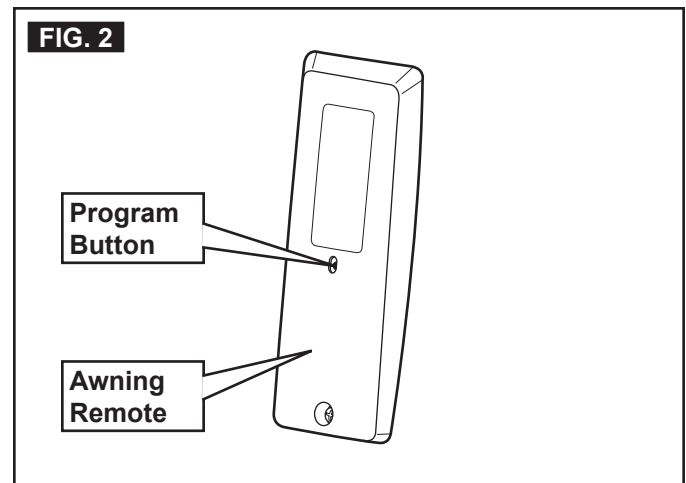


3. Using the remote you want to add, press and hold the program button on back for approximately (3) seconds. Awning motor should jog momentarily. See FIG. 2.
4. Verify awning motor and remote functionality.
 - a. Press the open button (down arrow) briefly on awning remote. Awning should extend to out limit. See FIG. 3.

Note: If awning does not respond to remote, verify LED lights momentarily (on remote) when button is pressed. If LED does not light, install new batteries.

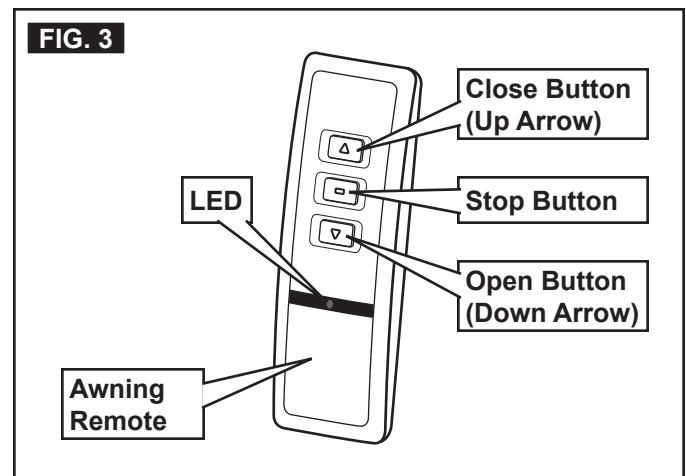

5. Place remote into remote holster when not in use.
See FIG. 4.

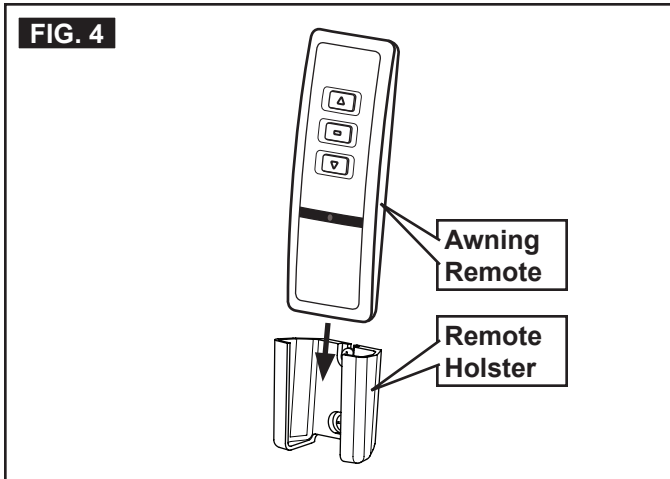

C. Operate Remote

1. See "Procedure" in awning Operating Instructions for specific operating information.