

DOMETIC

REFRIGERATION

REFRIGERATOR

EN

Absorption Refrigerators Door Latch Strike Service Kit Installation

USA & Canada

Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

Service Center & Dealer Locations

Visit:
www.dometic.com

Please read these instructions carefully.

Contents of Service Kit

Two (2) Door Latch Strikes

Two (2) Screws

Two (2) Foam Seal Strips

We have been able to identify a visual cosmetic defect that has occurred on our Dometic DM2652 refrigerators up in the freezer compartment. This does **NOT** occur on all units but may be present on units with serial numbers starting with MB between 805xxxxx and 820xxxxx.

This visual cosmetic defect in no way affects the performance, operation, safety, or function of the refrigerator. This visual cosmetic defect does **NOT** represent a non-compliance issue to one or more of the FMVSS standards or result in a risk of personal injury, death, vehicle crash, or property damage.


The visual cosmetic defect is that extra door latch strike openings have been punched in the refrigerator frame, and during the assembly process the extra door latch strikes were not installed (please see the illustrations below.) The foam sealing strip, required by ANSI/NFPA 1192 and ANSI Z21.19, is provided to seal the refrigerator against the cabinetry when it is installed into the RV. Although the omission of the door latch strikes leaves small cosmetic openings that can be seen visually, the foam sealing strip located behind the door latch strike openings at the freezer provides a seal to maintain complete separation of the combustion system from the interior atmosphere of the recreational vehicle, as stated in ANSI/NFPA 1192.

1 DE-INSTALLING THE REFRIGERATOR (WHEN APPLICABLE)

⚠ WARNING EXPLOSION HAZARD: Follow electric and gas supply disconnection procedures, according to NFPA/National Gas and Electric Code standards. Failure to do so could result in death or serious injury.

- Disconnect the electrical power and the gas supply connections before sliding out the refrigerator.
- Disconnect all potential ignition sources.
- Remove the screws attaching the refrigerator to the enclosure.
- Slide the refrigerator out from the enclosure to expose the door latch strike openings on the sides of the refrigerator.

2 INSTALLING THE NEW DOOR LATCH STRIKES AND THE ADDITIONAL FOAM SEALS

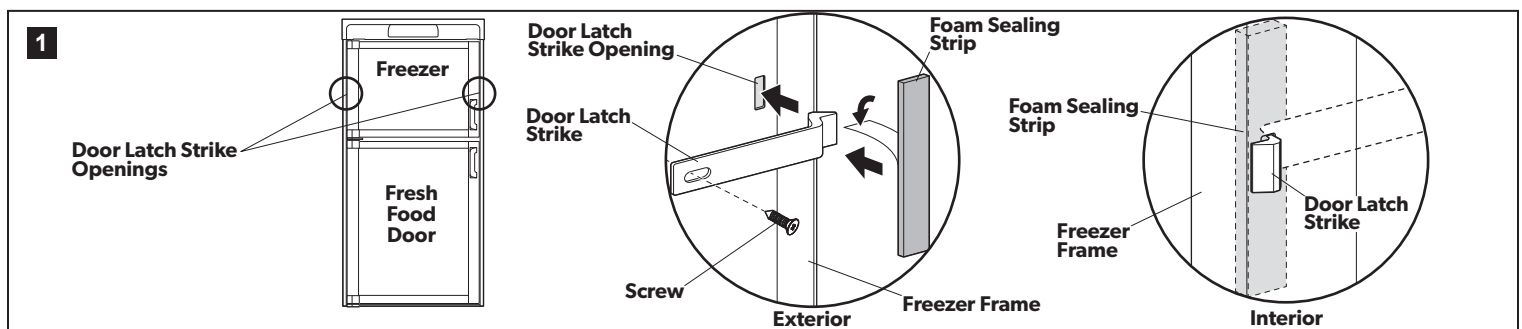

- Attach the door latch strikes into the openings on each side of the freezer section at the locations shown, using the provided screws. The door latch strike is installed from the inside of the freezer door opening by inserting the slotted end into the door latch strike opening in the metal frame.
- Peel the protective liner from the foam sealing strips and position the strips over the door latch strike openings, covering them completely.

i Re-installation of the refrigerator is the reverse of "1 De-installing the Refrigerator (when applicable)".