



POWER AND CONTROLS CONTROL

EN Dometic Interact 3.5 in. (89 mm) Touch-screen Display Panel Replacement Service Kit Instructions

USA & CANADA
Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

**Service Center & Dealer
Locations**
Visit: www.dometic.com

Kit Contents	Description
3317224.000	Touch-screen Display Panel (4)
3317583.000	Service Kit Instructions

1 Explanation of Symbols and Safety Instructions

This manual has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.

1.1 Recognize Safety Information

⚠ This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

1.2 Understand Signal Words

A signal word will identify safety messages and property damage messages, and it will indicate the degree or level of hazard seriousness.

NOTICE: Used to address practices **not** related to physical injury.

2 Preparation

This section describes the preparation procedure for replacing all four Dometic Interact touch-screen display panels ("displays").


i The images used in this document are for reference purposes only.

Before beginning with installation or removal, confirm the contents of the service kit are present.

2.1 Preparing to Remove the Displays

i Refer to the installation manual for specific details on using the display.

1. Identify the location of the existing four displays.
2. Unwrap the new displays and place face down on a soft surface in a nearby, protected location.
3. Disconnect the RV from the shore power, if connected.

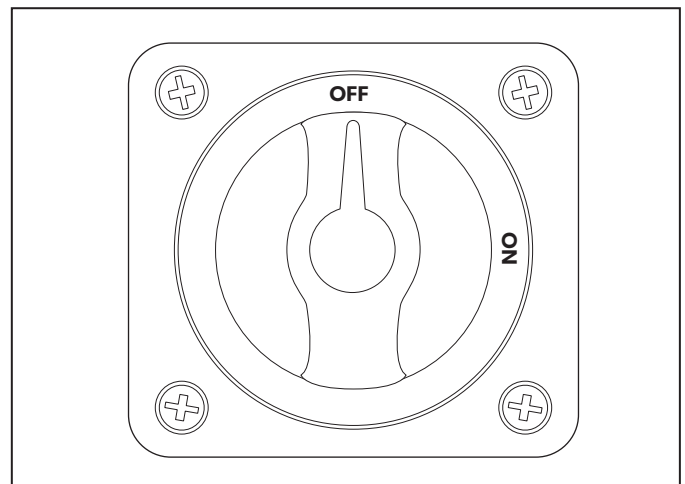


1 Battery Disconnect Switch set to OFF

- Turn the battery disconnect switch to OFF. The switch is located near the entry step footwell.

3 Removal

NOTICE: The display fits tightly into the wall. Strong fingertip pressure may be necessary to disengage the display, but avoid using force or tools that could damage the display in the process.

This section describes the proper technique to remove an existing touch-screen display panel ("display").

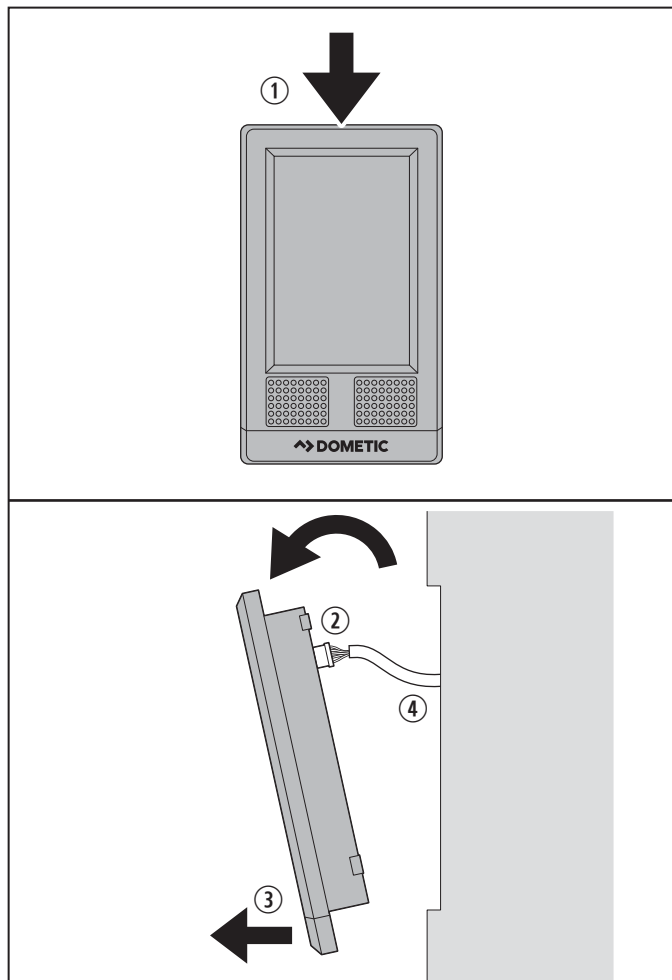


2 Removing the Display from the Wall Enclosure

- | | |
|--------------------------|-----------------------|
| ① Display Top Edge | ③ Display Bottom Edge |
| ② Wire Harness Connector | ④ Wiring Cable |

- Using your fingertips, push the top edge of the display downward toward the Dometic logo on the bottom edge of the display.

- Maintaining the same downward pressure, gently pull the top edge of the display away from the top of the wall enclosure.
- Lift the bottom edge of the display away from the wall.
- Expose the wiring cable and the wire harness connector by slowly pulling the display away from the wall.

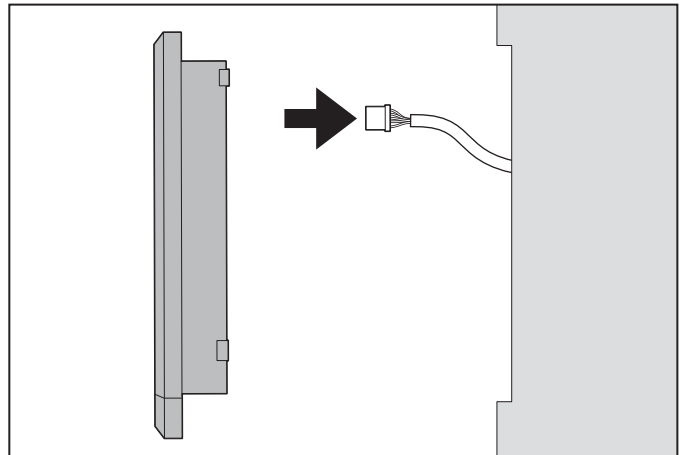


3 Disconnect the Display

- Disconnect the wire harness connector from the back of the display.

4 Installation


This section describes the proper technique to install a new touch-screen display panel ("new display").

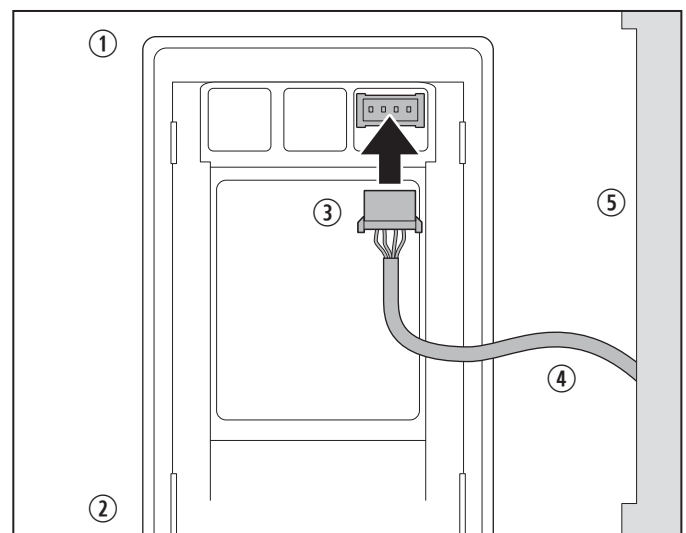

4 Installing the Wire Harness Connector


- | | |
|--------------------------|------------------|
| ① Display Top Edge | ④ Wiring Cable |
| ② Display Bottom Edge | ⑤ Wall Enclosure |
| ③ Wire Harness Connector | |

1. Connect the wire harness connector to the same location at the back of the new display.
2. Test the display before inserting it into the wall.

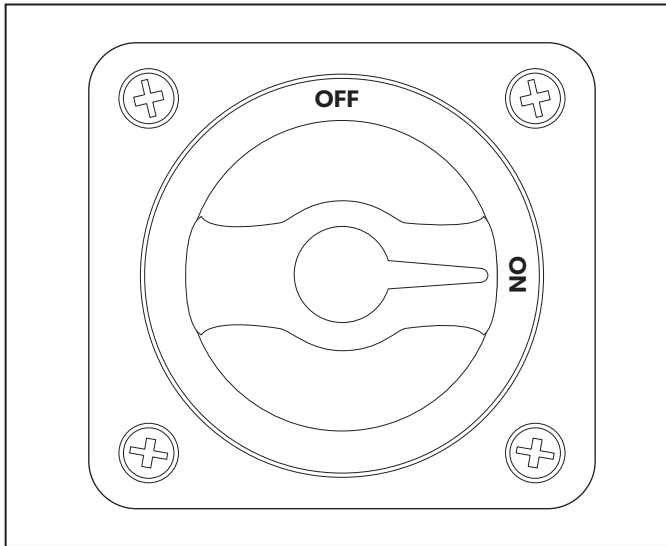

5 Battery Disconnect Switch set to ON

- a. Turn the battery disconnect switch to ON.
 - b. On the display, select **Main Navigation Menu**, and then select **Settings, General Info**, and **About** to confirm the software version is v1.9.0.
 - c. When pressing the icons, verify the button confirmation tones are audible.
 - d. Turn on a light in the vehicle to confirm the connections work properly.
 - e. Turn the battery disconnect switch to OFF.
3. Avoid pinching or bending the display's connected wiring cable and tuck the cable into the wall opening.

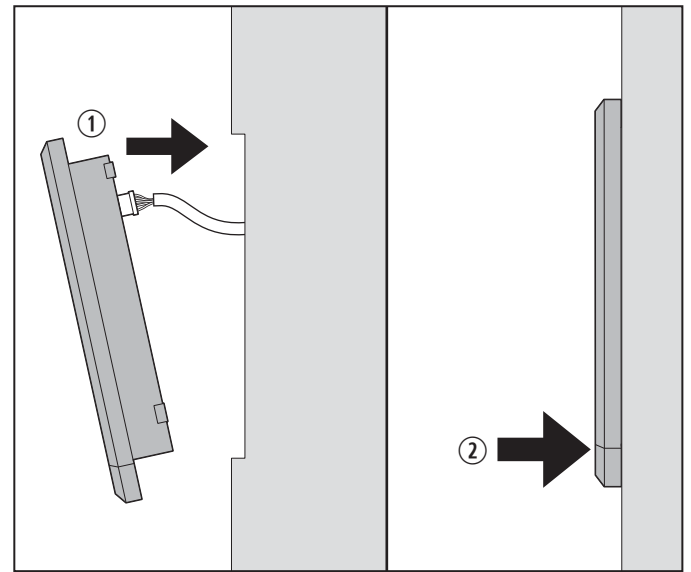

6 Installing the Display Flush to the Wall Enclosure

- ① Display Top Edge ② Display Bottom Edge at the Dometic Logo

4. Insert the top edge of the new display into the wall enclosure.
5. Applying pressure to the Dometic logo, push the bottom edge of the new display until the entire display is flush with the wall enclosure. The display should fit tightly into the wall, similar to the original installation.
6. Repeat the "Removal" and "Installation" sections for the remaining displays.
7. When all displays are installed, turn the battery disconnect switch to ON.
8. Reconnect the RV to the shore power, if appropriate.

5 Original Parts

Return the displays to the Dometic Warranty Department according to the instructions on the Limited Warranty provided with the product.

