

DOMETIC

SANITATION

AIR PUMPS

Models VHT12, VHT4500, and VHT5200

EN

Replacement Air Pump Valve Installation Instructions

Form No. 600347423 1/18
©2018 Dometic Corporation

USA & Canada
Service Office
Dometic Corporation
13128 State Route 226
Big Prairie, OH 44611

**Service Center &
Dealer Locations
Visit:**
www.dometic.com



Read these instructions carefully. These instructions MUST stay with this product.

1 GENERAL INFORMATION

Included Parts	Quantity
12" Vent Hose	1
Loose Clamps	4
Grease Packet	1
Check Valve Assembly	1


Recommended Tools

Tube Cutter


Pliers

Screwdriver

2 INSTALLATION

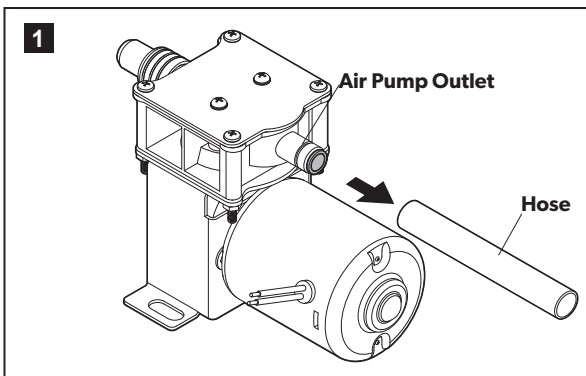


- Verify that the power to the pump is turned off.
- Remove the hose from the air pump outlet.

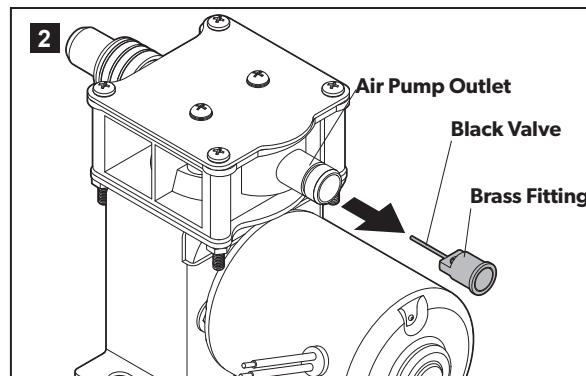

- Remove the brass fitting and black valve from the air pump outlet.

i If the brass fitting cannot be removed, pull out the black valve using pliers.

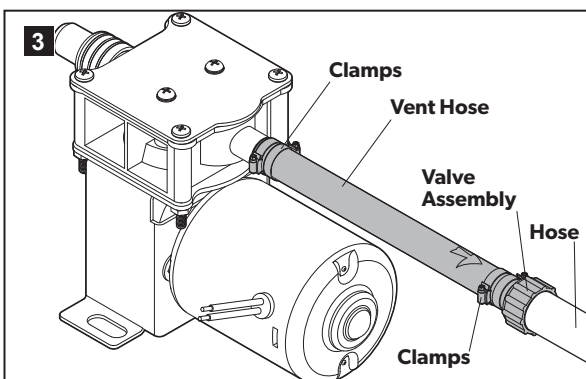

- Using a tube cutter, cut the vent hose 6–8" from the end of the hose.
- Attach the check valve assembly to the vent hose and the hose using the grease and two of the loose clamps provided.

i Verify that the valve direction is oriented to flow away from the air pump using the arrow on the vent hose as a guide.

- Attach the hose to the air pump outlet using two of the loose clamps provided.
- Secure the vent hose from the air pump outlet to the through-the-hull fitting to prevent any dips in the hose, which can restrict airflow.