



Atwood®

Atwood Mobile Products
1120 North Main, Elkhart, IN 46514
Phone: 574-264-2131 Fax 574-206-9683
INTERNET: <http://www.atwoodmobile.com>

SERVICE INSTRUCTIONS

FOR THE ATWOOD RV ENTRANCE DOOR

A guide for Emergency Access to open an unlocked Entrydoor from the outside

EXCEL™ WINDOW AND DOOR SYSTEMS

Document Part Number: C00006

Created 7-11-05

Entrydoor Access Procedure

Tools required: Ruler, 1/2" drill bit, pilot drill bit and drill, center punch, and a flat blade screwdriver

When to use

This procedure is to be used in the event the outside handle become inoperative and does not open the door when the handle is pulled and there is no other way into the vehicle.

Procedure

1. Make sure both Deadbolt and Main locks are unlocked. This procedure **will not** work if the doors are still locked.
2. Refer to drawing below to locate an access hole
3. Mark location of hole on handle and center punch. It is recommended that a pilot hole be drilled.
4. Drill 1/2" diameter hole through the outer flip handle and continue through the back wall of the handle housing
5. The inside trip lever should now be visible through the hole. It will be a silver or gold color
6. Using the tip of the flat blade screwdriver, insert into the hole and pry the trip lever to the right. This will actuate the rotary lock and open the door.
7. Once open, replace the outside handle, inside handle, and rotary lock with the appropriate part numbers. All three need to be replaced as a set. See Handle replacement procedure.

