



RECORD THIS UNIT INFORMATION FOR
FUTURE REFERENCE:

Model Number _____

Date Purchased _____

C5 FRAMELESS WINDOWS

SERVICE OFFICE:

USA

Dometic, LLC
2320 Industrial Pkwy
Elkhart, IN 46516
574-294-2511

CANADA

Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

For Service Center
Assistance Call:
800-544-4881

WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de cet appareil doit être effectuée par un réparateur qualifié. Toute modification de cet appareil peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

INSTALLATION INSTRUCTIONS

DOMC5XXXX

Fitting instructions for the C5-window




Decide on the window cut-out according to the drawing and mark it out. Before cutting the opening and to avoid scratches on the outside, cover the area outside the marked cut-out with adhesive tape.



Cut out the opening with a suitable tool (piercing saw, jig-saw or a router).



Decide the position of the hinge rail in accordance with the drawing.

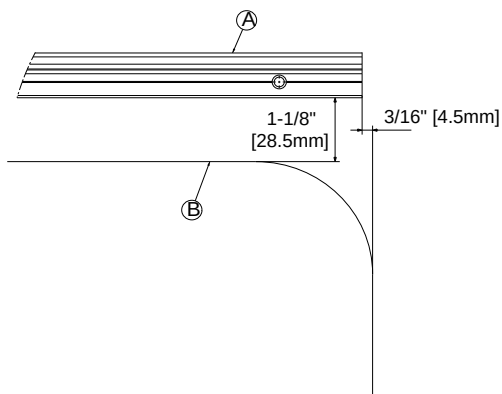


A = Hinge

B = Wall aperture



Apply the sealing strip under the hinge rail.

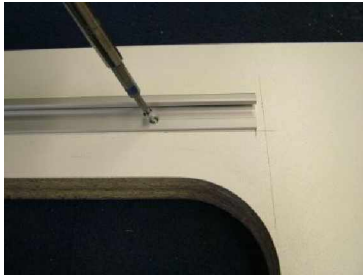

Screw on the hinge rail (if necessary pre-drill the holes).



Fit the sealing cord underneath the end pieces and screw them tight to the left- and right-hand ends of the hinge rail.



Clean the cut surfaces in the window cut-out. Fit the sealing moulding (with the sealing form outwards), starting in the middle of the bottom of the window cut-out and press well home right round (pressure should be applied from the outside towards the inside). Caution: the rubber must be suitable for the thickness of the wall.



Carefully cut the sealing strip overlapping in the window cut-out (push together gently to ensure no gap is caused) and press it home flush.



Fix the sealing strip in place with staples or other suitable method, paying particular attention to the corners, and where the two ends meet.



Push in the filler moulding right round, using the seal insert fitting roller, and starting at the top.




Hang the window in the hinge rail (window obliquely from above – approach the hinge strip at an angle of about 110° - fit in place and carefully swivel downwards).

Caution: when swivelling it down, the window must not be allowed to catch.



Decide on the position of the holders for the lower and side locking levers and screw them in place. Difference in level between window and the outer panelling should be about 1/8" [3.5mm].

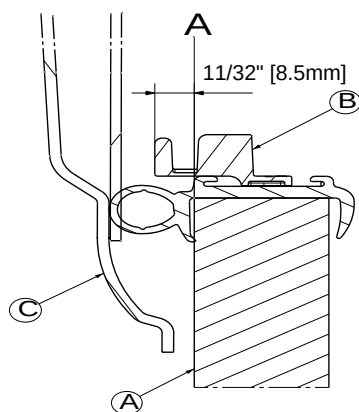

A = Wall outside

B = Lock encounter

C = Pane



With the window closed, retract the opening bracket completely. Position the upper fixing point for the bracket in the middle of the filler moulding and screw it into place.