

**USA**

SERVICE OFFICE
Dometic, LLC
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA

Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

For Service Center
Assistance Call:
800-544-4881

GENERATOR REPLACEMENT CARBURETOR/FILTER KIT 3314385.000

⚠ WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

⚠ AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de ce produit doit être effectuée par un réparateur qualifié. Toute modification de ce produit peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

SERVICE INSTRUCTIONS

MODEL
LW3000P.BLK

Form No.:
3314384.000
©2011 Dometic, LLC
LaGrange, IN 46761
Released: 08/11

**Important: These Instructions must
stay with product. Owner read carefully.**

SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

RECOGNIZE SAFETY INFORMATION



This is the safety alert symbol. It is used to alert you to personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

UNDERSTAND SIGNAL WORDS

A signal word, when used with the safety alert symbol, will identify a safety hazard and its level of risk for personal injury. A signal word, without the safety alert symbol, will be used for property damage messages only.

⚠ WARNING WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE NOTICE is used to address practices not related to personal injury.

⚠ WARNING

Read and follow all safety information and instructions to avoid possible injury or death.

GENERAL INSTRUCTIONS

⚠ WARNING

These instructions must be read and understood before installation of this hardware. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

Required Tools:

- (1) Phillips Screwdriver
- (1) 5/16" or 8mm Socketdriver




A. Removing The Old Carburetor/Filter


1. Locate the side panel of the generator, loosen the two screws, and remove the panel. See FIG. 1.




2. Using the 5/16" or 8mm socket, remove the two screws shown, and set them aside for later use. See FIG. 2.

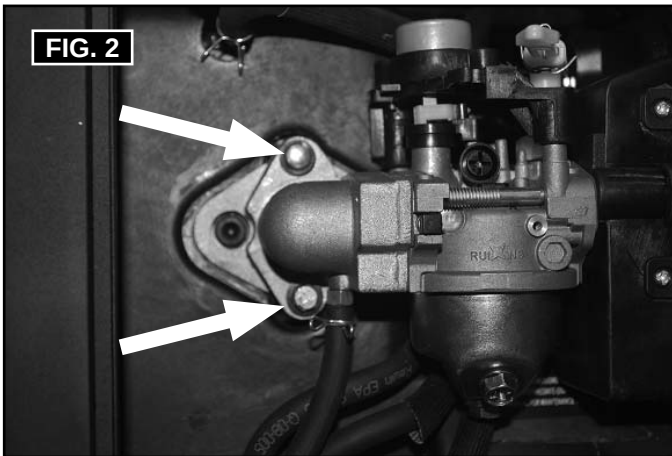


3. Carefully remove the gasket. Clean any remaining gasket material off the flange surface. See FIG. 3.

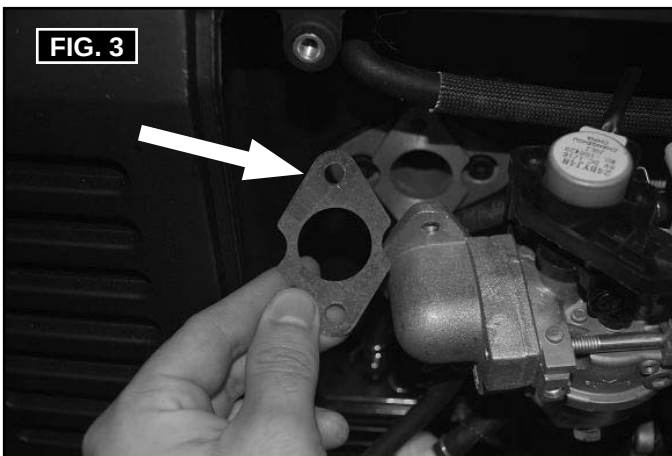


4. Unscrew and remove the step motor from the carburetor/filter assembly, but do not disconnect the wiring as the step motor will be reinstalled on the new carburetor. Save the screws and washers for later use. See FIG. 4.

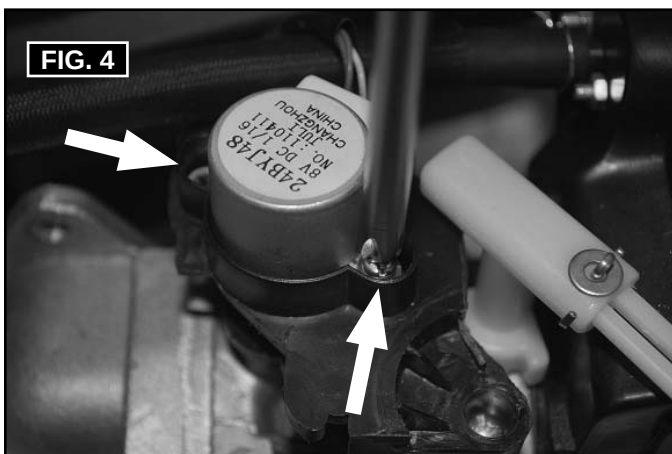

5. Locate the two hoses that connect to the air filter housing behind the carburetor. Slide the hose clamps away from the ends of these two hoses where they connect to the generator, then disconnect the hoses from the generator. These hoses will not be re-used. See FIG. 5.

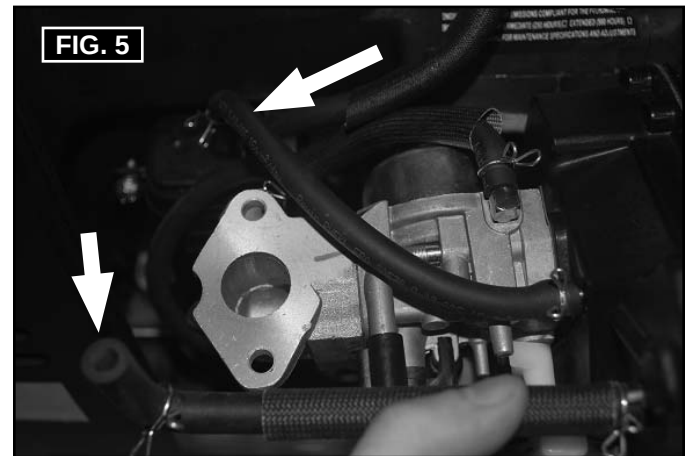


6. Slide the hose clamps away from the ends of the two bottom hoses where they connect to the carburetor, then disconnect the hoses from the carburetor and remove the carburetor/filter assembly. Do not disconnect the other ends of the hoses from the generator as these hoses will be reconnected to the new carburetor. See FIG. 6.

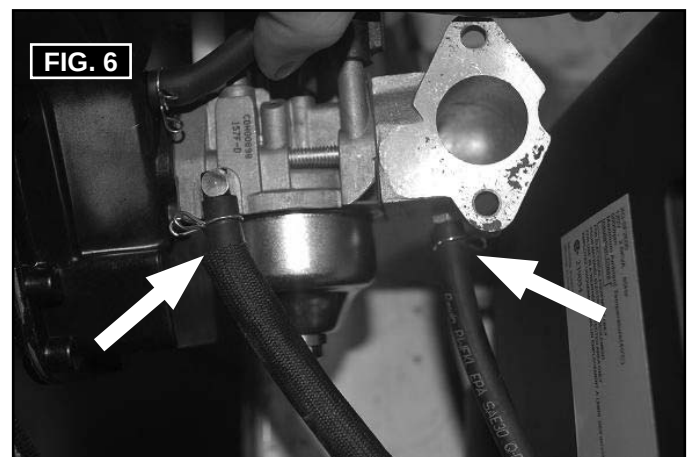


B. Preparing The New Carburetor/Filter

1. Completely remove the step motor from the new carburetor/filter assembly. See FIG. 7 & 8.

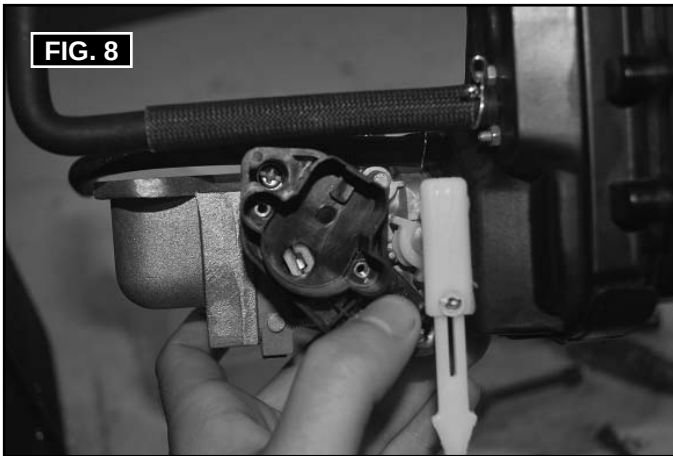


C. Installing The Replacement Carburetor/Filter


1. Connect the two bottom hoses of step A.6. to the new carburetor/filter assembly, sliding the hose clamps into position as shown. See FIG. 9.

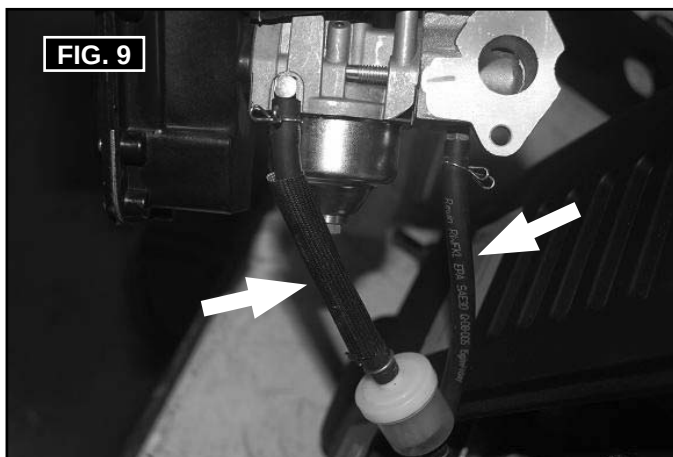


2. Insert the existing step motor into the new carburetor/filter assembly making sure that the shaft of the step motor aligns correctly. Secure the step motor using the screws and washers from step A.4.. See FIG.10 & 11.

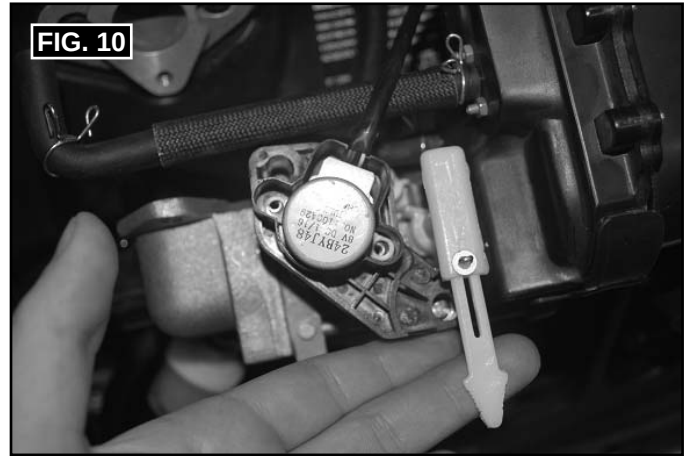


3. Connect the two remaining hoses to their respective fittings, sliding the hose clamps onto the position near the ends of the hoses. See FIG. 12.

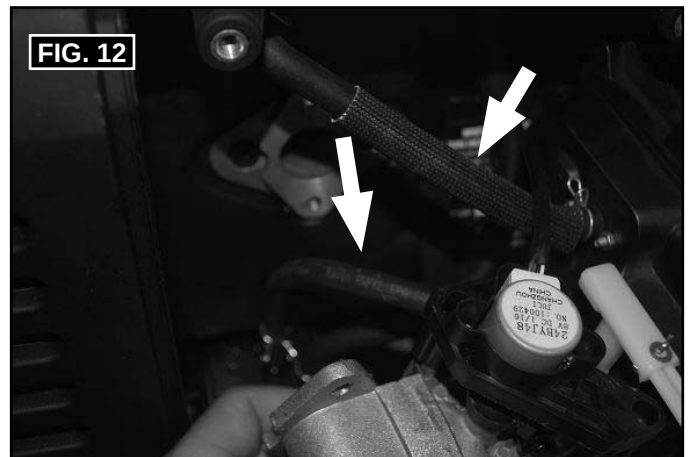

4. Position the new gasket on the new carburetor/ filter assembly flange. See FIG. 13.

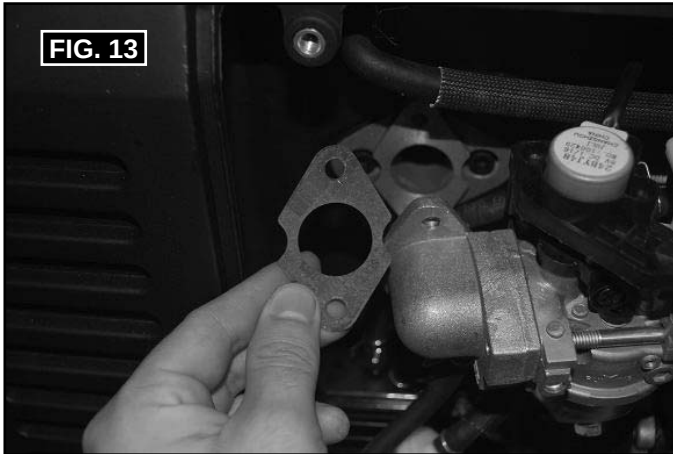

5. Screw the new carburetor/filter assembly to the generator using the screws removed previously in step A.2., ensuring that no hose is pinched or kinked. See FIG. 14.

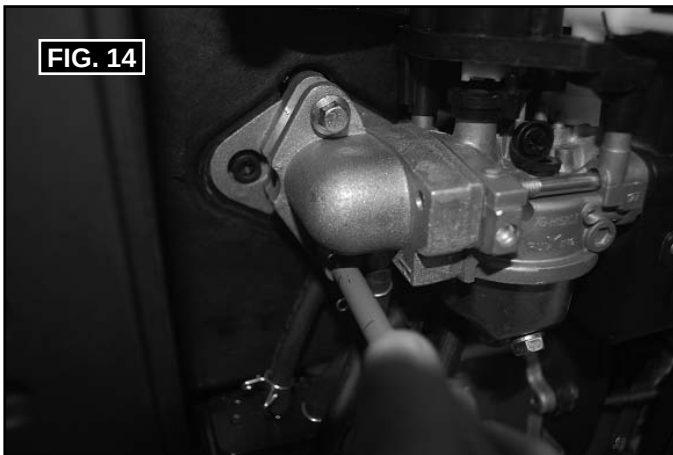

6. Replace the side panel of the generator and screw in the two screws. See FIG. 15.

