


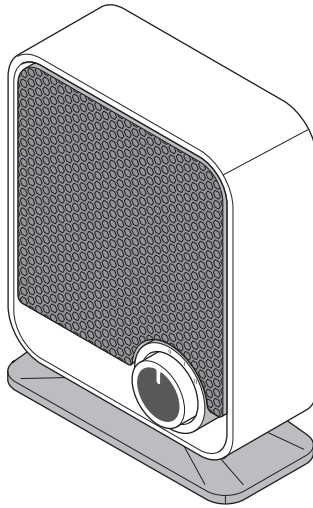


Diddy

EN

Fan heater
Operating manual

© 2026 Dometic Group. The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or pending patent. The trademarks mentioned in this manual belong to Dometic Sweden AB. All rights are reserved.

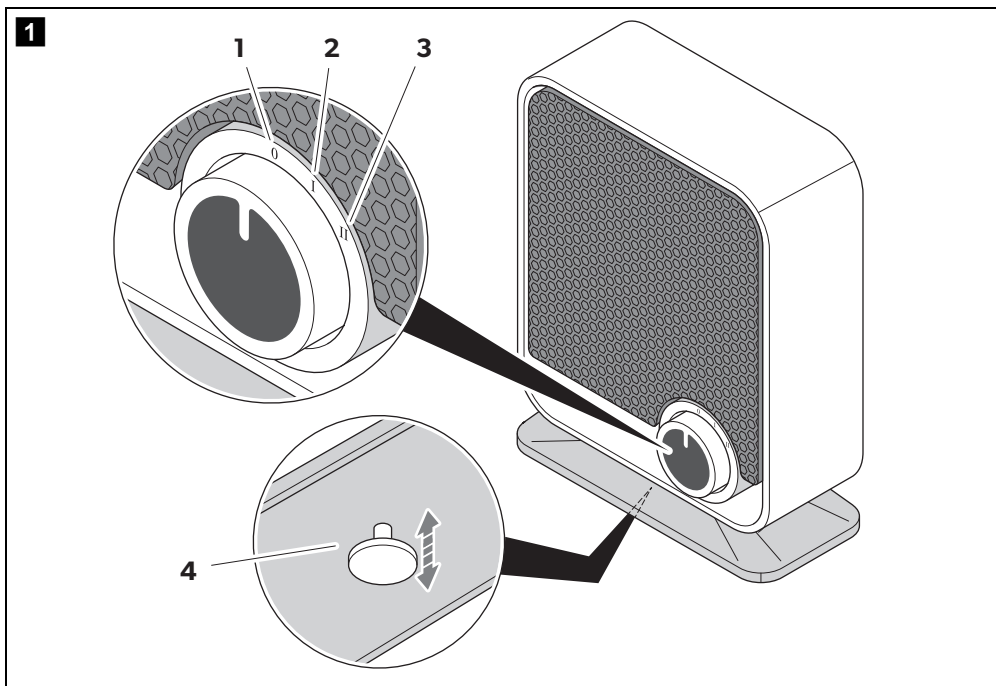

Please read these instructions carefully and follow all instructions, guidelines, and warnings included in this product manual in order to ensure that you install, use, and maintain the product properly at all times. These instructions **MUST** stay with this product.

By using the product, you hereby confirm that you have read all instructions, guidelines, and warnings carefully and that you understand and agree to abide by the terms and conditions as set forth herein. You agree to use this product only for the intended purpose and application and in accordance with the instructions, guidelines, and warnings as set forth in this product manual as well as in accordance with all applicable laws and regulations. A failure to read and follow the instructions and warnings set forth herein may result in an injury to yourself and others, damage to your product or damage to other property in the vicinity. This product manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates. For up-to-date product information, please visit kampaoutdoors.com.

Explanation of symbols



WARNING!

Safety instruction: Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION!

Safety instruction: Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.



NOTICE!

Indicates a situation that, if not avoided, can result in property damage.



NOTE

Supplementary information for operating the product.

Safety instructions

General safety



WARNING! Failure to obey these warnings could result in death or serious injury.

Electrocution hazard

- Do not use if there are visible signs of damage to the heater.
- Do not touch exposed cables with your bare hands.

- If the heater's power cable is damaged, it must be replaced by the manufacturer, service agent or a similarly qualified person in order to prevent safety hazards.
- The heater may only be repaired by qualified personnel. Inadequate repairs may cause serious hazards.
- Do not use the heater outdoors or on wet surfaces.
- Do not use the heater in the immediate surroundings of a bath, a shower or swimming pool.
- Do not expose the heater to rain or moisture.
- Do not open the heater.
- Do not use the heater if it has been dropped.
- Plug the device to sockets that ensure proper connection especially when the device needs to be earthed.

Fire hazard

- Do not use the heater in locations where explosive or flammable products are stored (paint, fuel, alcohol, etc.).
- Keep a safety distance of at least 1 m to any overhanging surfaces.
- Keep a safety distance of at least 1 m in all directions from the heater to combustible materials such as curtains and other furniture.
- Do not use the heater on deep pile carpets or other combustible materials.
- Do not use the heater on soft surfaces such as a mattress.
- Do not use the heater to dry laundry.



CAUTION! Failure to obey these cautions could result in minor or moderate injury.

Risk of injury

- This heater can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the heater in a safe way and understand the hazards involved.

- Children aged from three years and less than eight years shall only switch on/off the appliance provided it is placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from three years and less than eight years shall not plug in, regulate, and clean the appliance or perform user maintenance.
- Children of less than three years should be kept away unless continuously supervised.
- Some parts of this heater can become very hot and cause burns. Do not let bare skin touch hot surfaces.
- Do not allow children to play around the heater.
- Cleaning and user maintenance may not be carried out by unsupervised children.
- The heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Always switch off the heater and unplug the cord from the socket when the heater is not being used.
- Do not unplug by pulling on the cable, grasp the plug.
- The heater must be on a flat stable surface when it is in use.
- In order to avoid overheating do not cover the heater.
- Do not use the heater in small rooms when they are occupied by persons not capable of leaving the room on their own unless constant supervision is provided.

Operating the fan heater safely



WARNING! Failure to obey these warnings could result in death or serious injury.

Fire hazard

- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- When operating this heater do not use an extension cord. Always plug directly in a wall socket.
- Do not stretch the cord or place the cord under strain.
- Keep the cord away from heated surfaces. Do not operate the heater with the cord overhanging the front outlet grille.
- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners or similar coverings.
- Do not route the cord under furniture or appliances.
- Do not leave the heater unsupervised while it is operating.
- Do not cover or obstruct the air inlet and outlet openings.
- Do not place the heater directly in front of a fixed socket outlet. The socket outlet must be accessible at all times to enable the mains plug to be disconnected as quickly as possible.

Intended use

This fan heater (also referred to as heater) is suitable for:

- Warming up an enclosed space such as a room
- Domestic use

This fan heater is **not** suitable for:

- Wet environments
- Outdoor use
- Commercial use

This product is only suitable for the intended purpose and application in accordance with these instructions.

This manual provides information that is necessary for proper installation and/or operation of the product. Poor installation and/or improper operation or maintenance will result in unsatisfactory performance and a possible failure.

The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect assembly or connection, including excess voltage
- Incorrect maintenance or use of spare parts other than original spare parts provided by the manufacturer
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in this manual

Kampa reserves the right to change product appearance and product specifications.

Using the heater



WARNING! Fire hazard

- Do not leave the heater unattended when in use.
- Always turn the control knob off and unplug the heater from the socket when the heater is not in use.



NOTE

This heater is equipped with a tip switch that switches the heater off if it tips over.

No. in fig. 1, page 3		Description
1	0	Off
2	I	Minimum heat (750 W)
3	II	Maximum heat (1500 W)
4	-	tip switch

Connecting

1. Place the heater on a flat, stable and horizontal surface.
2. Arrange the cord in accordance with the safety instructions, away from traffic areas and where it will not be tripped over.
3. Insert the plug into the socket.

Setting the temperature

- Turn the control knob to the desired position.

Disconnecting and storing



CAUTION!

Ensure that the heater cools down completely before storing.

1. Turn the control knob to „Off“.
2. Unplug the heater from the socket.

Cleaning and maintenance



WARNING!

Unplug the heater from the socket before cleaning and maintenance.



NOTICE!

- Do not use sharp or hard objects or any cleaning or chemical products.
- Ensure that no water/moisture enters the openings of the heater.

1. Clean the outer surface of the heater using a lightly damp cloth.
2. Dry the heater thoroughly with a dry cloth.

Warranty

The statutory warranty period applies. If the product is defective, please contact your retailer or the manufacturer's branch in your country (see kampaoutdoors.com/store-locator).

For repair and warranty processing, please include the following documents when you send in the product:

- A copy of the receipt with purchase date
- A reason for the claim or description of the fault

Note that self-repair or nonprofessional repair can have safety consequences and might void the warranty.

Disposal

► Place the packaging material in the appropriate recycling waste bins, wherever possible.



If you wish to finally dispose of the product, ask your local recycling center or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.

Technical data

	Diddy
Connection voltage	220 – 240 V~ 50/60 Hz
Power level (Mode I)	750 W
Power level (Mode II)	1500 W
Dimensions H x W x D	26.5 x 18 x 18 cm
Weight	1 kg
Certification	 



Together outdoors

kampaoutdoors.com

Part of the Dometic Group

We distribute our products in around 100 markets. Please ask for your contact point or check the web. kampaoutdoors.com

Manufacturer: Dometic UK Awnings Limited, Witham, Essex, UK

Importer EU: Dometic Germany GmbH, Hollefeldstraße 63, 48282 Emsdetten, Germany