
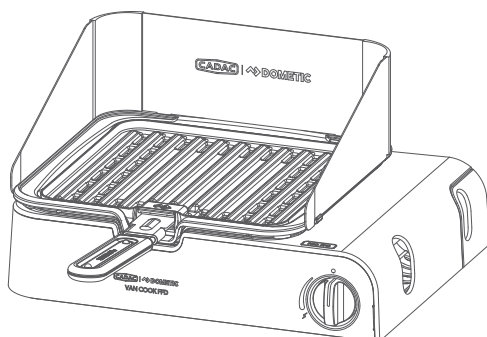


HOT AND COOKING

VAN COOK FFD

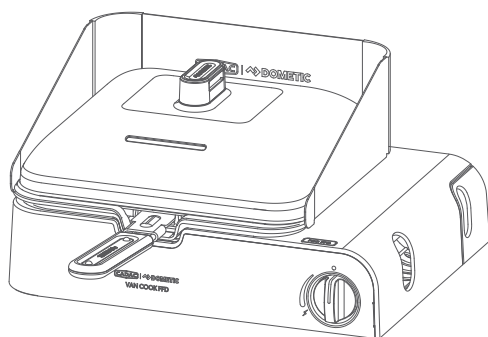

Van Cook FFD 1025

EN

Portable gas barbecue

Operating Manual..... 3



Copyright

© 2026 Dometic Group. The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or pending patent. The trademarks mentioned in this manual belong to Dometic Sweden AB. All rights are reserved.

English

1	Important notes.....	3
2	Explanation of symbols.....	3
3	Safety instructions.....	4
4	Intended use.....	8
5	Component list.....	9
6	Mounting the appliance.....	10
7	Connecting gas supply to appliance.....	11
8	Gas leaks.....	13
9	Operating the appliance.....	14
10	Removing the gas cartridge.....	19
11	Caring for your ceramic cooking surfaces.....	20
12	Cleaning and maintenance.....	21
13	Storage.....	22
14	Troubleshooting.....	23
15	Warranty.....	24
16	Disposal.....	24
17	Technical data.....	24

1 Important notes

Please read these instructions carefully and follow all instructions, guidelines, and warnings included in this product manual in order to ensure that you install, use, and maintain the product properly at all times. These instructions **MUST** stay with this product.

By using the product, you hereby confirm that you have read all instructions, guidelines, and warnings carefully and that you understand and agree to abide by the terms and conditions as set forth herein. You agree to use this product only for the intended purpose and application and in accordance with the instructions, guidelines, and warnings as set forth in this product manual as well as in accordance with all applicable laws and regulations. A failure to read and follow the instructions and warnings set forth herein may result in an injury to yourself and others, damage to your product or damage to other property in the vicinity. This product manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates. For up-to-date product information, please visit documents.domestic.com.

2 Explanation of symbols

A signal word will identify safety messages and property damage messages, and also will indicate the degree or level of hazard seriousness.



DANGER!

> Indicates a hazardous situation that, if not avoided, will result in death or serious injury.



WARNING!

> Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION!

> Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.



NOTICE!

> Indicates a situation that, if not avoided, could result in property damage.



NOTE Supplementary information for operating the product.

3 Safety instructions

3.1 Safety warning



NOTE

- Important: Read these instructions for use carefully so as to familiarize yourself with the appliance before connecting it to its gas cartridge.
- Use only in a well-ventilated area.
- Do not move the appliance during use.
- Remove the gas supply cartridge after use.
- Any modification of the appliance may be dangerous.
- Failure to follow these instructions will void the warranty.
- Keep these instructions for future reference.

3.2 General safety




NOTE Failure to obey these warnings can result in death or serious injury.



WARNING! Carbon monoxide hazard

- > THIS GAS APPLIANCE CONSUMES AIR (OXYGEN). ENSURE THAT THE APPLIANCE IS USED IN A WELL-VENTILATED AREA.
- > USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH.
- > This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.

Gas safety precautions

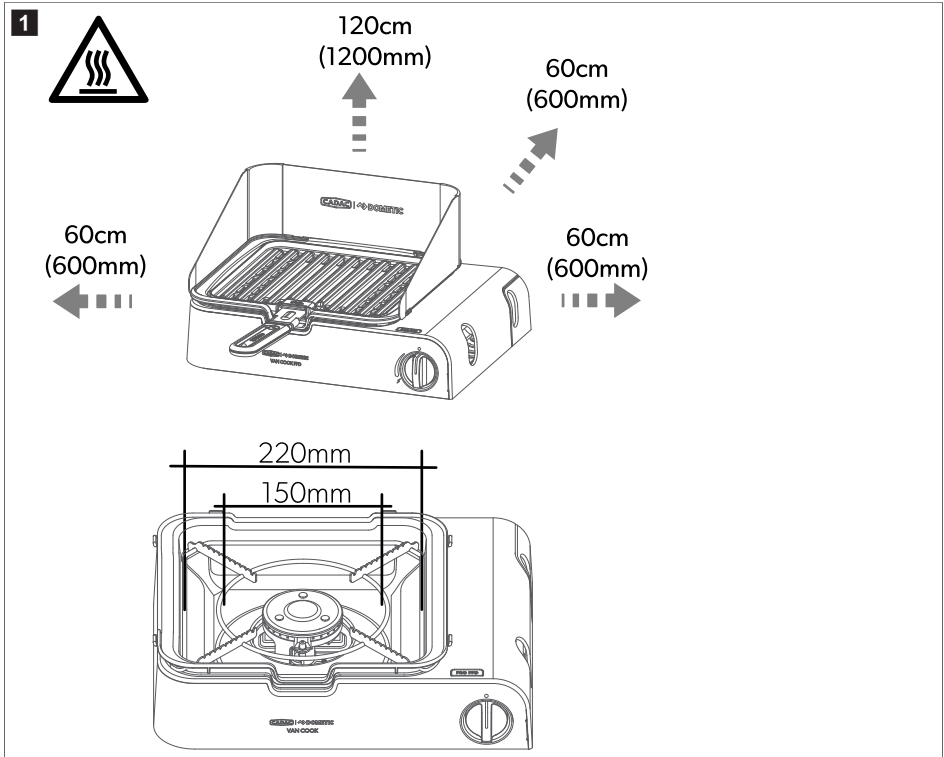

NOTE This appliance is fitted with a safety shut-off device also known as a Flame Failure Device (FFD), ensuring that the gas supply to the burner shuts off immediately should the flame inadvertently go out.



DANGER! Explosion hazard

- > The appliance shall only be used with a CADAC 220 g/227 g butane cartridge with nozzle, or any other locally approved 220 g/227 g butane cartridge complying with EN417.
- > **It may be hazardous to try and fit other types of gas cartridges.**
- > Connect the gas cartridge in a well-ventilated area, preferably outdoors, away from ignition sources like flames and fires, and away from other people.
- > Keep the gas cartridge away from heat and flame. Do not place on a stove or any other hot surface.
- > Do not remove the gas supply whilst this appliance is in use.
- > The gas cartridge must be disconnected from this appliance after use or when in storage.



CAUTION! Fire hazard

- > This appliance must be kept away from flammable materials during use. Minimum safe distances are: 120 cm above the appliance, and 60 cm to the rear and sides.
- > Do not place any objects other than cooking pots and pans on or against this appliance.

- > When using a pot or pan to cook in, use only the recommended pot size of 150 mm to 220 mm in diameter only.
- > When using the coffee pot stand, the minimum recommended coffee percolator size is 60 mm in diameter.
- > Do not place chemicals, flammable materials or spray aerosols near this appliance.
- > In case of fire, shut off the gas supply immediately.



WARNING! Explosion hazard

Failure to follow these warnings could result in death or serious injury.

- > Do not alter this appliance. Use only as intended.
- > This product may only be repaired by qualified personnel. Inadequate repairs may cause serious risk.



WARNING! Fire hazard

- > Do not leave this appliance unattended when hot or in use.
- > Keep a fire extinguisher or other means suitable to extinguish a flame in the event of an emergency.

Safety during use



DANGER! Explosion hazard

- > Do not use the appliance if it has damaged or worn gaskets (seals), often indicated by the smell of gas. Contact an authorized repair agent for assistance if worn gaskets are suspected.
- > Do not use an appliance which is leaking, damaged or does not operate properly. Contact an authorized repair agent for assistance.
- > If you smell gas, immediately turn the gas off by turning the control knob on the appliance to the off-position.
 - Extinguish any naked flames.
 - Move the appliance to a well-ventilated flame-free location and perform a gas leak test. This test should be performed outside in a well-ventilated area away from open flames or sources of ignition.
 - Never use a naked flame to check for gas leak, use soapy water.



CAUTION! Burn hazard

- > ACCESSIBLE PARTS MAY BECOME VERY HOT. KEEP OUT OF REACH OF YOUNG CHILDREN.
- > Use heat-resistant gloves when handling the appliance.
- > Do not wear loose clothing or allow long hair to hang freely while lighting or using this product.
- > Keep hands, face and hair away from burners.
- > Carefully observe all activity around this product to avoid burns or other injuries.
- > Always operate the appliance on a horizontal, level surface. Ensure that the assembled product is stable and does not rock.
- > Ensure that the pan support /cooking surfaces are correctly placed when using the appliance.
- > Do not touch the pan support while the appliance is in use.
- > Do not move this appliance during use.
- > Keep children and pets safely away.
- > The use of alcohol or prescription or non-prescription drugs may impair your ability to properly assemble or safely operate this appliance.
- > Leave this product to cool down properly before you handling with bare hands.



DANGER! Light back / flaring

- > If a flame burns back inside the burner, this is known as flaring and may lead to unsafe operating conditions. Ensure flame stability when using the appliance.

- > In the event of flaring, do the following:
 - Immediately turn the gas supply off by closing the gas cylinder valve.
 - Turn the appliance control knob to the off-position.
 - After the flame is extinguished, remove the gas cartridge.
 - Reconnect the gas supply and test the connection for a gas leak.
 - Re-ignite the appliance.
 - If flaring persists, stop use and contact an authorized repair agent for assistance.

3.3 Ventilation requirements



NOTE Failure to obey these warnings can result in death or serious injury.



WARNING! Carbon monoxide hazard

Using this appliance in an enclosed space may cause death.


- > THIS GAS APPLIANCE CONSUMES AIR (OXYGEN).
- > ONLY USE IN WELL-VENTILATED AREAS. USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH. DO NOT USE IN CARAVANS, TENTS, MARINE CRAFT, CARS, MOBILE HOMES OR SIMILAR LOCATIONS.
- > This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.
- > **Use outdoors only.**

Ventilation requirements

Any enclosure in which the appliance is used shall comply with one of the following:

- An enclosure with walls on all sides, but with no overhead cover. (i)
- Within a partial enclosure that includes an overhead cover and no more than two walls. (ii and iii)
- Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply: (iv and v)
- At least 25 % of the total wall area is completely open.
- 30 % or more in total of the remaining wall side, back and front wall areas is open and unrestricted.
- In the case of balconies, 20 % or more of the total wall area shall remain open and unrestricted.

2

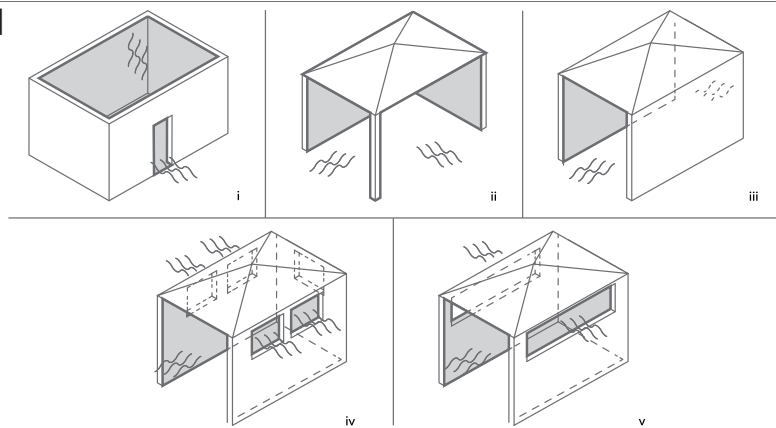

4 Intended use

This LPG cooking appliance is intended for **non-commercial cooking use only**.

This appliance is for use only in a well-ventilated area. Pay attention to ventilation requirements.

Prohibited uses

Do not use this appliance for:

- Space heating or warming rooms
- Drying clothes or any materials
- Commercial or industrial purposes
- The appliance must not be used for any other purpose.

This product is only suitable for the intended purpose and application in accordance with these instructions.

This manual provides information that is necessary for proper installation and/or operation of the product. Poor installation and/or improper operating or maintenance will result in unsatisfactory performance and a possible failure.


The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect installation or assembly
- Incorrect maintenance or use of spare parts other than original spare parts provided by the manufacturer
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in this manual

Dometic reserves the right to change product appearance and product specifications.

5 Component list

3

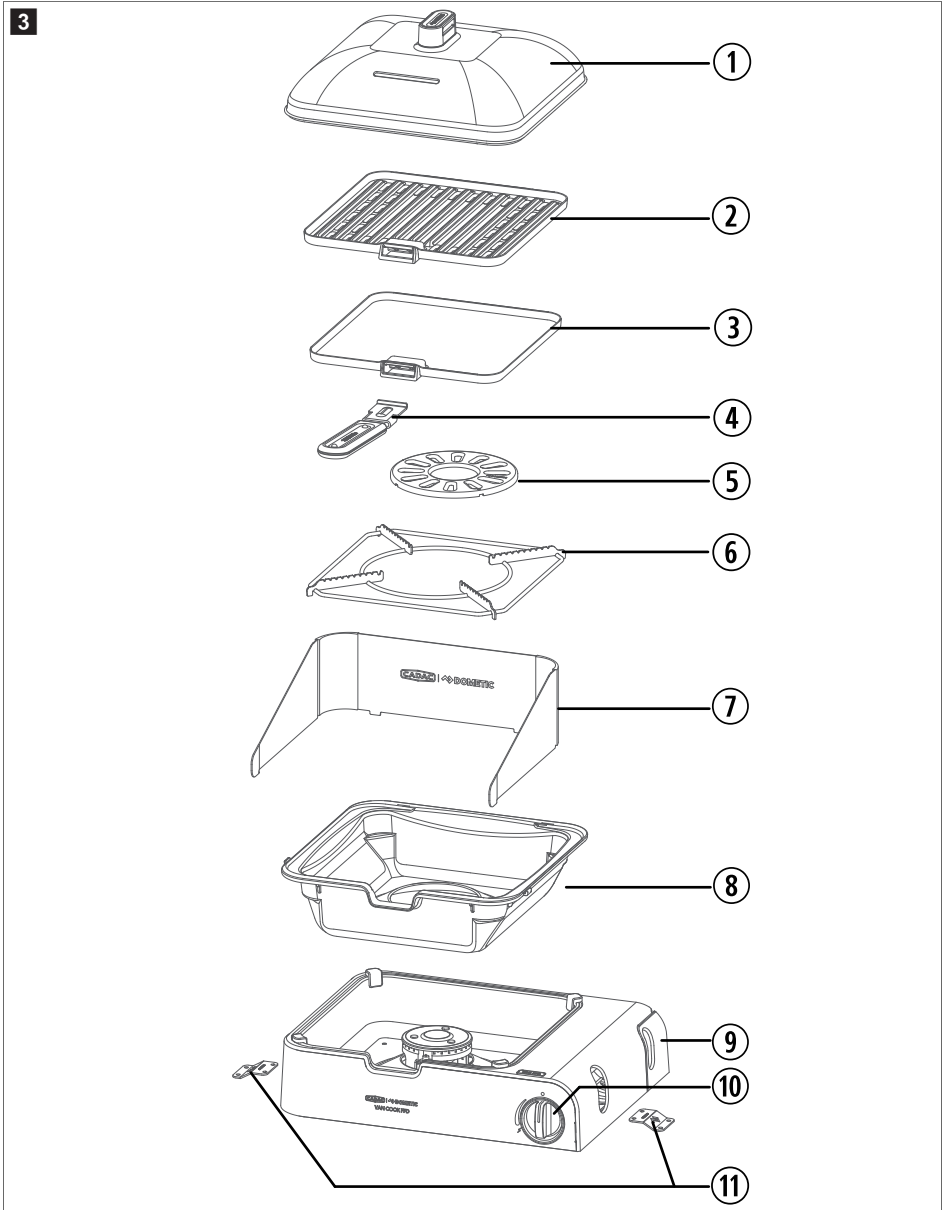

Component	Description
①	Domed lid
②	BBQ plate
③	Grill plate
④	Grill handle
⑤	Coffee pot stand
⑥	Pot / Pan support
⑦	Splatter shield
⑧	Drip pan
⑨	Cartridge door
⑩	Control knob
⑪	Mounting brackets

Combinations

Components included in each product code are as follows:

Component	1025-10	1025-20	1025-25
①	✓	✓	—
②	✓	✓	✓
③	✓	—	—
④	✓	✓	✓
⑤	✓	✓	✓
⑥	✓	✓	✓
⑦	✓	✓	✓
⑧	✓	✓	✓
⑨	✓	✓	✓
⑩	✓	✓	✓
⑪	✓	✓	✓

6 Mounting the appliance

Mounting brackets have been supplied with this appliance. Use of these brackets allows for **optional** mounting of the appliance onto a stable, horizontal surface such as an outdoor kitchen countertop or table.



NOTE Mounting this appliance should only be done by a qualified professional.

7 Connecting gas supply to appliance

7.1 Fitting the gas cartridge

The appliance shall only be used with a CADAC 220 g/227 g butane cartridge with nozzle, or any other locally approved 220 g/227 g butane cartridge complying with EN417.

It could be hazardous to attempt to fit other types of gas cartridges.




NOTE Explosion hazard

- > Connect the gas supply in a well-ventilated area, preferably outdoors, away from ignition sources like open flames and fires, and away from other people.
- > Check all gaskets (between the appliance and the gas cartridge) are in place and in good condition before connecting the gas cartridge to the appliance. Do not use the appliance if worn gaskets are suspected.
- > Keep the gas supply away from heat and flame. Do not place on a stove or any other hot surface.
- > Do not remove the gas supply whilst this appliance is in use.
- > The gas supply must be disconnected from this appliance after use, or when in storage.


Inserting the gas cartridge

4


i

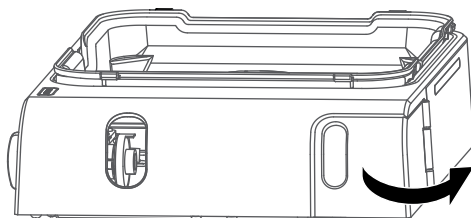


ii

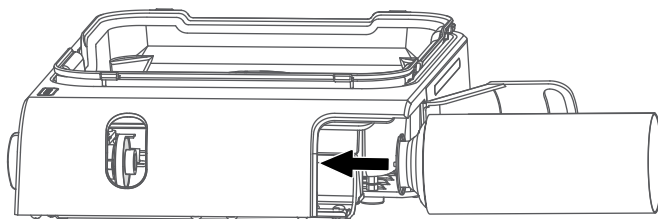

iii

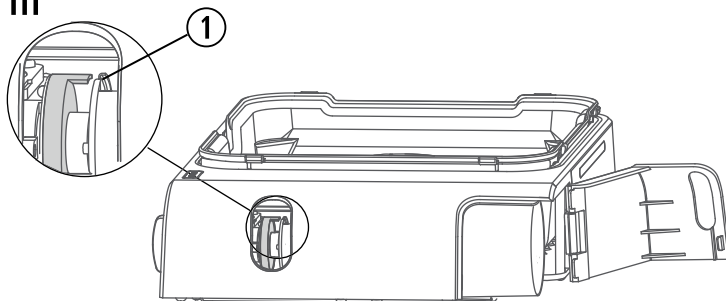

iv

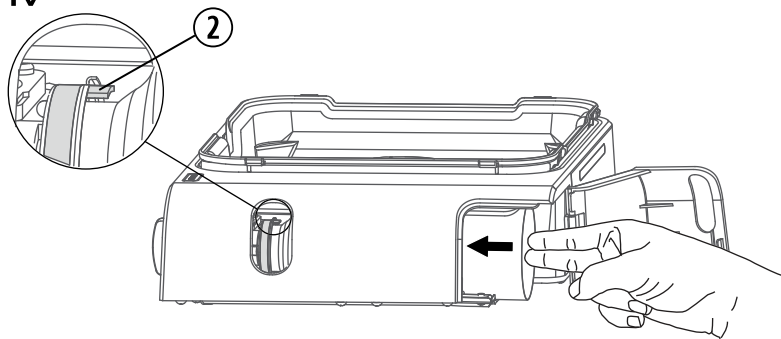

- > Before use, and before inserting the gas cartridge, visually inspect the appliance and clean away any dirt, debris, insects or spider webs that may be present.
- > Do not use an appliance that presents with worn or damaged gaskets (indicated by smell of gas). If worn or damaged gaskets are suspected, contact your nearest authorized repair agent for assistance.
- > Confirm that the control knob on the appliance is in the off-position.
- > Open the cartridge door.
- > Hold the cartridge in a horizontal position with the notch (1) in the collar of the gas cartridge facing upward, and insert the cartridge into the opening of the gas cartridge chamber.
- > Align the notch with the safety guide (2) and move the cartridge into place.
- > Make sure the cartridge is securely engaged with the magnetic lock by firmly pushing the cartridge into place.
- > Perform a gas leak test as described in *Gas leaks* on page 13.

8 Gas leaks

If there is a leak on your appliance (smell of gas), take it outside immediately into a well ventilated flame-free location where the leak can be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame; use soapy water.

Gas leak test must be conducted in a well-ventilated area, away from any sources of ignition.



DANGER! Explosion warning


- > **Always ensure gas connections are properly fitted to prevent gas leaks.**
- > **Do not smoke while performing a gas leak test.**
- > **If you suspect a gas leak (detected by the smell of gas), immediately take the appliance to a flame-free location and perform a gas leak test.**
- > **Never use a naked flame to confirm the presence of a gas leak.**

Performing a gas leak test

1. Mix a solution of water and soap, such as dish soap.
Alternatively, leak detection spray may be used in place of soapy water.
2. Apply the mixture to the connection point between the gas cartridge and the appliance.
3. If bubbles appear:
 - a) Immediately remove the gas cartridge from the appliance.
 - b) If worn gaskets are suspected, contact an authorized repair agent for assistance.
4. Refit the gas cartridge, ensuring the cartridge is sufficiently engaged to the appliance and repeat the test.
5. Should the gas leak persist after all checks have been performed, return the product to your authorized repair agent for help.

9 Operating the appliance

9.1 Switching on the appliance using the automatic igniter

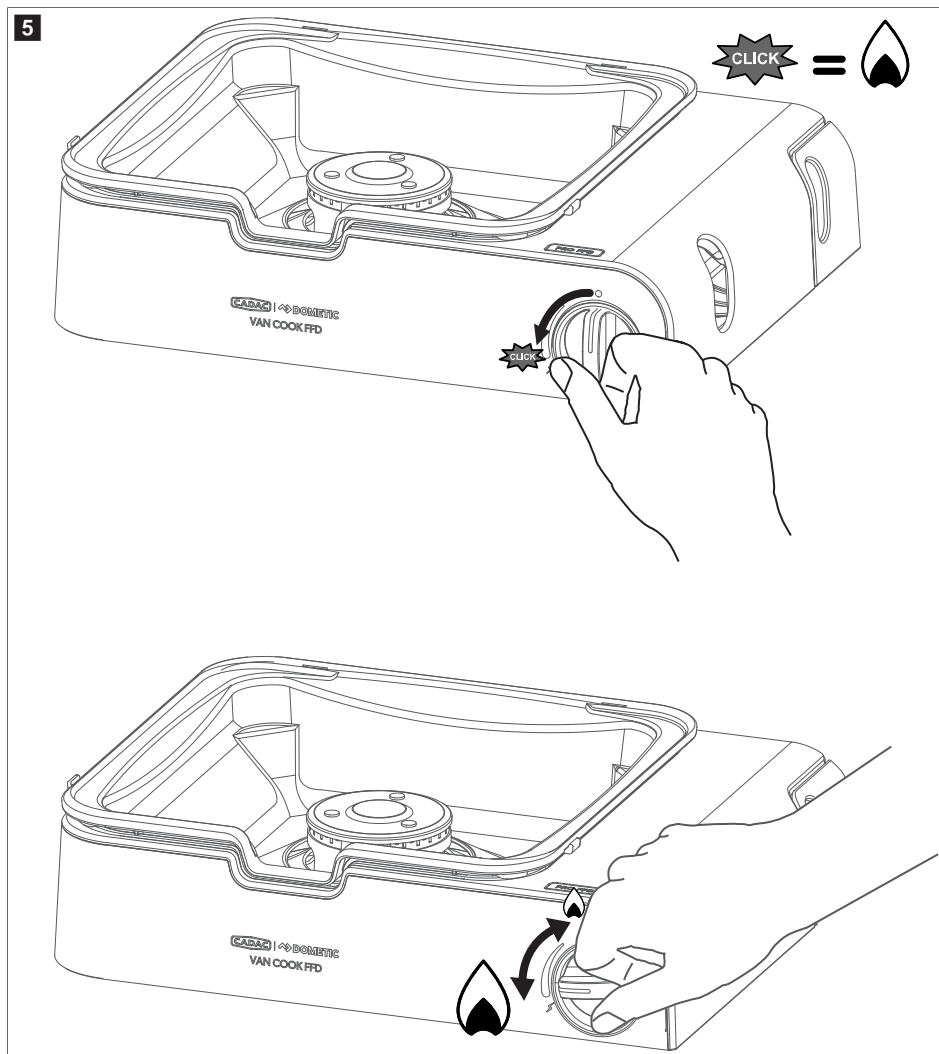

NOTE This gas appliance includes an automatic ignition built into the control knob.

1. From the off-position, turn the control knob 90° anti-clockwise until you hear a click.

2. Hold the control knob at this position for 5 s before releasing the control knob. This is to allow the gas flow to reach the burner so that ignition can take place.

Adjusting the flame intensity

Flaring may occur when cooking food with a high fat content. Should this happen, turn the heat down until the flaring ceases.

Once ignited, adjust the flame intensity:

- > Turn the control knob counterclockwise to increase the flame.
- > Turn the control knob clockwise to decrease the flame.

Ignition fails

1. Turn the appliance control knob back to the off-position.
2. Wait 30 s to let any accumulated gas within the burner escape.
3. Reattempt ignition.

Flame is extinguished during use


In the event that the flame is extinguished during use, the FFD will activate to stop the flow of gas. This action will take about 15 s to occur. Wait about 30 s to allow gas build-up to dissipate before attempting re-ignition.

1. Turn the control knob to the off-position.
2. Re-ignite the burner by following the ignition procedure.

9.2 Switching on the appliance using a barbecue lighter or matchstick

The appliance may be lit from the top of the burner prior to fitting the desired cooking surface.

6

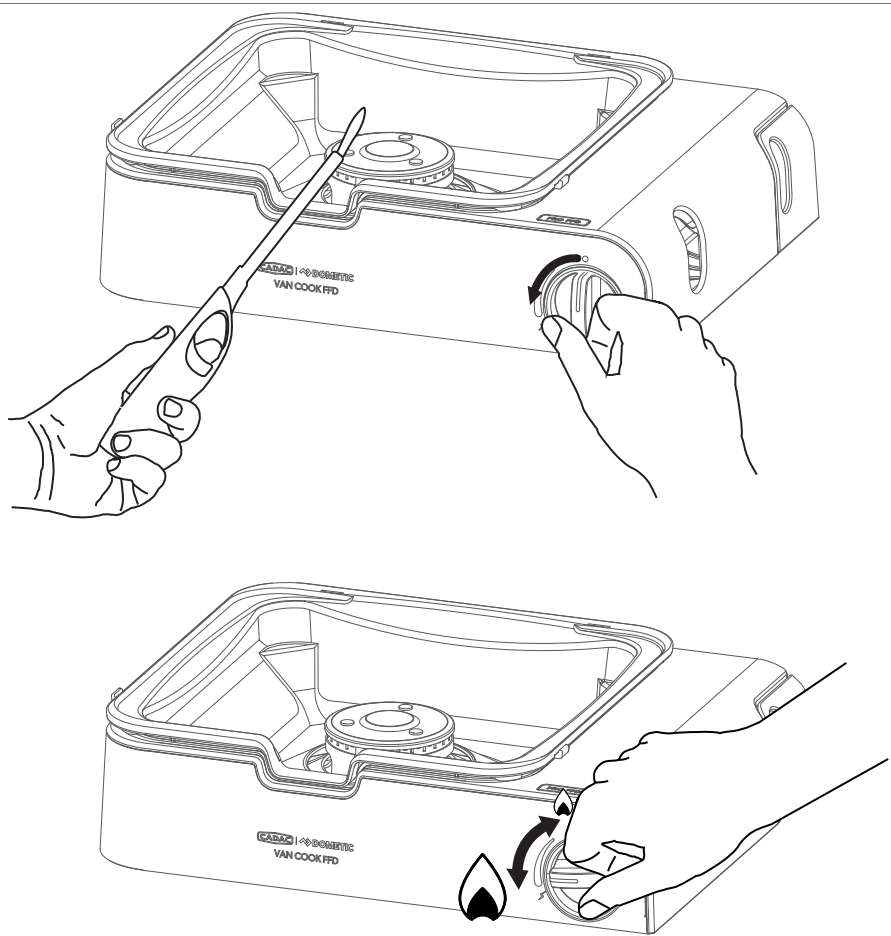

NOTE This method is used when the built-in igniter is not functioning or if it is not available.


Using a barbecue lighter

1. Hold the barbecue lighter near the burner and ignite it.
 2. Whilst the barbecue lighter is lit, slowly turn the control knob to ignite the burner.
- ✓ The gas should ignite immediately.

Using a matchstick

1. Light the matchstick and carefully bring it towards the burner.
 2. Slowly turn the control knob anti-clockwise to light the burner.
- ✓ The gas should ignite immediately.

9.3 Using the grill handle

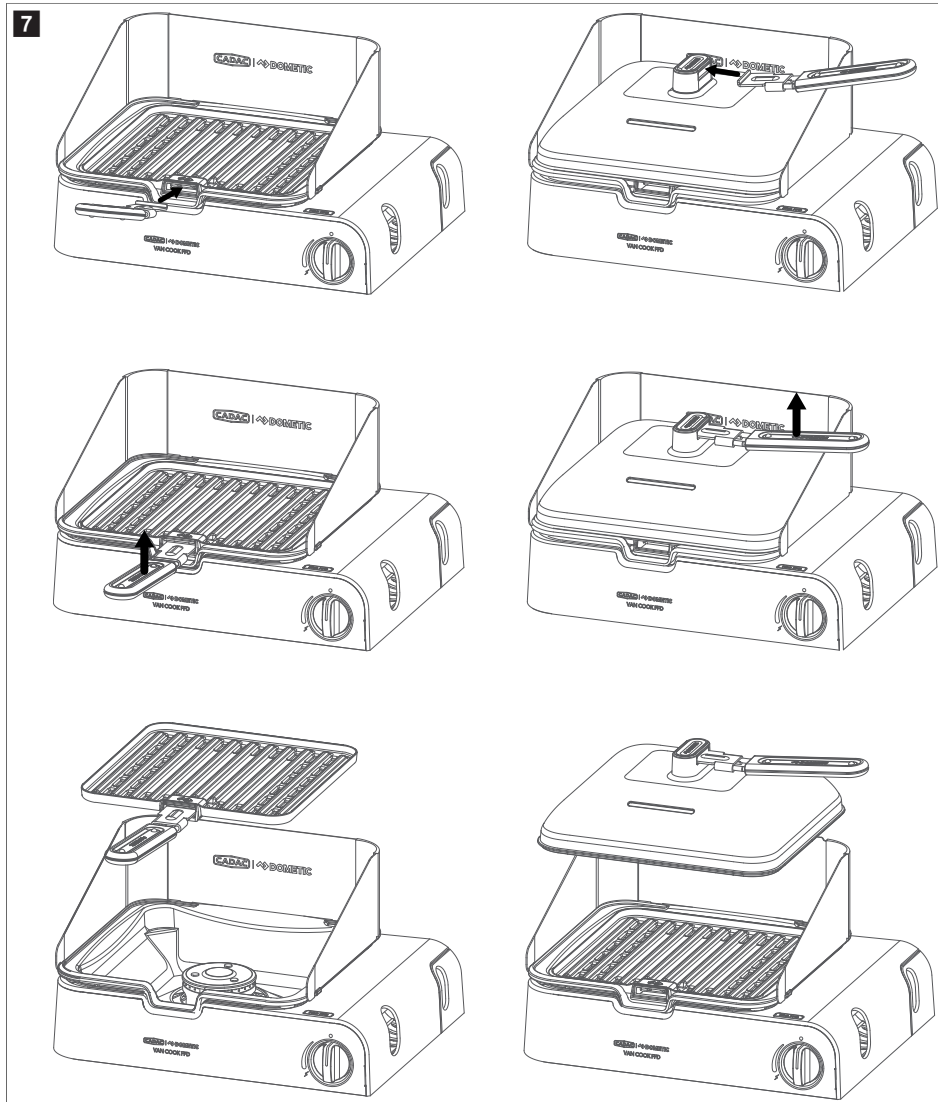


The grill handle allows for hot cooking accessories to safely be lifted and removed from the appliance.

1. Insert the grill handle into the grill handle cavity.
2. Ensure that the grill handle is fully inserted and secure within the grill handle cavity.
3. Lift the cooking accessory straight up in a steady motion and place it on a heat resistant surface, and out of the reach of children.




9.4 Turning off the appliance

8

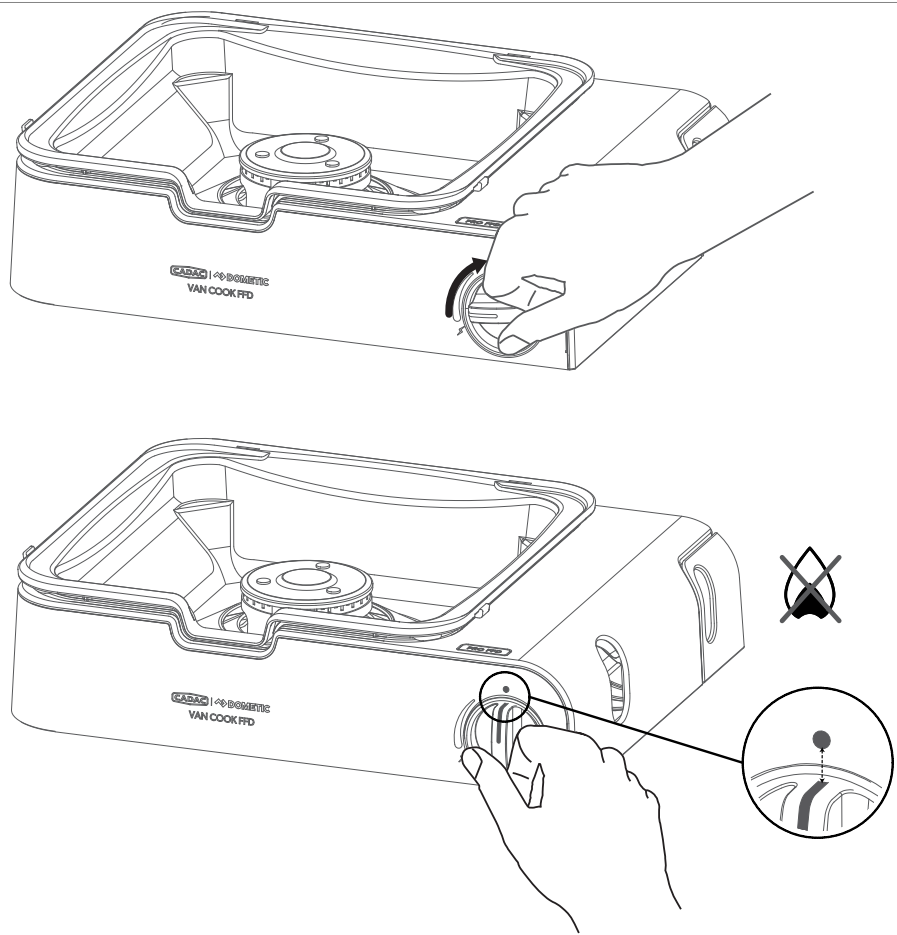

1. Turn the control knob clockwise to the off-position.
2. Once the flame is fully extinguished, remove the gas cartridge from the gas appliance.

10 Removing the gas cartridge

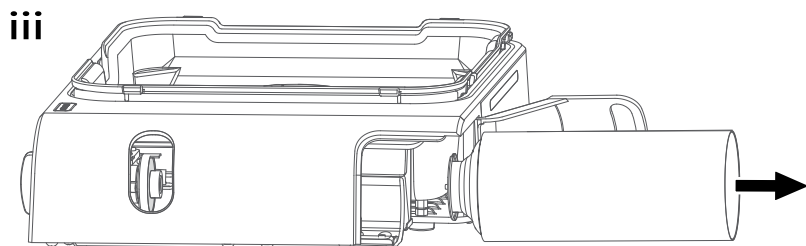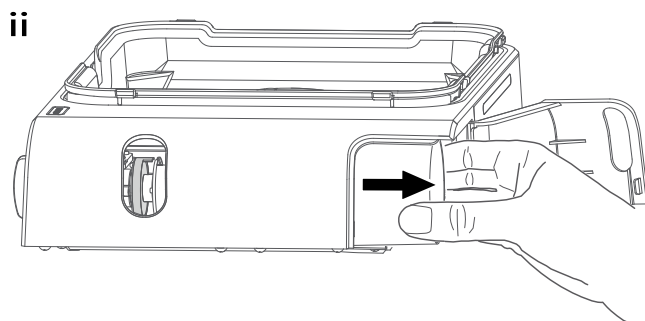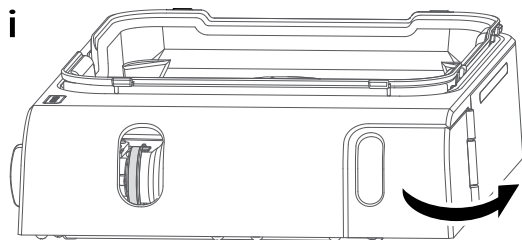9



NOTE Change the gas cartridge outside and away from people and sources of ignition.

- > Confirm that the control knob on the appliance is in the off-position.
- > Check that burners are extinguished before disconnecting the gas cartridge.
- > Open the cartridge door and remove the cartridge by pulling it gently and sliding it backwards and out of place. Keep the cartridge horizontal during the removal process.
- > Dispose of the gas cartridge if it is empty and replace with a full gas cartridge, if needed. If the gas cartridge is not empty, it may be stored for use at a later stage.
- > Follow all steps as indicated in the Fitting the gas cartridge on page 11 section when replacing or exchanging a gas cartridge.

11 Caring for your ceramic cooking surfaces

Most CADAC | Dometic cooking surfaces feature a durable ceramic coating made from inorganic materials and manufactured without intentionally adding PFOA or PFOS. Compared to traditional PTFE non-stick coatings, this ceramic surface is designed for improved wear resistance and long-lasting performance.

Prepare the cooking surface



NOTE Before first use, it is recommended that you prepare the cooking surface to improve non-stick performance and reduce food residue.

1. Apply a thin layer of cooking oil evenly over the entire cooking surface.
 2. Heat the surface over medium heat for 2 min ~ 3 min.
 3. Allow the cooking surface to cool completely.
 4. Wash the surface with warm soapy water and a sponge.
 5. Dry thoroughly and re-apply a thin layer of oil.
- ✓ The product is now ready for use.

Cooking methods

These cooking surfaces support a variety of cooking methods, including:

- **Grilling:** for fat-free grilling of meat, vegetables or fish.
- **Pan-frying:** perfect for stir-fries, fish, bacon, eggs, vegetables and pancakes.

Cooking tips



NOTICE! Damage hazard

- > To prevent damage, do not leave the cooking surface on heat without a layer of oil.
 - > Use only wooden or silicone cooking utensils. Metal utensils can scratch and damage the ceramic coating.
- For best results, use sunflower or rapeseed oil. Avoid olive oil, which has a lower burning point which may cause sticking or burning.
 - To reduce sticking, let meat or fish reach room-temperature before frying.

Cleaning your cooking surface



NOTICE! Damage hazard

- > Do not use scouring pads, steel wool, or abrasive cleaners.

Always allow cooking surfaces to cool completely before immersing in water.

- > Clean your cooking surface with warm, soapy water and a soft sponge.
- > To loosen stubborn stains or residues, soak the surface in warm, soapy water for a few minutes before washing.

Maintenance

- > After cleaning, and before storing, apply a light coat of oil to the surface to protect against moisture and air.
- > Most cooking surfaces are supplied with a convenient storage bag. To prevent oil residue transfer, place the oiled cooking surface into a plastic bag before placing into the storage bag.

Optional accessories

- Paella pan: Made from high quality pressed aluminum for even heat distribution. Ideal for paellas, risottos, pasta dishes and traditional breakfasts.
- Coffee pot stand: Provides a stable platform for coffee percolators or kettles.

12 Cleaning and maintenance

12.1 Cleaning the appliance

To prolong the lifespan of your appliance, clean the appliance thoroughly after every use.



NOTICE! Damage hazard

- > Do not immerse the appliance in water.
- > Avoid getting water into the burners, burner tubes, or pilot light area. Moisture in these parts can cause the appliance to malfunction or become unsafe.
- > Do not use abrasive cleaners, steel wool, or scouring pads. These may damage the surface of the appliance.
- > Do not use oil-based or solvent based cleaners.
- > Do not use a high-pressure steamer or water jet to clean the appliance.

Allow the appliance to cool down thoroughly before cleaning.

1. Wipe the appliance body down with a damp, soapy cloth.
2. Dry the appliance completely before storing.

12.2 Maintenance



The assembly and installation of the gas connection must be performed by a qualified person who has demonstrated skill and knowledge related to the construction, installation and operation of gas appliances and has received safety training to identify and avoid the hazards involved.

- > For safety reasons, have the device checked by a qualified person every year for proper function. Any defects must be repaired.

Replacing a blocked injector

The most common operational issues may relate to dirty or blocked injectors. Regular inspection and cleaning can prevent these problems. Indicators of a blocked injector include:

- A weak or yellowish flame.
- Ignition failure when operating the appliance.

Should you suspect a blocked injector, contact your closest service agent for assistance.

Clean or replace injectors every six (6) months for optimal performance.

13 Storage

Proper storage will help protect your appliance and prolong its lifespan.

- > Ensure that the gas supply is turned off before disconnecting it from the appliance.
- > Never store an appliance with the gas supply connected, this is unsafe practice.
- > Allow the unit to cool down and clean well before storing.
- > Store the appliance in a well-ventilated area.
- > Store gas supply outdoors in a well-ventilated area, preferably outdoors, out of the reach of children, and away from any possible sources of ignition.
- > Indoor storage must adhere to conditions as stipulated in AS/NZ 1596.

14 Troubleshooting



WARNING! Risk of injury

- > The service of the appliance must be performed by a qualified person. Contact an authorized dealer or repair agent for assistance and detail on how to return your product.
- > Do not modify the appliance.
- > Do not operate the appliance if a flames behaves abnormally. Shut off the gas flow immediately and check all connections before attempting to reignite the appliance.

Contact an authorized service agent if you observe one of the following abnormal conditions:

- Excessively yellow or sooting flame type
- Flame lifting off the burner ports
- Flame lighting back into the burner (normally associated with a popping sound)
- Objectionable odor of the flames combustion products

If a malfunction of the appliance occurs that is not described above, first refer to the following table for possible causes and remedies before contacting an authorized service agent.

Problem	Possible cause	Suggested remedy
Burner does not ignite.	Control knob is set to the off-position.	> Follow instruction for ignition as described in Switching on the appliance using the automatic igniter on page 14.
	Cartridge is not securely connected.	> Follow instruction for fitting of the gas cartridge as described in Fitting the gas cartridge on page 11.
	Burner ports are blocked.	> Clean the burner.
	Gas supply may be depleted.	> Replace gas cartridge if necessary
Burner goes out when the control knob is released	Control knob not held in long enough during ignition for flame to engage.	> Follow instruction for ignition as described in Switching on the appliance using the automatic igniter on page 14.
	Faulty igniter connection.	> Contact an authorized service agent for repair.
Uneven flame pattern or slight flame lifting	Burner ports are blocked.	> Clean the burner.
At medium flame setting, the flame is either too high or too low.	Wrong injection valve installed.	> Contact an authorized service agent for repair.

15 Warranty

If the product does not work as it should, please contact your retailer or the manufacturer's branch in your country (see dometic.com/dealer). The warranty applicable to your product is 2 year(s).

For repair and warranty processing, please include the following documents when you send in the device:

- A copy of the receipt with purchasing date
- A reason for the claim or description of the fault

Note that self-repair or nonprofessional repair can have safety consequences and might void the warranty.

This warranty policy is subject to the conditions and guarantees which are mandatory as implied by the Consumer Guarantees Act 1993(NZ).

16 Disposal



Place the packaging material in the appropriate recycling waste bins, wherever possible. Consult a local recycling center or specialist dealer for details about how to dispose of the product in accordance with the applicable disposal regulations.

17 Technical data

Type of gas	Butane
Type of gas cartridges	The appliance shall only be used with a CADAC 220 g/227 g butane cartridge with nozzle, or any other locally approved 220 g/227 g butane cartridge complying with EN417.
Gas category	Direct pressure
Jet number	0.48
Nominal rate	109 g/h
Gross nominal heat input	1.5 kW
Inspection/certification	CE

DOMETIC MOBILE COOKING NETHERLANDS B.V.

Ration 26
6921 RW Duiven
The Netherlands
Tel: +31 26 319 7740
Email: info@cadaceurope.com

DOMETIC AUSTRALIA PTY. LTD.

7 Nursery Ave, Clayton South
VIC 3169,
Australia
Tel: 1800 21 21 21

DOMETIC NEW ZEALAND LTD.

PO Box 12011
1642 Penrose, Auckland
Tel: +64 9 622 1490
Email: customerservices@dometic.co.nz

YOUR LOCAL DEALER:
www.cadacinternational.com/support

