


↗ DOMETIC REFRIGERATION MACAVE


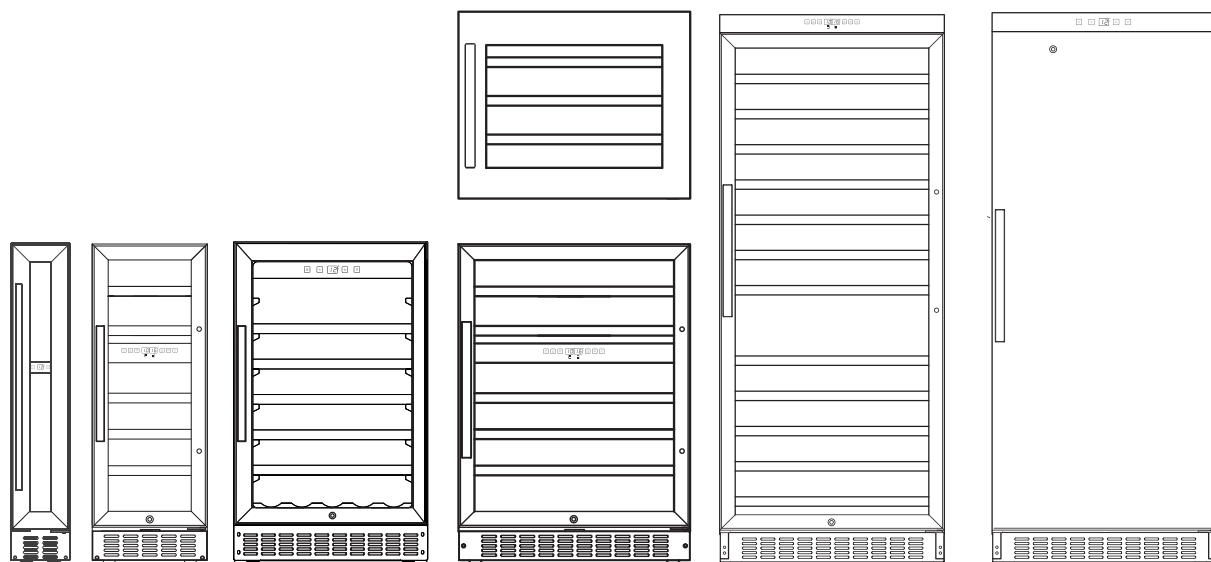







ST7,S17G,S24G,S42GS,S46G,S118G,ST198D









EN


Wine cellar



Operating manual

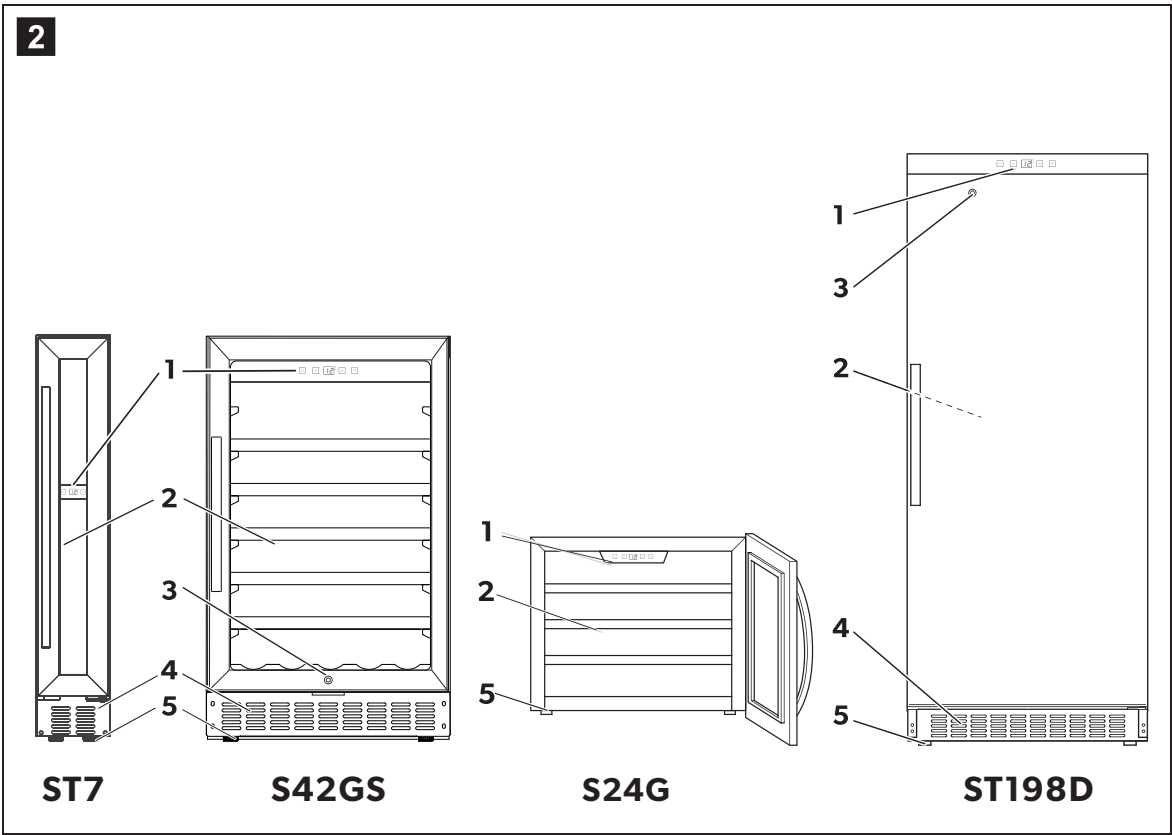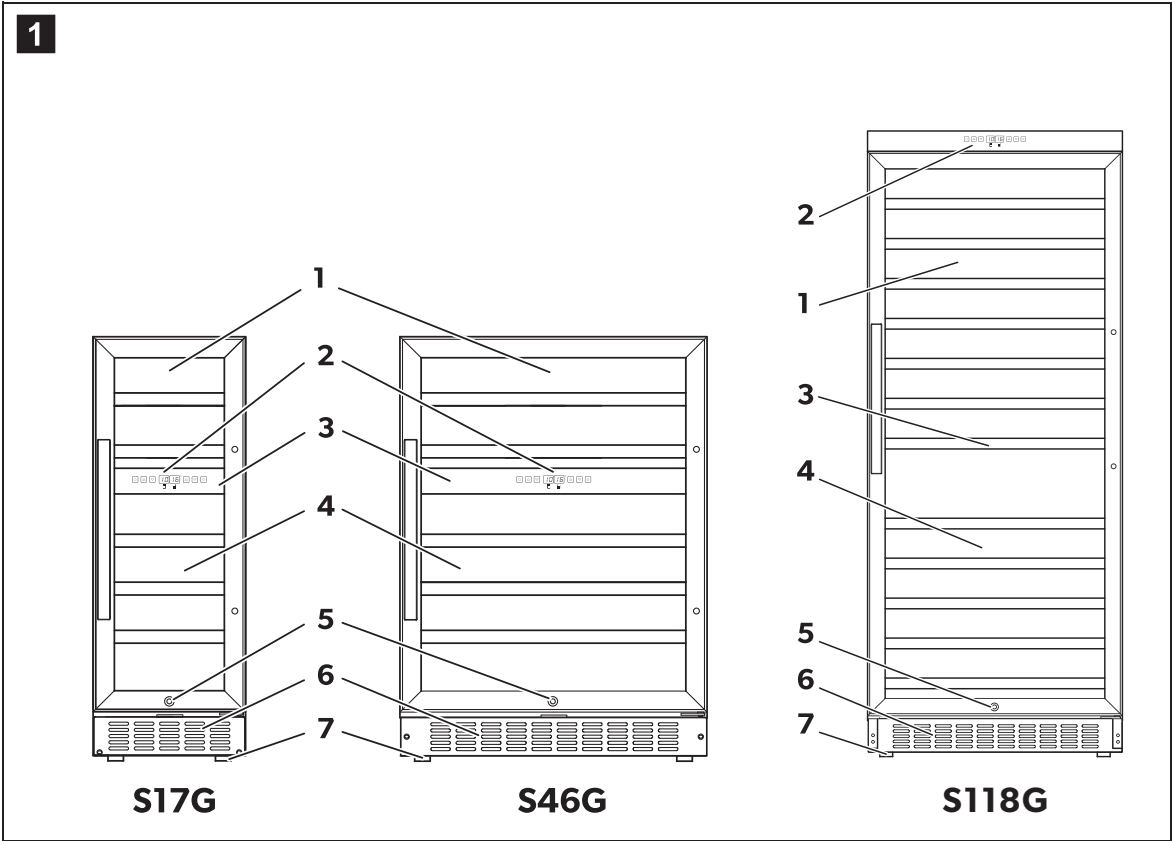


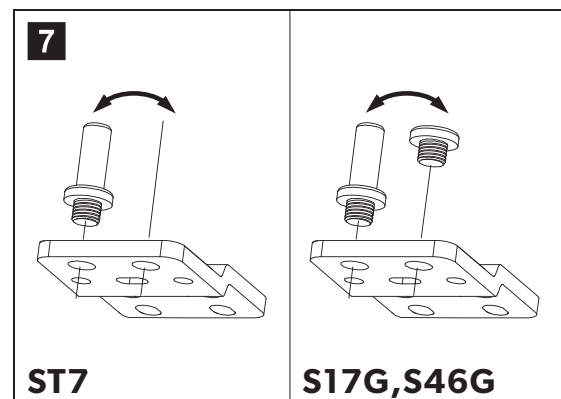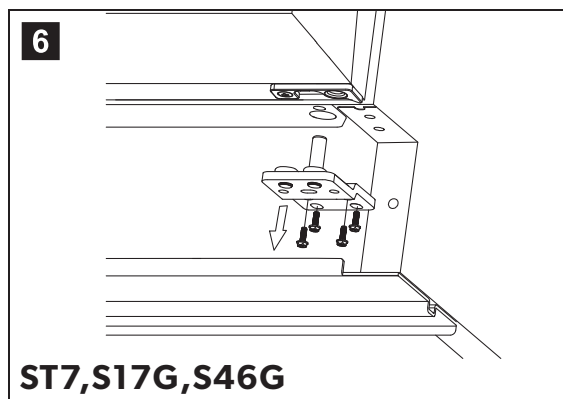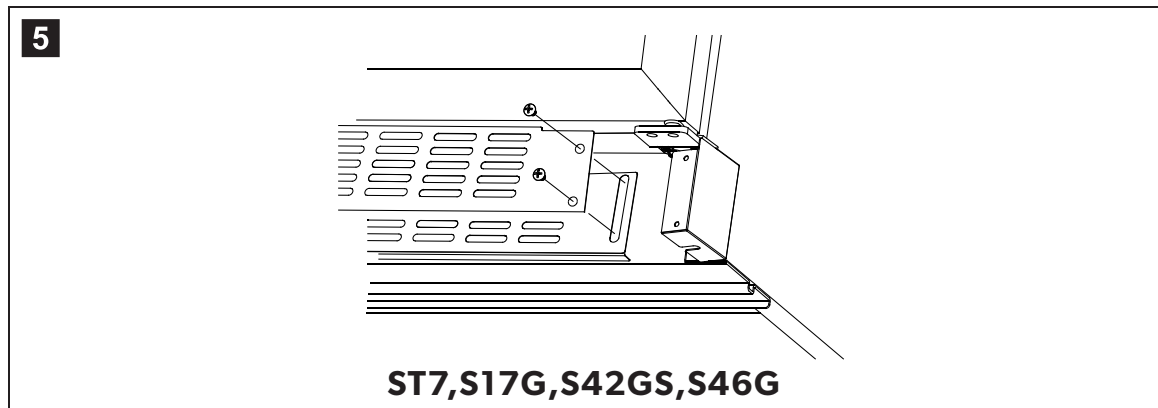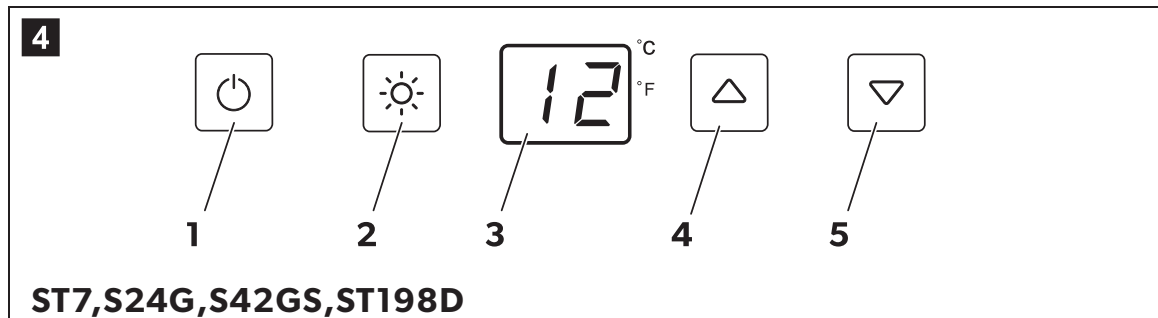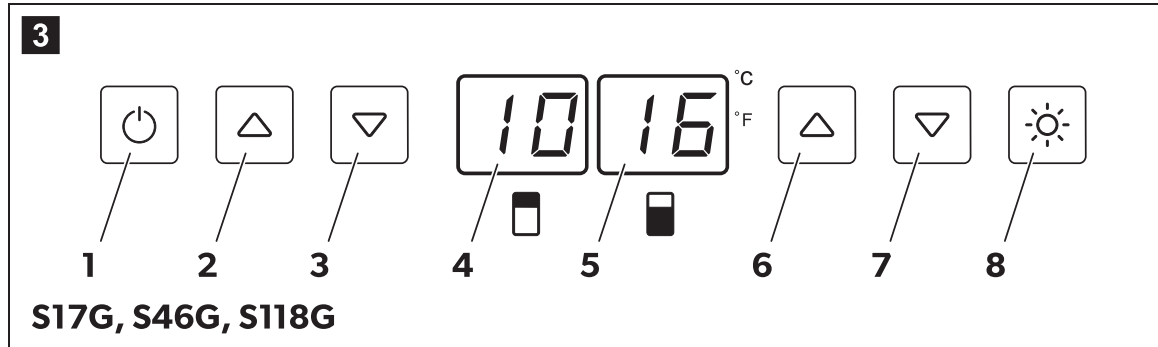

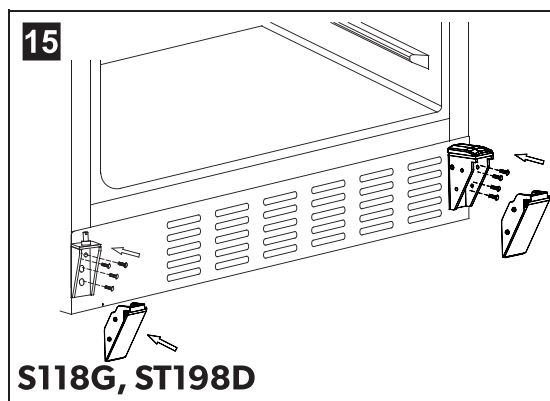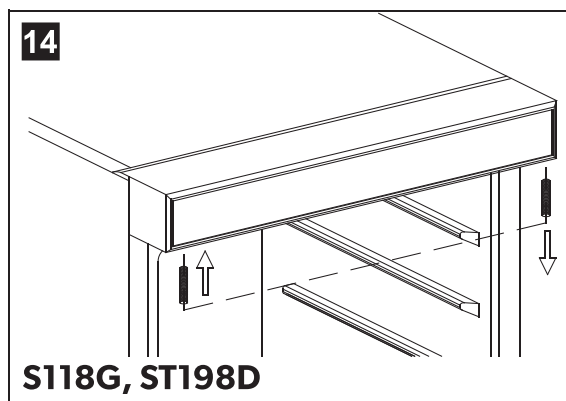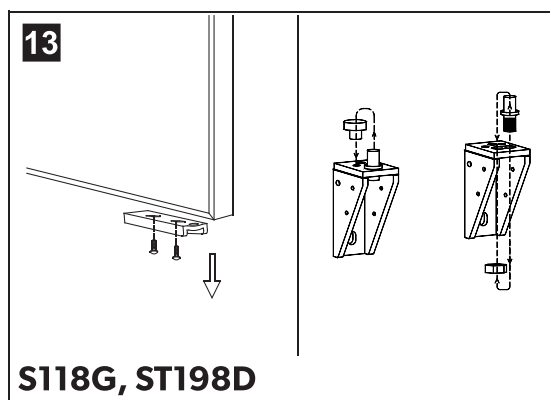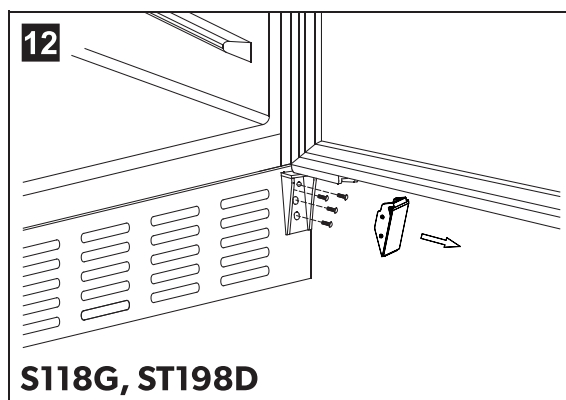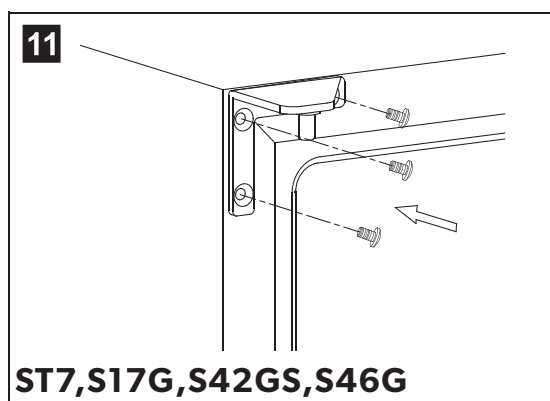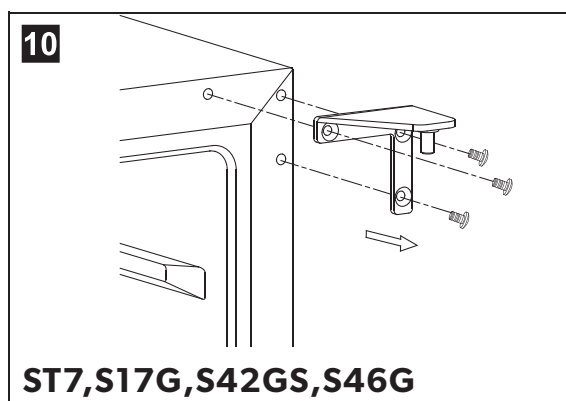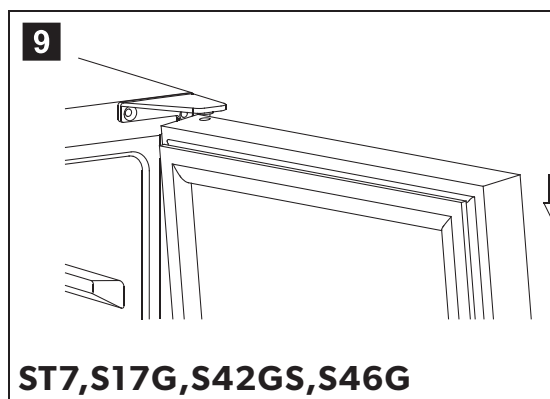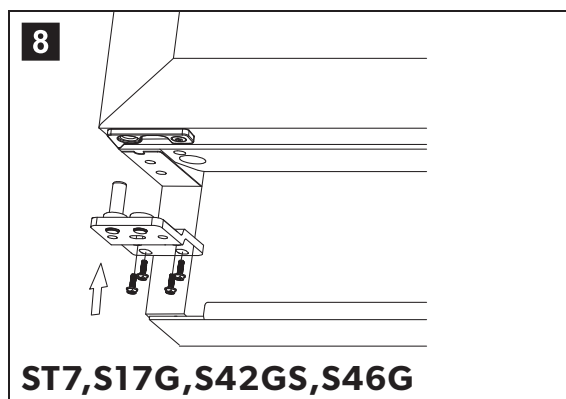

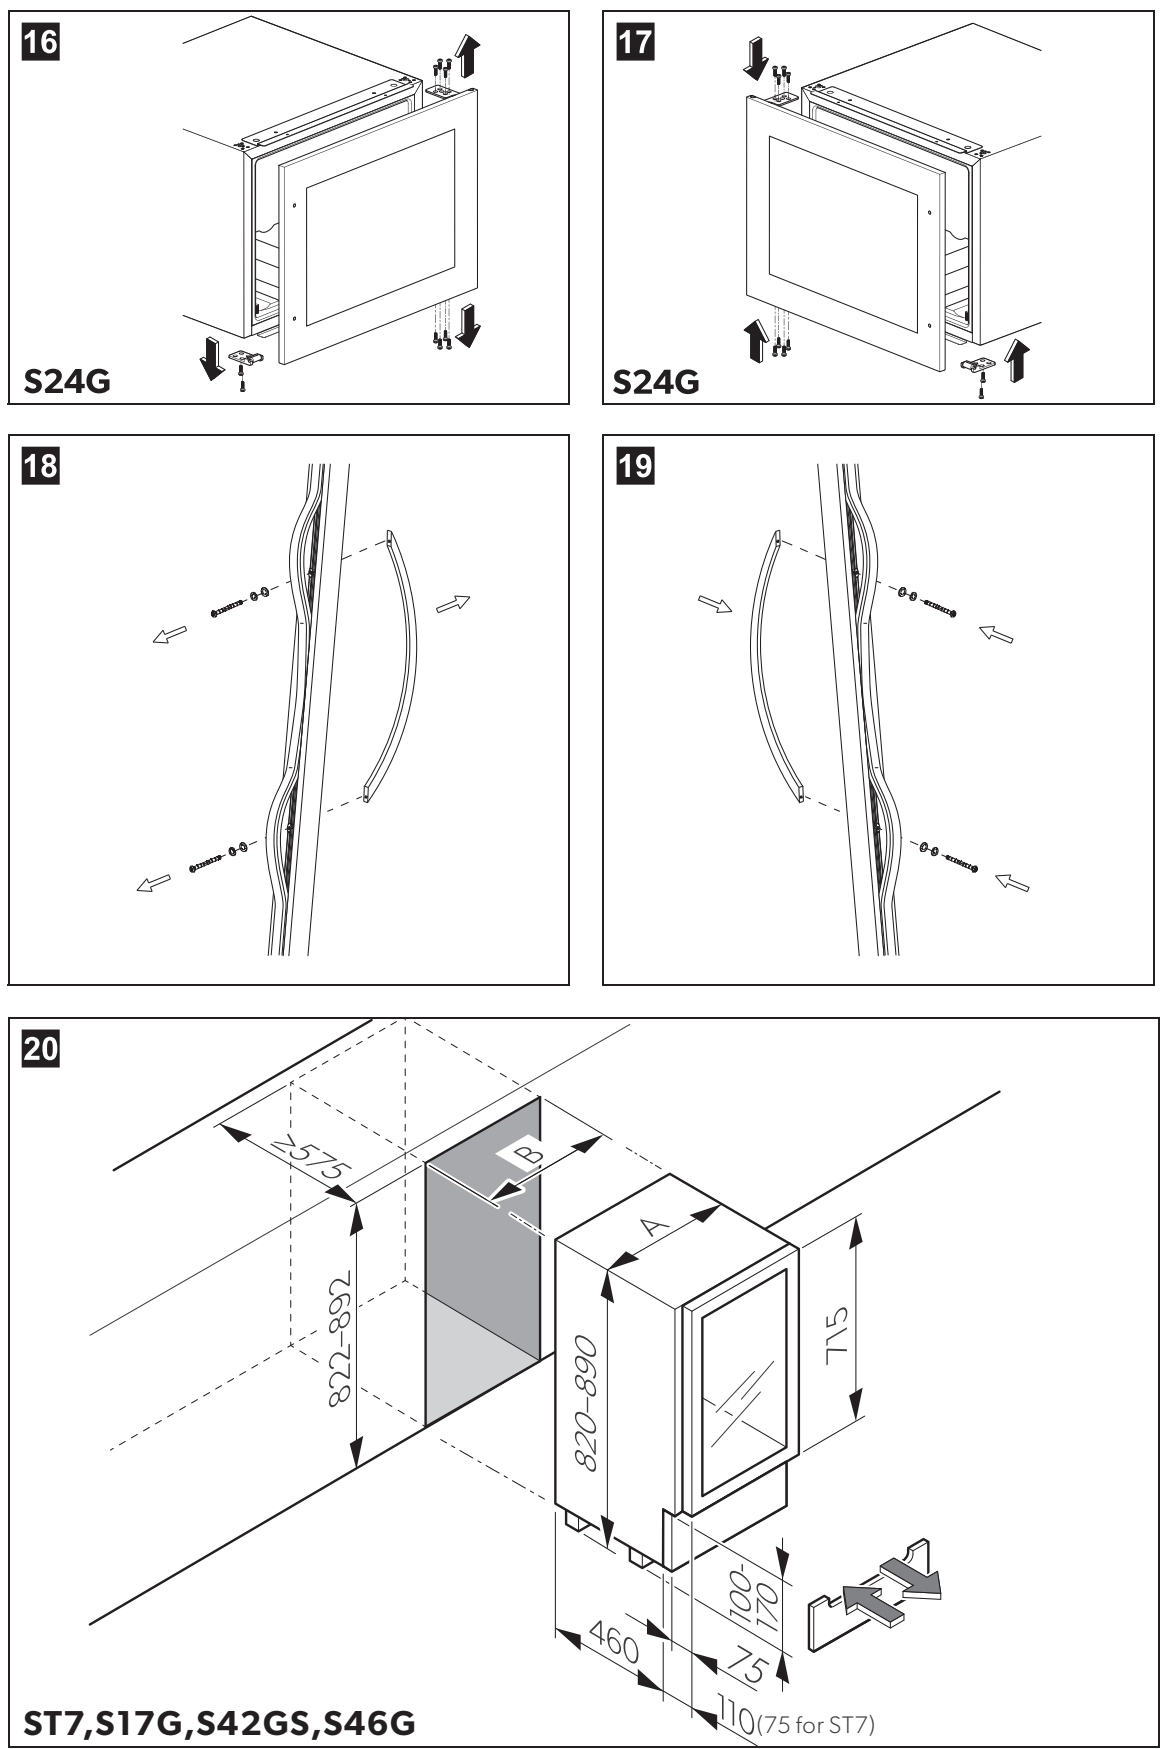


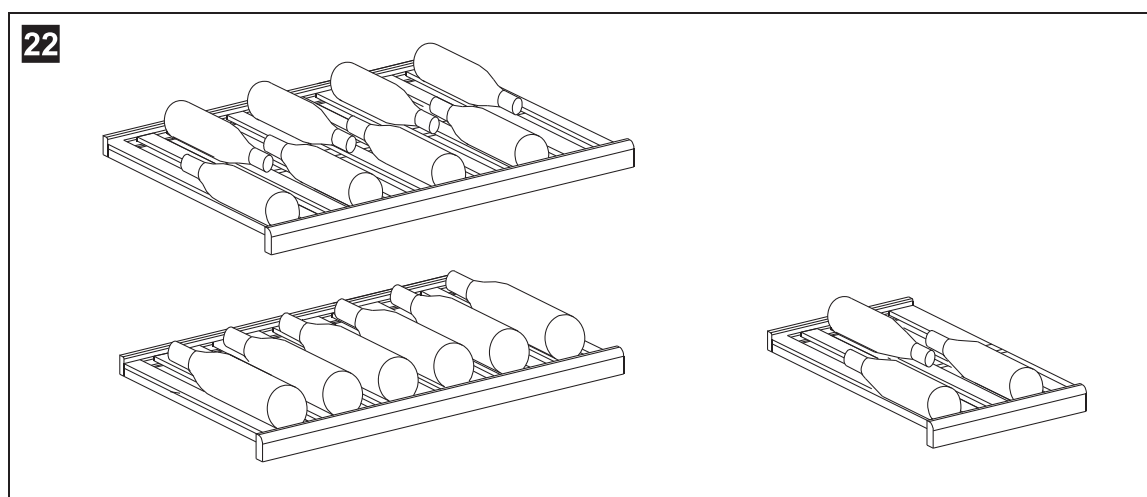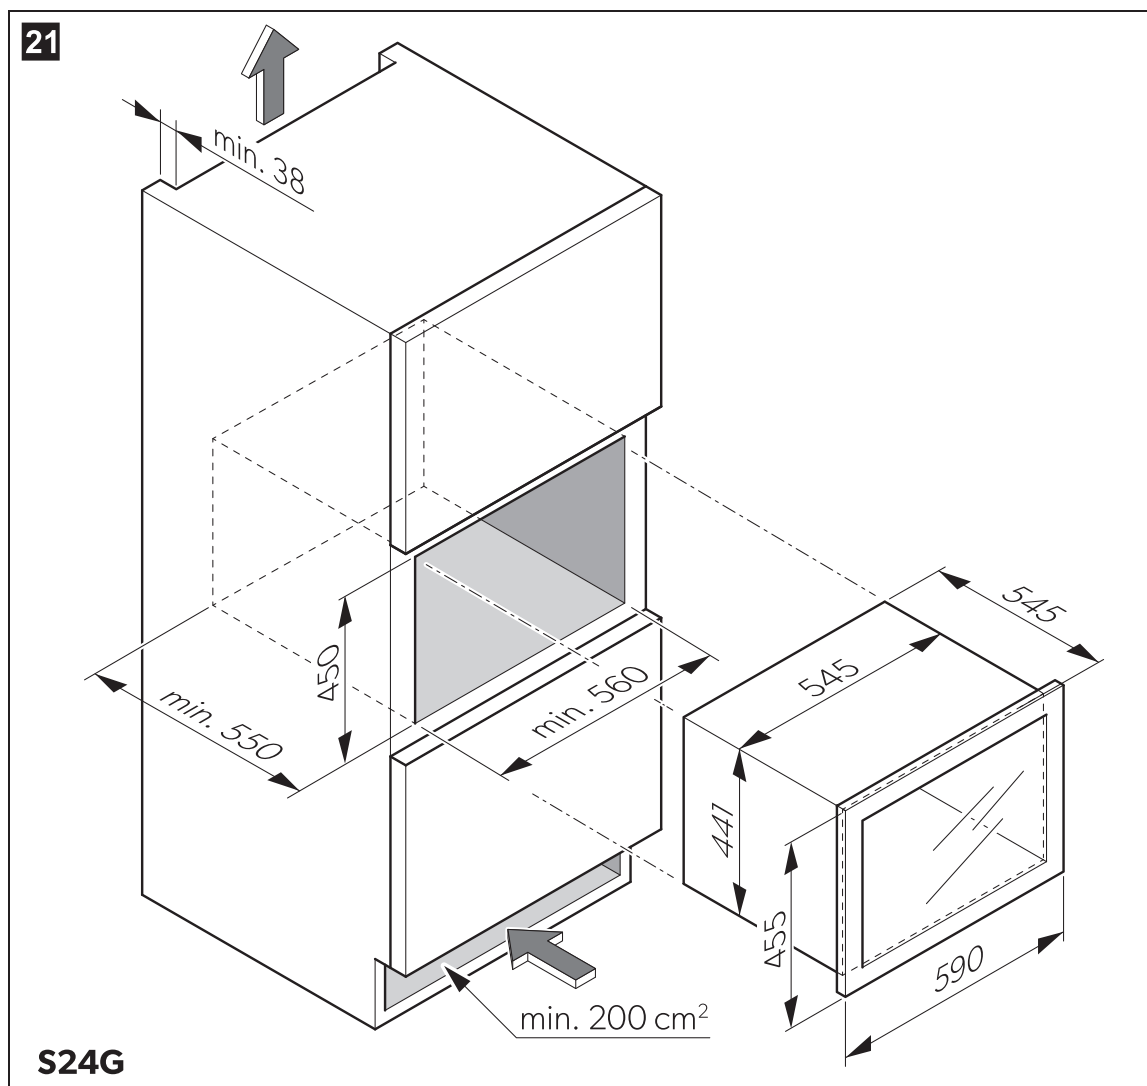

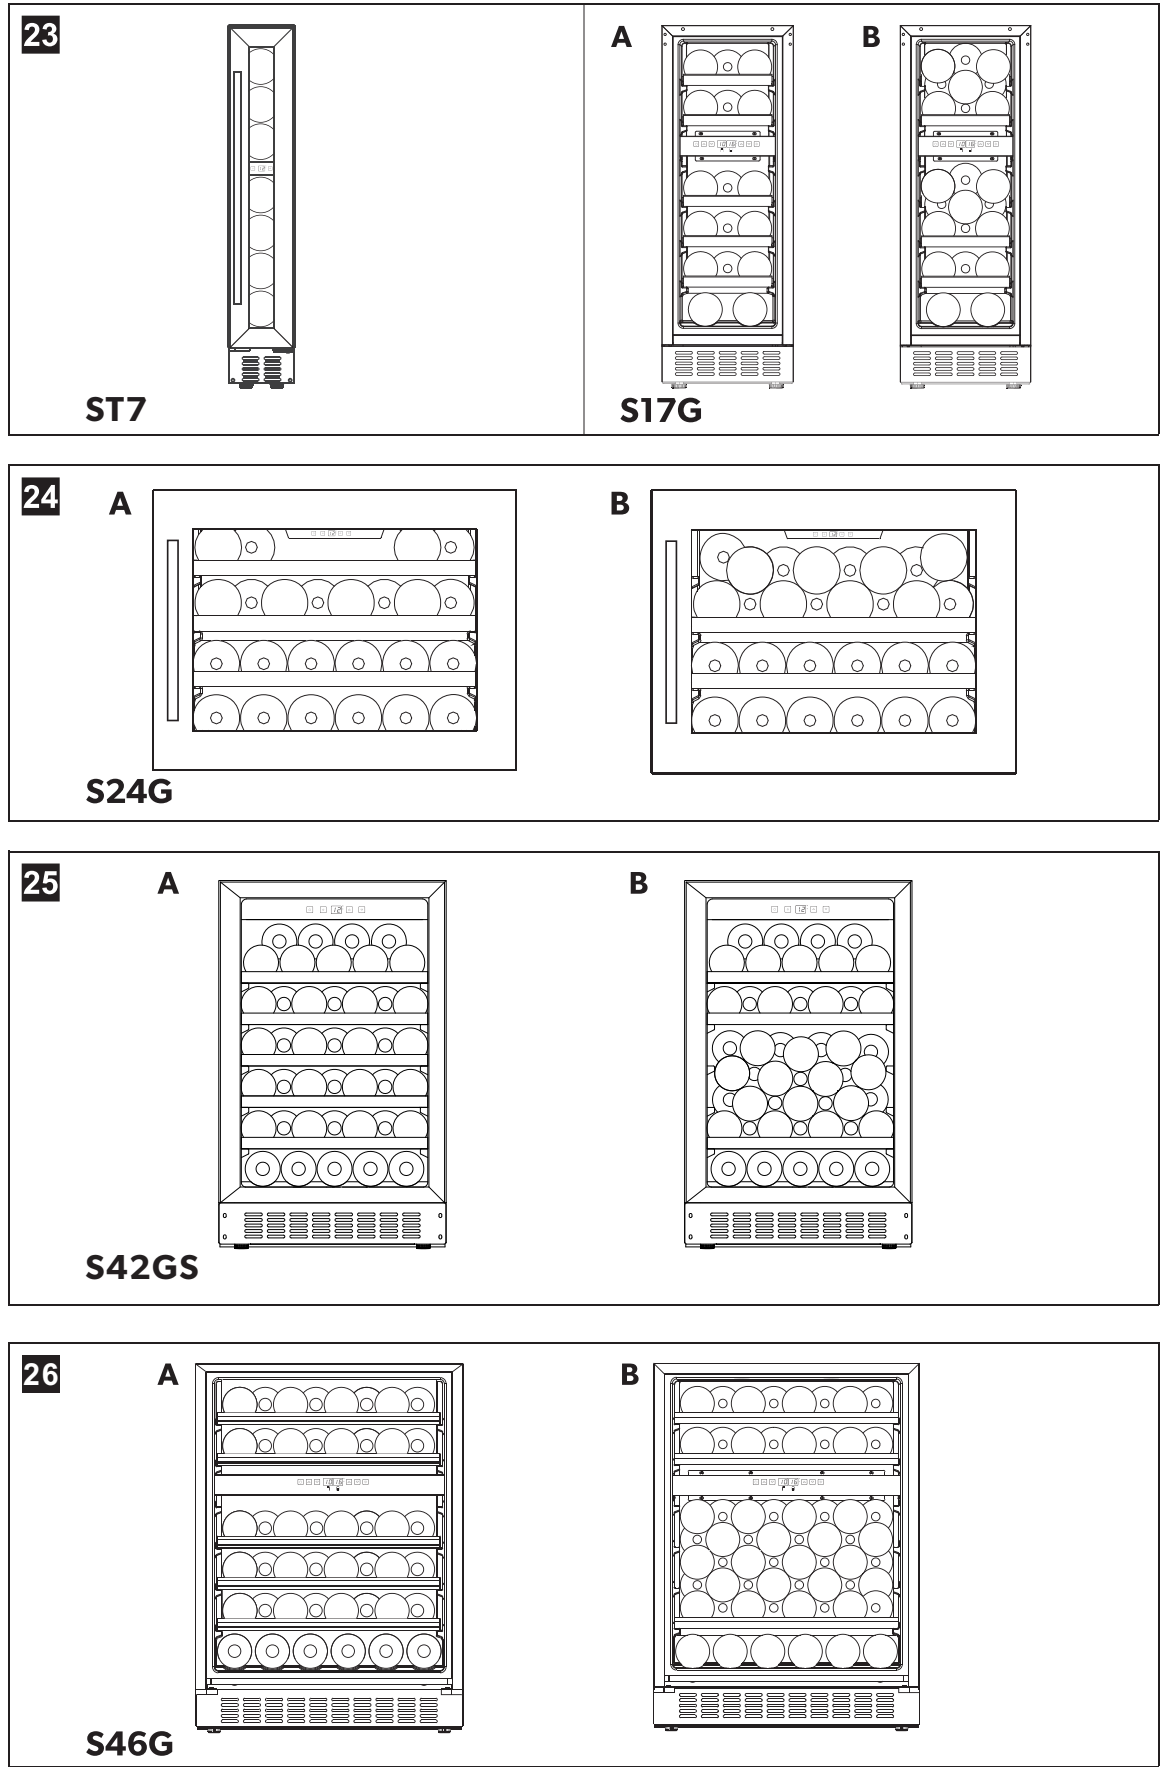


27

A

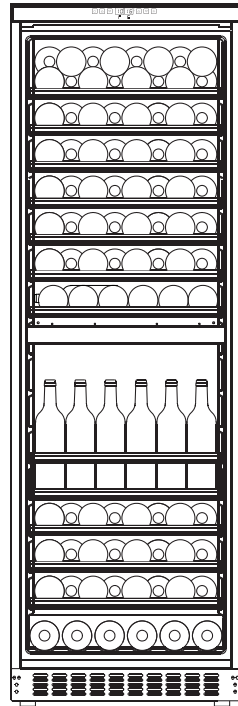


B



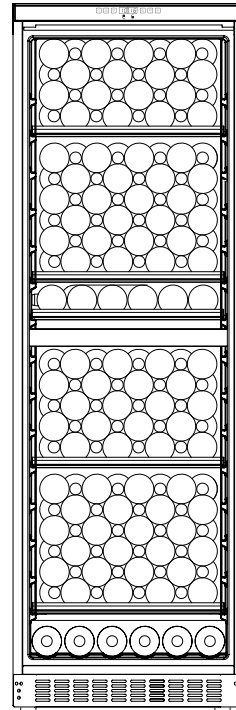


S118G

28

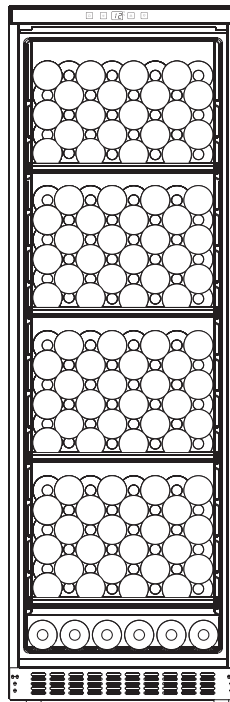

ST198D

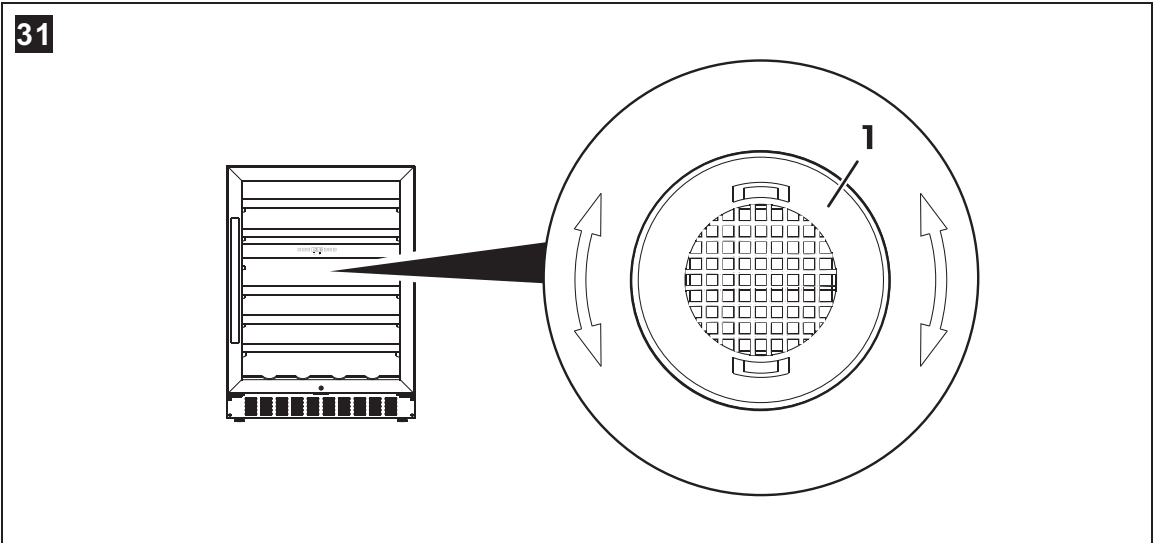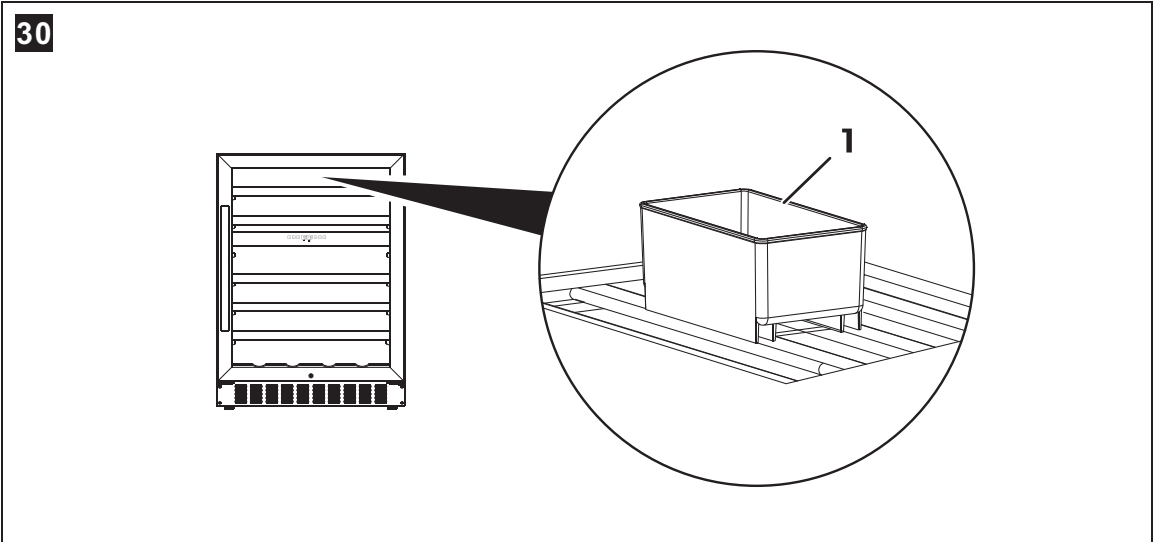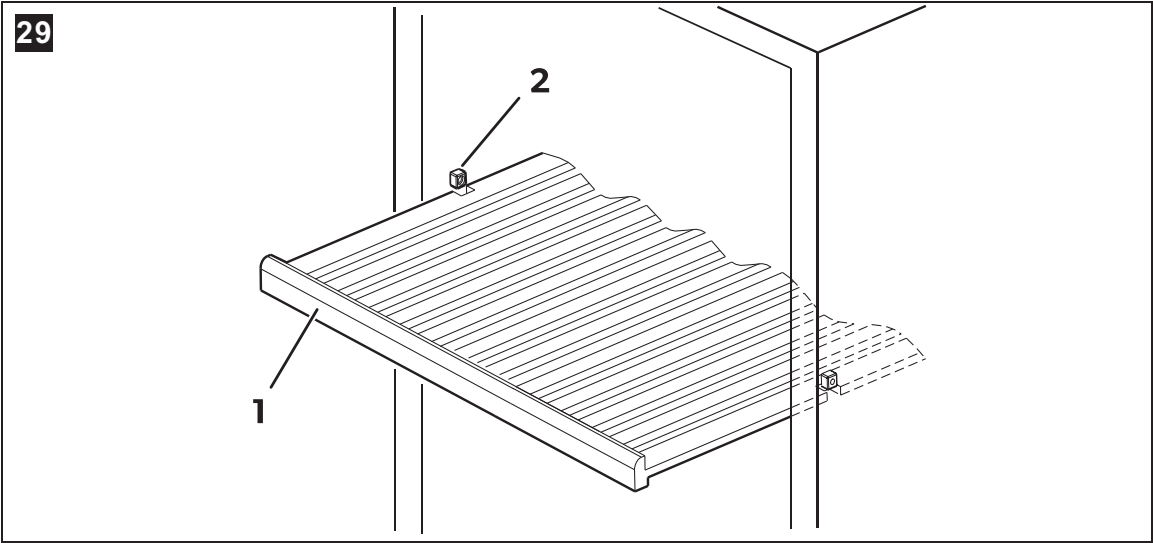

Please read this instruction manual carefully before first use, and store it in a safe place. If you pass on the product to another person, hand over this instruction manual along with it.

Contents

1	Explanation of symbols	11
2	Safety instructions	11
3	Contents of product	13
4	Optional extras	14
5	Intended use	14
6	Technical description	15
7	Setting up and connecting the appliance	18
8	Using the appliance	21
9	Troubleshooting	29
10	Maintaining and cleaning the appliance	31
11	Guarantee	31
12	Disposal	31

1 Explanation of symbols

**WARNING!**

Safety instruction: Failure to observe this instruction can cause fatal or serious injury.

**CAUTION!**

Safety instruction: Failure to observe this instruction can lead to injury.

**NOTICE!**

Failure to observe this instruction can cause material damage and impair the function of the product.

**NOTE**

Supplementary information for operating the product.

2 Safety instructions

The manufacturer accepts no liability for damage in the following cases:

- Faulty assembly or connection
- Damage to the product resulting from mechanical influences and excess voltage
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in the operating manual

2.1 General safety

**WARNING!**

- Before you start up the device for the first time, verify that the operating voltage matches the line voltage (see type plate).
- Do not operate the device if it is visibly damaged.
- This device may only be repaired by qualified personnel. Improper repairs can lead to considerable hazards.
Should your device need to be repaired, please contact customer services.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Electrical devices are not toys.**
Always keep the device out of the reach of children.
- Keep the keys out of the reach of children.
- If this device's power cord is damaged, it must be replaced by the manufacturer, customer service or a similarly qualified person in order to prevent safety hazards.
- Do not store any explosive substances, such as spray cans with propellants in the device.
- This appliance is CFC- and HFC-free and contains small quantities of Isobutane (R600a) which is environmentally friendly, but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect. Care must be taken during transportation and setting up of the appliance that no parts of the cooling system are damaged. Leaking coolant can ignite and may damage the eyes.
In the event of any damage:
 - Avoid open flames and anything which creates a spark,
 - Disconnect from the mains.
 - Air the room in which the appliance is located for several minutes and.
 - Contact the Service Department for advice.
- The more coolant there is in an appliance, the larger the room it should be installed in. In the event of a leakage, If the appliance is in a small room, there is the danger of combustible gases building up. For every 8 g of coolant at least 1 cubic meter of room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance. It is hazardous for anyone other than an Authorised Service Person to carry out servicing or repairs to this appliance. In Queensland of Australia the authorized person must hold a Gas Work Authorisation for hydrocarbon refrigerants, before carrying out servicing or repairs which involve the removal of covers.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit. Never use an appliance with a damaged circuit.

**CAUTION!**

- Disconnect the device from the power supply
 - before cleaning and maintenance
 - if you don't use it for a longer period
- The appliance should be moved and set up by at least two people. Otherwise this could lead to back or other injuries.
- Do not place the device in direct sunlight or near any heat producing appliances (heating, stoves).

**NOTICE!**

- Never pull the plug out of the electrical outlet by the cord.
- Do not use accessories that have not been recommended by the manufacturer. This can lead to injury and damage to material.

2.2 Operating the device safely

**WARNING!**

- Never use the device in rooms where flammable materials are stored or flammable gases have built up. Sparks from the motor could ignite them.

**CAUTION!**

- Do not use the device with wet hands.

**NOTICE!**

- Only use the device in indoors, never outside.
- Never expose the device to moisture.
- Keep children and pets at a safe distance when operating the device.
- Do not place any electrical devices inside the refrigerator.

3 Contents of product

- Wine cellar
- Water tank (ST7, S17G, S24G, S42GS, S46G, S118G only)
- Key (S17G, S42GS, S46G, S118G, ST198D only)
- Label set (S17G, S42GS, S46G, S118G, ST198D only)
- Door hinge (left side)
- Operating manual

4 Optional extras

Description	Ref. no.		
	S17G	S24G	S46G
Storage base	9103540117	–	9103540118
Presentation shelves (tilted)	–	–	9103540121
Label set	9103540116	–	9103540116
Active carbon filter	9103500156	–	9103500156

Description	Ref. no.	
	ST7	S42GS
Storage base	–	–
Presentation shelves (tilted)	–	9103540121
Label set	–	9103540116
Active carbon filter	–	9103500156

Description	Ref. no.	
	S118G	ST198D
Storage base	9103540119	9103540120
Presentation shelves (tilted)	9103540121	–
Label set	9103540116	9103540116
Active carbon filter	9103500156	9103500156
Service tray	9103540068	9103540068

5 Intended use

The device is a wine cellar. It is only intended for storing wine.

6 Technical description

The wine cellar is available in five models:

- **ST7:**
with capacity for up to 7 Bordeaux standard bottles
- **S17G:**
with capacity for up to 17 Bordeaux standard bottles
- **S24G:**
with capacity for up to 24 Bordeaux standard bottles
- **S42GS:**
with capacity for up to 43 Bordeaux standard bottles
- **S46G:**
with capacity for up to 45 Bordeaux standard bottles
- **S118G:**
with capacity for up to 117 Bordeaux standard bottles
- **ST198D:**
with capacity for up to 190 Bordeaux standard bottles

ST7, S17G, S24G, S42GS, S46G and **S118G**: Factory fitted with shelves.

S17G, S42GS, S46G and **S118G**: You can increase the capacity by using the optional accessory of reinforced storage shelves.

ST198D: Factory fitted with reinforced storage shelves.

You can find information on storage of bottles in chapter "Storing bottles" on page 21.

ST7, S24G, S42GS and **ST198D**: have an adjustable temperature zone.

S17G, S46G and **S118G** have two separate adjustable temperature zones.

The temperature zones are chilled or heated automatically to reach or maintain the temperature that is set.

The temperature can be set in 1 °C or 1 °F increments using sensor buttons.

The appliance has:

- Sensor buttons: Just touch slightly to select the required function.
- automatic defrosting
- a UV impervious door
- **S17G, S42GS, S46G, S118G** and **ST198D**: an active carbon filter for improving the inner climate
- a fan for maintaining a constant inner climate, such as in a cellar (dynamic cooling mode)

- **S17G, S42GS, S46G** and **S118G**: a lockable glass door with a reversible door hinge
ST7 and **S24G**: glass door with a reversible door hinge
ST198D: a lockable door with a reversible door hinge
- detachable shelves for storing the bottles.
- a Sabbath mode.
- LED interior lighting with two operating modes.
- a temperature memory function: The set temperature is also saved when the unit is switched off.
- a temperature monitor: A warning signal sounds and the temperature display flashes if the interior temperature noticeably deviates from the one set.

Overview (S17G, S46G, S118G)

No. in fig. 1, page 2	Designation
1	Upper temperature zone
2	Control panel
3	Cooling area divider
4	Lower temperature zone
5	Lock
6	Ventilation slots
7	Adjustable feet

Overview (ST7, S42GS, S24G, ST198D)

No. in fig. 2, page 2	Designation
1	Control panel
2	Cooling area
3	S42GS, ST198D : Lock
4	ST7, S42GS, ST198D : Ventilation slots
5	Adjustable feet

Control elements(S17G,S46G,S118G)

No. in fig. 3, page 3	Symbol	Description
1		On/off switch
2		Increases the set temperature of the upper temperature zone by 1 °C or 1 °F
3		Decreases the set temperature of the upper temperature zone by 1 °C or 1 °F
4		Display indicates the current temperature of the upper temperature zone
5		Display indicates the current temperature of the lower temperature zone
6		Increases the set temperature of the lower temperature zone by 1 °C or 1 °F
7		Decreases the set temperature of the lower temperature zone by 1 °C or 1 °F
8		Switches the interior light on or off

Control elements(ST7,S24G,S42GS,ST198D)

No. in fig. 4, page 3	Symbol	Description
1		On/off switch
2		Switches the interior light on or off
3	–	Display indicates the current temperature
4		Increases the set temperature of the upper temperature zone by 1 °C or 1 °F
5		Decreases the set temperature of the upper temperature zone by 1 °C or 1 °F

7 Setting up and connecting the appliance

7.1 Notes on setting up the appliance

ST7,S17G,S42GS,S46G,S118G and **ST198D** can be placed free-standing.

When selecting the location, observe the following instructions:

- The ambient temperature should be in accordance with the climate class mentioned for your country in the supplementary brochure. Otherwise, it is possible that the inner temperature you set cannot be reached or maintained. This could also be the case if there are extreme fluctuations in the ambient temperature.
- The appliance should stand in the coldest part of the room, away from heat sources (ovens, heating devices or radiators).
- The location must not be damp or wet.
- The appliance must not be exposed to direct sunlight. This can damage the acrylic coating and lead to higher power consumption.
- The ground must be level and sufficiently stable to support the wine cellar at full capacity.
- The appliance must be sufficiently ventilated. The ventilation slots on the front of the appliance must not be obstructed.
- Note the information on the electrical connection, see chapter "Notes on the electrical connections" on page 21.
- Remove all the inner and outer packaging material before setting up.
- Make sure the appliance is level by adjusting the feet.
- To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm house and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications;

7.2 Notes on installing the appliance



NOTICE!

- When mounting ensure that the ventilation openings are kept free. Covered ventilation openings result in an increase of electricity consumption and can damage the device.
- When pushing the appliance into place, ensure that the mains cable does not get pinched.

ST7, S17G, S42GS and **S46G** can be mounted into a kitchen plinth beneath the kitchen counter.

S24G, S118G and **ST198D** can be mounted into a kitchen cabinet .

ST7, S17G, S42GS and S46G installation (fig. 20, page 5)

- Check the dimensions (in mm):

	Width	Depth	Height
ST7	150	min. 575	822-892
S17G	300	min. 575	822 – 892
S42GS	500	min. 575	822-892
S46G	600	min. 575	822 – 892

- If using a plinth:
Ensure that the ventilation openings in the plinth have a cross-section of at least 300 cm².

S118G and ST198D installation

- Check the dimensions (in mm):

	Width	Depth	Height
S118G	600	min. 575	1815
ST198D	600	min. 575	1815

S24G installation (fig. 21, page 6)

- Check the dimensions (in mm):

	Width	Depth	Height
S24G	560	550	450

- Warmed air must be dissipated via a ventilation shaft at the rear side.
- The ventilation shaft must have a cross-section of at least 300 cm².
- The plastic seals included are mounted to seal right and left between the device and the kitchen unit.

7.3 Reversing the door

You can also change the hinge of the door, so that it opens to the left rather than the right.

ST7,S17G,S42GS and S46G

- Change the door as described in fig. 5, page 3 to fig. 11, page 4.
Turn the door by 180° for ST7.
- Fit the door handle on the other side as described in fig. 18, page 5 to fig. 19, page 5.

S118G

- Change the door as described in fig. 12, page 4 to fig. 15, page 4.
- Fit the door handle on the other side as described in fig. 18, page 5 to fig. 19, page 5.

ST 198D

- Change the door as described in fig. 12, page 4 to fig. 15, page 4.
Turn the door by 180°.
- Move the closing solenoid to the opposite position.

S24G

- Change the door as described in fig. 16, page 5 to fig. 17, page 5.
Turn the door by 180°.

7.4 Notes on the electrical connections

**NOTICE!**

Leave the appliance to stand upright for about 2 hours after transporting, before you connect it to the power supply. Otherwise this could cause faults in the cooling system.

Observe the following when connecting the appliance:

- Connect this appliance to a 15 A circuit.
- Check that the voltage specification on the type plate is the same as that of the power supply.
- If you are using an extension cord, it must be suitable for the values which correspond to the device, see chapter “Technical data” on page 33.
- Do not use an extension cord or a multiple power socket that can be switched off with just one switch.
- The cord must rest securely behind the appliance and not be allowed to lie or hang unprotected.

8 Using the appliance

8.1 Storing bottles

**NOTICE!**

Be sure to use reinforced storage shelves (accessory) if you want to stack bottles.

Notes on the use

- Only store wine in unopened bottles.
- Do not overload the device.
- Fig. **22**, page 6, shows you how you can store the bottles.
- Do not cover the shelves with aluminium foil or any other objects, as this obstructs the air circulation.
- If the device has been empty for a long time, disconnect it from the power supply and clean it thoroughly. Leave the door open slightly to allow the air to circulate and prevent condensation, mould or odours from building up.
- After a power outage or if the appliance has been switched off, wait 3 to 5 minutes before switching on the appliance again.

The following variants are possible:

- **ST7:** (fig. **23**, page 7)
- **S17G:**
 - with shelves (fig. **23** A, page 7)
 - with storage shelves (accessory) (fig. **23** B, page 7)
- **S24G:**
 - with 3 shelves (fig. **24** A, page 7)
 - with 2 storage shelves (fig. **24** B, page 7)
- **S42GS:**
 - with shelves (fig. **25** A, page 7)
 - with storage shelves (accessory) (fig. **25** B, page 7)
- **S46G:**
 - with shelves (fig. **26** A, page 7)
 - with storage shelves (accessory) (fig. **26** B, page 7)
- **S118G:**
 - with shelves (fig. **27** A, page 8)
 - with storage shelves (accessory) (fig. **27** B, page 8)
- **ST198D:** (fig. **28**, page 8)

8.2 Energy saving tips

- Do not open the device more often than necessary.
- Do not leave the door open for longer than necessary.
- Clean dust and dirt from the condenser at regular intervals.

8.3 Using the appliance

Quick reference

Function	Press the button
Switches on the appliance	 > 1 s
Switches off the appliance	 > 5 s
Removes the key lock	 +  > 5 s
Changes the unit (°C / °F)	 > 5 s
Indicates the set temperature of the temperature zone	 or  < 1 s
Increases the temperature in the temperature zone by 1 °C or 1 °F	 < 1 s
Decreases the temperature in the temperature zone by 1 °C or 1 °F	 < 1 s
Switches off the fan (silent mode)	 > 5 s
Switches on the fan (dynamic cooling)	 > 5 s
Switches interior light on/off	 < 1 s

S118G, ST198D: Key lock

If the buttons are not touched for 2 minutes or longer, the key lock is activated automatically.

- To remove the key lock, press the  and  buttons for at least 5 seconds.

Sets the unit (°C / °F)

You can select the temperature in Fahrenheit or Celsius.

- To do this, press the  button for 5 seconds.
- ✓ The unit is converted and the display shows the temperature in the other form.

Setting the temperature

ST7, S24G, S42GS and **ST198D** has an adjustable temperature zone. The temperature can be set between 5 °C and 22 °C (41 °F and 72 °F).

S17G, S46G and **S118G** have two separate adjustable temperature zones. The temperature of each zone can be set between 5 °C and 22 °C (41 °F and 72 °F).

The **lower** temperature zone is ideal for storing white and red wine  at 13 °C to 22 °C (55 °F to 72 °F).

The **upper** temperature zone  is suitable for storing champagne and white wine at a setting of 5 °C to 13 °C (41 °F to 55 °F).



NOTE

- The temperature for the **lower** temperature zone  must always be just as high or higher than the **upper** temperature zone .
- The appliance functions at its best if the difference in temperature between the two zones is at least 4 °C.

- Press the  or  button to set the temperature.
- ✓ The display flashes while you make the setting.
- ✓ After the temperature has been set, the display shows the current inner temperature of the particular temperature zone.

**NOTE**

When using the appliance for the first time or if it has not been used for a long time, the inner temperature could differ from the one you have set. The temperature display flashes as long as this is the case. Once the set temperature has been reached, the temperature display remains lit.

Checking the set temperature

This is how to display the set temperature:

- Press the  or  button briefly.
- ✓ The set temperature is shown in the display for 5 seconds. Then the display shows the current inner temperature again.

**NOTE**

In the event of an interruption to the power supply (power failure, switch over) the unit saves the previous temperature settings.

Temperature monitoring

A warning signal sounds and the temperature display flashes:

- if the inner temperature of a zone deviates from the set temperature by more than 5 °C.
- if the power supply has been disconnected for a long time.
- if the door has not been shut properly.
- if the door is open for more than 60 seconds.

This prevents the temperature from falling or rising unnoticed, which could affect the quality of the wine.

Once the unit has reached the set temperature, the warning signal stops and the temperature display stops flashing.

To switch off the warning signal prematurely:

- Press the  button briefly.
- ✓ The temperature display flashes until the set temperature is reached. The display is then illuminated constantly and indicates that the alarm system is active again.

Using the Sabbath mode

In this mode, the display, interior lighting and warning signal for the temperature monitor are deactivated. The refrigeration continues as usual.

To switch on the Sabbath mode:

- Press the  and  buttons simultaneously for at least 5 seconds.
- ✓ The temperature display flashes 4 times. The Sabbath mode is activated. The Sabbath mode switches off automatically after 96 hours.

To switch off the Sabbath mode:

- Press the  and  buttons simultaneously for at least 5 seconds.
- ✓ The temperature display flashes 4 times. The Sabbath mode is deactivated. The display, interior lighting and warning signal for the temperature monitor are activated.

Setting the LED interior lighting

The unit has two different modes for lighting:

- Standard mode: The interior is illuminated when the door is opened.
- Vitrine mode: The interior is illuminated constantly.

To switch between standard and vitrine modes:

- Press the  buttons briefly.

Set fan mode (Dynamic Cooling Mode/Silent Mode)

The fan runs normally only when required (silent mode). In silent mode, the fan switches off when the set temperature is reached.

Switch the fan to dynamic cooling mode to create an homogeneous climate for the interior of a temperature zone. The fan runs permanently to regulate humidity and temperature.

This is how to switch on the fan (Dynamic Cooling Mode):

- Press the  button for > 5 seconds.
- ✓ 5 acoustic signals are emitted.
The fan is switched on (Dynamic Cooling Mode).

This is how to switch off the fan (Silent Mode):

- Press the  button for > 5 seconds.
- ✓ 3 acoustic signals are emitted.
The fan is switched off (Silent Mode).

Cabinet shelves

The shelves can be pulled out by a third except of ST7 and ST198D so that you can reach the wine bottles easily. The shelves have a limit stop to prevent them from being pulled out too far.

- Make sure that the door is fully open when you pull out the shelves on roller-bearings. Otherwise the door seal can be damaged.

Proceed as follows to remove one of the shelves from the guide rail (fig. **29**, page 9):

- Pull out the shelf (**1**) exactly in the position where the recess is, just above the plastic ledge (**2**) on the inner side of the device.
- Remove the shelf.

Make sure that the recesses on the shelf fit on the plastic ledges (**2**) when putting in the shelf.

Checking the water level (humidity control)

- Check the level of water in the container (fig. **30** 1, page 9) on the shelf regularly.
- Fill the water container $\frac{3}{4}$ full with water and place it on the grid on the shelf. Make sure that the water container is securely positioned on the grid so that it cannot tip over.

Replacing the active charcoal filter

Replace the active charcoal filter with a new one once a year.

- Turn the filter (fig. **31** 1, page 9) 90° clockwise or anti-clockwise and remove it.
- Insert the new filter.
- Turn the filter 90° clockwise or anti-clockwise until it clicks into position.

8.4 Procedure in the event of a power failure or if left unattended

Power failure

A short power failure will not unduly affect the inner temperature as long as you do not open the door too frequently.

If the power is off for a long time, carry out the appropriate action to protect the contents of your wine refrigerator.

Short periods of operator absence

- Leave the device operating if you are absent for less than 3 weeks.

Long periods of operator absence

- If you leave the device unused for several months, remove the contents.
- Switch off the unit and disconnect it from the power supply.
- Clean and dry the insides thoroughly.
- Leave the door ajar to prevent odours and mould from forming.

8.5 Moving the device

- Remove the contents.
- Tape down all the shelves.
- Turn the adjustable feet all the way in so that they are not damaged when moving.
- Tape the door closed.
- Only carry the appliance in an upright position.
Avoid tipping the appliance.
Protect the exterior with a blanket or something similar.

9 Troubleshooting

If you are unable to solve a problem yourself, get in touch with customer services (see address list overleaf)

Problem	Possible cause	Remedy
Appliance does not work	Appliance is not connected to a power supply	Connect the appliance
	Appliance is switched off	Switch on the appliance
	Circuit breaker or fuse has blown	Switch on circuit breaker or replace fuse
Appliance is not cold enough	Temperature is not set properly	Check the set temperature
	The ambient temperature could require a higher temperature setting	Set a higher temperature
	Door was opened frequently	Do not open the door more often than necessary
	Door was not closed properly	Close door properly
	Door is not hermetically-sealed	Check the door seal and clean or replace
Appliance switches itself on and off	Room temperature is higher than average.	Put the appliance in a cooler place
	The cabinet was recently replenished with new bottles	Leave the appliance to work for a while until the set temperature has been reached.
	Door was opened frequently	Do not open the door more often than necessary
	Door was not closed properly	Close door properly
	Door is not hermetically-sealed	Check the door seal and clean or replace

Problem	Possible cause	Remedy
The light does not work.	Appliance is not connected to a power supply	Connect the appliance
	Circuit breaker or fuse has blown	Switch on circuit breaker or replace fuse
	The light was switched off on the control panel.	Switch on the light
The appliance vibrates	The appliance is not properly level	Level the appliance with the adjustable feet
The appliance seems to make a lot of noise	The noise is probably caused by the refrigerant, which is normal. At the end of each cycle, you will hear noises made by the flow of refrigerant. If temperature fluctuations occur, the contraction and expansion of the inner walls may cause popping and cracking noises.	
	The appliance is not properly level	Level the appliance with the adjustable feet
The door does not close properly	The appliance is not properly level	Level the appliance with the adjustable feet
	The door hinge was changed incorrectly	Check the door hinge and reassemble correctly
	The door seal is dirty	Clean the door seal
	The shelves are not fitted correctly	Check the shelves and refit correctly
LED indicates <i>E1</i> , <i>E2</i> or <i>E7</i>	The temperature sensor for the fan inside the appliance shows an error	This can only be repaired by an authorised repair centre.

10 Maintaining and cleaning the appliance

**CAUTION!**

Always disconnect the plug before you clean and service the appliance.

**NOTICE!**

- Never clean the appliance under running water or in dishwater. Do not use abrasive cleaning agents or hard objects during cleaning as these can damage the appliance.
- Make sure that the air inlet and outlet vents on the unit are free of any dirt, so that heat from the interior can be released and the unit is not damaged.

All the shelves can be removed for optimum cleaning, see chapter "Cabinet shelves" on page 27.

- Switch off the appliance and disconnect the plug.
- Wash the inside with a solution of warm water and baking powder. This should be about 2 tablespoons of baking powder to half a litre (half a quart) of water.
- Clean the shelves with mild detergent.
- Wipe the control panel with a slightly damp cloth.
- Wash the outside of the device with warm water and a mild detergent. Then wipe it down with clean water and dry the surface with a cloth.

11 Guarantee

The statutory warranty period applies. If the product is defective, please contact your retailer or the manufacturer's branch in your country (see the back of the instruction manual for the addresses).

For repair and guarantee processing, please include the following documents when you send in the device:

- A copy of the receipt with purchasing date
- A reason for the claim or description of the fault

12 Disposal

- Place the packaging material in the appropriate recycling waste bins wherever possible.



If you wish to finally dispose of the product, ask your local recycling centre or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.

HONG KONG

Dometic Asia Co., Limited

Suites 2207-10, 22/F, Tower 1, The Gateway,
25 Canton Road, Tsim Sha Tsui, Kowloon
☎ +852 24565199 · 📠 +852 24665553
Mail: info.ap@dometic.com

AUSTRIA

Dometic Austria GmbH

Neudorferstraße 108
A-2353 Guntramsdorf
☎ +43 2236 908070
📠 +43 2236 90807060
Mail: info@dometic.at

BENELUX

Dometic Branch Office Belgium

Zincstraat 3
B-1500 Halle
☎ +32 2 3598040
📠 +32 2 3598050
Mail: info@dometic.be

BRAZIL

Dometic DO Brasil LTDA

Avenida Paulista 1754, conj. 111
SP 01310-920 Sao Paulo
☎ +55 11 3251 3352
📠 +55 11 3251 3362
Mail: info@dometic.com.br

DENMARK

Dometic Denmark A/S

Nordensvej 15, Taulov
DK-7000 Fredericia
☎ +45 75585966
📠 +45 75586307
Mail: info@dometic.dk

FINLAND

Dometic Finland OY

Mestarintie 4
FIN-01730 Vantaa
☎ +358 20 7413220
📠 +358 9 7593700
Mail: info@dometic.fi

FRANCE

Dometic SAS

ZA du Pré de la Dame Jeanne
B.P. 5
F-60128 Plailly
☎ +33 3 44633525
📠 +33 3 44633518
Mail : vehiculesdeloisirs@dometic.fr

GERMANY

Dometic WAECO International GmbH

Hollefeldstraße 63
D-48282 Emsdetten
☎ +49 (0) 2572 879-195
📠 +49 (0) 2572 879-322
Mail: info@dometic-waeco.de

HONG KONG

Dometic Asia Co., Limited

Suites 2207-10 · 22/F · Tower 1
The Gateway · 25 Canton Road,
Tsim Sha Tsui · Kowloon
☎ +852 24565199
📠 +852 24665553
Mail: info.ap@dometic.com

HUNGARY

Dometic Zrt. Sales Office

Kerékgyártó u. 5.
H-1147 Budapest
☎ +36 1 468 4400
📠 +36 1 468 4401
Mail: budapest@dometic.hu

ITALY

Dometic Italy S.r.l.

Via Virgilio, 3
I-47122 Forlì (FC)
☎ +39 0543 754901
📠 +39 0543 754983
Mail: vendite@dometic.it

JAPAN

Dometic KK

Maekawa-Shibaura, Bldg. 2
2-13-9 Shibaura Minato-ku
Tokyo 108-0023
☎ +81 3 5445 3333
📠 +81 3 5445 3339
Mail: info@dometic.jp

MEXICO

Dometic Mx, S. de R. L. de C. V.

Circuito Médicos No. 6 Local 1
Colonia Ciudad Satélite
CP 53100 Naucalpan de Juárez
Estado de México
☎ +52 55 5374 4108
📠 +52 55 5393 4683
Mail: info@dometic.com.mx

NETHERLANDS

Dometic Benelux B.V.

Ecustraart 3
NL-4879 NP Etten-Leur
☎ +31 76 5029000
📠 +31 76 5029019
Mail: info@dometic.nl

NEW ZEALAND

Dometic New Zealand Ltd.

PO Box 12011
Penrose
Auckland 1642
☎ +64 9 622 1490
📠 +64 9 622 1573
Mail: customerservices@dometic.co.nz

NORWAY

Dometic Norway AS

Østerøyveien 46
N-3232 Sandefjord
☎ +47 33428450
📠 +47 33428459
Mail: firmapost@dometic.no

POLAND

Dometic Poland Sp. z o.o.

Ul. Puławska 435A
PL-02-801 Warszawa
☎ +48 22 414 3200
📠 +48 22 414 3201
Mail: info@dometic.pl

PORTUGAL

Dometic Spain, S.L.

Branch Office em Portugal
Rot. de São Gonçalo nº 1 – Esc. 12
2775-399 Carcavelos
☎ +351 219 244 173
📠 +351 219 243 206
Mail: info@dometic.pt

RUSSIA

Dometic RUS LLC

Komsomolskaya square 6-1
RU-107140 Moscow
☎ +7 495 780 79 39
📠 +7 495 916 56 53
Mail: info@dometic.ru

SINGAPORE

Dometic Pte Ltd

18 Boon Lay Way 06-140 Trade Hub 21
Singapore 609966
☎ +65 6795 3177
📠 +65 6862 6620
Mail: dometic@dometic.com.sg

SLOVAKIA

Dometic Slovakia s.r.o. Sales Office Bratislava

Nádražná 34/A
900 28 Ivanka pri Dunaji
☎/📠 +421 2 45 529 680
Mail: bratislava@dometic.com

SOUTH AFRICA

Dometic (Pty) Ltd.

Regional Office

South Africa & Sub-Saharan Africa

Unit 6-7 on Mastiff Linbro Park
2008 Johannesburg
☎ +27 11 4504978
📠 +27 11 4504976
Mail: info@dometic.co.za

SPAIN

Dometic Spain S.L.

Avda. Sierra del Guadarrama, 16
E-28691 Villanueva de la Cañada
Madrid
☎ +34 902 111 042
📠 +34 900 100 245
Mail: info@dometic.es

SWEDEN

Dometic Scandinavia AB

Gustaf Melins gata 7
S-42131 Västra Frölunda
☎ +46 31 7341100
📠 +46 31 7341101
Mail: info@dometicgroup.se

SWITZERLAND

Dometic Switzerland AG

Riedackerstrasse 7a
CH-8153 Rümlang
☎ +41 44 8187171
📠 +41 44 8187191
Mail: info@dometic.ch

UNITED ARAB EMIRATES

Dometic Middle East FZCO

P. O. Box 17860
S-D 6, Jebel Ali Freezone
Dubai
☎ +971 4 883 3858
📠 +971 4 883 3868
Mail: info@dometic.ae

UNITED KINGDOM

Dometic UK Ltd.

Dometic House, The Brewery
Blandford St. Mary
Dorset DT11 9LS
☎ +44 344 626 0133
📠 +44 344 626 0143
Mail: customerservices@dometic.co.uk

USA

Dometic RV Division

1120 North Main Street
Elkhart, IN 46515
☎ +1 574-264-2131