



S-Series Control Neutral Safety Switch Part # 047307



NOTICE!

For use with Single S (CH5210P) or Twin S (CH5200P) controls where cable is used in a clutch mode.

NOTICE!

Installer: these instructions contain important safety information and must be forwarded to the boat owner.

Installation

1. Place two shims (item 6) under existing shim (item 14) and clamp (item 13) that fastens cable to hanger plate.
2. Secure bracket to control using spacers (item 5), screws (item 4), lock washers (item 8) and nuts (item 9). Do not tighten at this time.
3. Attach switch to bracket with screws (item 3) and lock washers (item 7).
4. Adjust bracket so that cable closes switch at position nearest neutral and tighten screws.
5. Wire switch into the circuit between the starter solenoid and starter key switch. Use common and normally open terminals.

Item No.	Description	Qty.
1	Bracket	1
2	Switch	1
3	Screw, Rd. Hd. Slot #6-32 x 3/4" Long	2
4	Screw, Rd. Hd. Slot #10-32 x 1/2" Long	2
5	Spacer	2
6	Shim	2
7	Lock Washer, #6	2
8	Lock Washer, #10	2
9	Nut, Hex #10-32	2
10	Pivot (part of control)	-
11	Cotter Pin (part of control)	-
12	Screw, clamp (part of control)	-
13	Clamp, cable (part of control)	-
14	Shim (part of control)	-

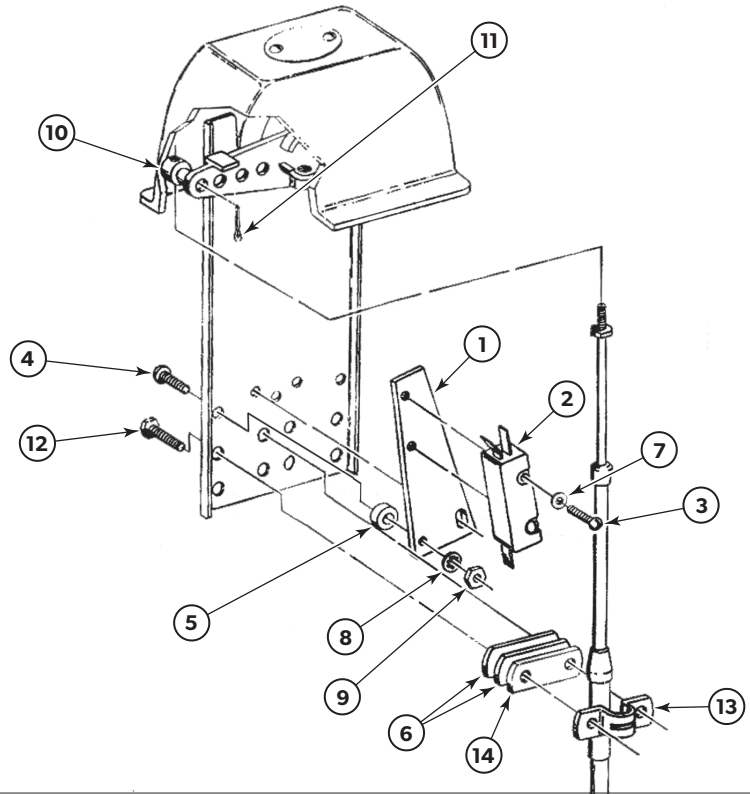


Figure 1. Part # 047307.