COOLING UNIT REPLACEMENT CARAVAN-95 SERIES

RM 2652 RM 2852 RM 4872 RM 3662 RM 3862 RM 4873 RM 3663 RM 3863 NDR 1062

1 Remove refrigerator from recess. Take out freezer shelf and rear plastic 2 cover if any. 3 Remove 7 screws at freezer rear. 2 Remove 4 screws holding evaporator 4 fins in refrigerator. Remove thermistor. 5 Disconnect cable to interior light, remove cover strip and grommet and pull cables out. 6 Note protruding hinges and handles. Carefully lay down cabinet doors down. Cut 2 ties from wiring harness and 1 tie 7 from drain hose. 8 Remove power module cover (1 screw 8 and 2 catches). Disconnect wires for: A Control panel B В **Thermistor** 9 Interior light Climate control D Heater(s)

10	Remove rear bottom rail screws and screws securing equipment to rails.	10
11	Remove burner shield.	10
12	Remove burner (3 screws) and ground cable.	12
13	Fold rails sideways and pull out gas equipment.	12
14	Remove 4 cooling unit screews.	
15	Place a piece of thick sheet metal 8"x 8" (200 x 200 mm) as shown.	16
16	Place a piece of wood 5/8"x 2"x 6" (16 x 50 x 150mm) as shown.	17
17	Apply leverage as shown and bend carefully unit loose.	15
18	Make sure that thermal mastic is applied on new unit evaporator coil.	18 19
19	Fit unit into cabinet and assemble in reverse order.	
20	Check all connections in the LP gas syste Refer to installation and operating instru	m for gas leaks. Stions