



Bellows pump replacement kit instructions

Bellows pump assembly for Dometic®, SeaLand® and SaniPottie® 960 series portable toilets




1. Remove pump body and hose assembly from tank by twisting to loosen sealant and pulling out pump. If pump cannot be loosened and removed easily, cut through sealant or pump at base (be careful not to cut tank).




2. Use pliers to pull out old hose assembly.




3. Place guide wire through small hole in bowl and route through upper tank to bellows pump hole.

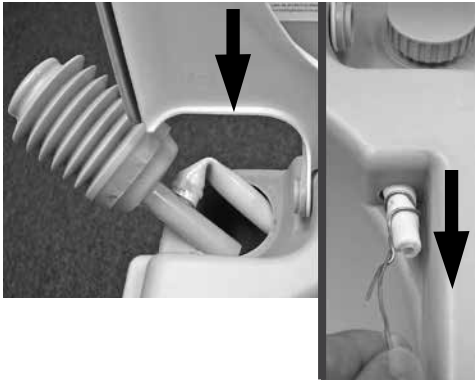

4. Hook wire through holes in hose nozzle and wrap wire around nozzle. Lubricate bulge in nozzle for easier installation in step 6. Pull wire and nozzle end out of small hole in bowl while guiding new bellows pump into position.

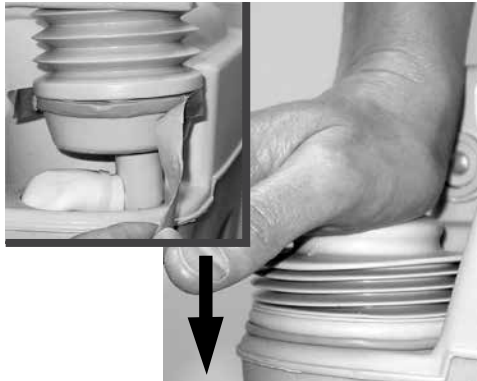

5. Remove tape from sealant at base of pump. Push bellows pump down until sealant fully compresses and pump base snaps into place.

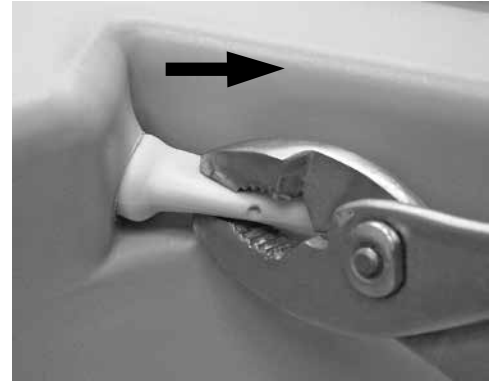

6. Pull nozzle end into bowl until bulge comes through hole.



Dometic Corporation
Sanitation Systems
13128 SR 226 | PO Box 38
Big Prairie, Ohio 44611 USA
www.dometic.com