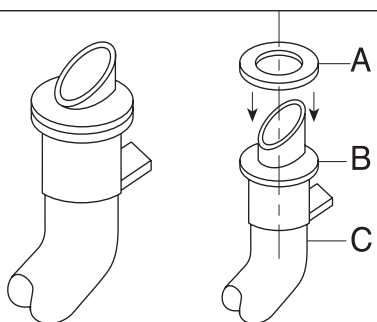


GASKET KIT**SEALED BURNER RANGE**

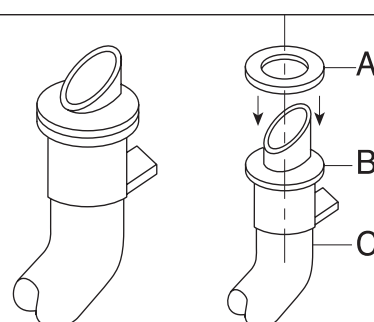
Revision B, 10/19/18

For complete Range & Cooktop instructions consult **MPD 57279**.**KIT # MPD 50140**

1. Unlatch and lift top according to instructions in the instruction manual MPD 57279.
2. For each burner tube (C), carefully place one (1) ceramic fiber gasket (A) on burner tube collar flange (B).
3. Replace top. Assure all burner tubes line up and insert into burner heads.

GASKET KIT**SEALED BURNER RANGE**

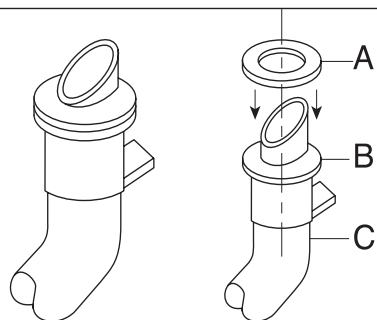
Revision B, 10/19/18

For complete Range & Cooktop instructions consult **MPD 57279**.**KIT # MPD 50140**

1. Unlatch and lift top according to instructions in the instruction manual MPD 57279.
2. For each burner tube (C), carefully place one (1) ceramic fiber gasket (A) on burner tube collar flange (B).
3. Replace top. Assure all burner tubes line up and insert into burner heads.

GASKET KIT**SEALED BURNER RANGE**

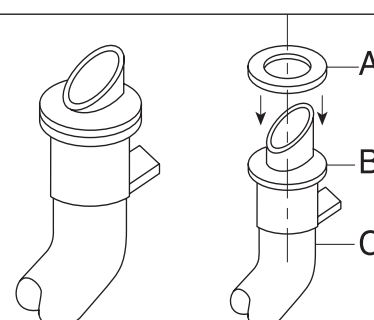
Revision B, 10/19/18

For complete Range & Cooktop instructions consult **MPD 57279**.**KIT # MPD 50140**

1. Unlatch and lift top according to instructions in the instruction manual MPD 57279.
2. For each burner tube (C), carefully place one (1) ceramic fiber gasket (A) on burner tube collar flange (B).
3. Replace top. Assure all burner tubes line up and insert into burner heads.

GASKET KIT**SEALED BURNER RANGE**

Revision B, 10/19/18

For complete Range & Cooktop instructions consult **MPD 57279**.**KIT # MPD 50140**

1. Unlatch and lift top according to instructions in the instruction manual MPD 57279.
2. For each burner tube (C), carefully place one (1) ceramic fiber gasket (A) on burner tube collar flange (B).
3. Replace top. Assure all burner tubes line up and insert into burner heads.