



**8800 SERIES MASTERFLUSH™  
MACERATOR TOILETS**

**RV INSTALLATION APPENDIX**

When installing a SeaLand macerator toilet in a recreation vehicle, please use the following Wiring information. Refer to SeaLand 8800 series owner's manual (600345326), page 10, for complete SeaLand macerator toilet wiring diagram.

**WIRING / ELECTRONIC CONTROL MODULE CONNECTIONS**



**WARNING! HAZARD OF SHOCK OR FIRE – Always use recommended fuse, circuit breaker and wire size. Failure to do so can result in fire that can cause the loss of property and life.**

**IMPORTANT INSTALLATION NOTES**


- Each toilet must have its own medium-delay circuit breaker or fuse.
- Wire sizes must be appropriate for the installation. All other installation factors must be in accordance with ISO electrical standards.
- Always use stranded copper wire (preferably tinned).
- Always use crimp-type wire connections. Do not use wire nuts (they corrode).

**WIRE SIZING CHART**

Wire size per length of run*	0-15 ft.	16-30 ft.	31-50 ft.
12 volts DC	#14	#12	#10
* Distance from circuit breaker to electronic control module.			

**CONVERSION TABLES**

Wire – AWG to mm <sup>2</sup>			Feet to Meters						
AWG	14	12	10	Ft	10	15	20	30	50
mm <sup>2</sup>	2.5	4.0	6.0	M	3.1	4.6	6.1	9.2	15.2

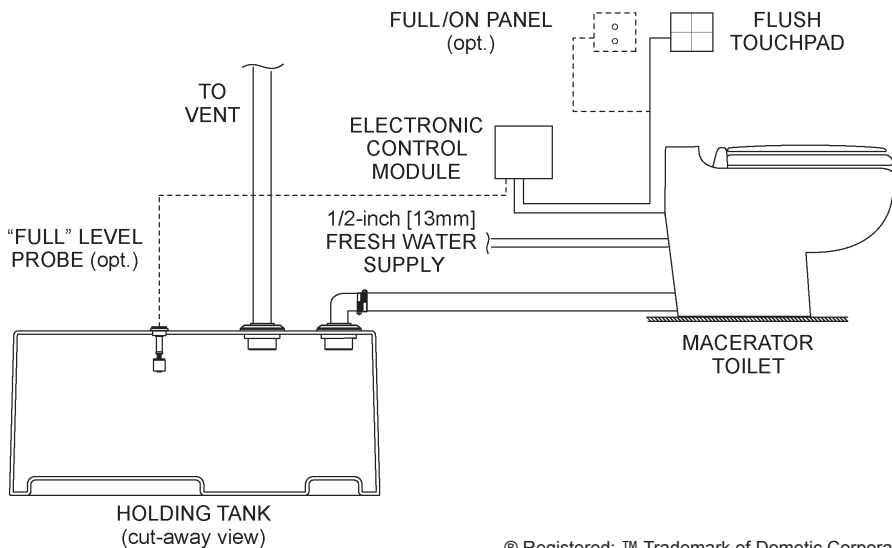

© Registered; ™ Trademark of Dometic Corporation  
© Dometic Corporation



**8800 SERIES MASTERFLUSH™  
MACERATOR TOILETS**

**RV INSTALLATION APPENDIX**

When installing a SeaLand macerator toilet in a recreation vehicle, please use the following Wiring information. Refer to SeaLand 8800 series owner's manual (600345326), page 10, for complete SeaLand macerator toilet wiring diagram.

**WIRING / ELECTRONIC CONTROL MODULE CONNECTIONS**



**WARNING! HAZARD OF SHOCK OR FIRE – Always use recommended fuse, circuit breaker and wire size. Failure to do so can result in fire that can cause the loss of property and life.**

**IMPORTANT INSTALLATION NOTES**


- Each toilet must have its own medium-delay circuit breaker or fuse.
- Wire sizes must be appropriate for the installation. All other installation factors must be in accordance with ISO electrical standards.
- Always use stranded copper wire (preferably tinned).
- Always use crimp-type wire connections. Do not use wire nuts (they corrode).

**WIRE SIZING CHART**

Wire size per length of run*	0-15 ft.	16-30 ft.	31-50 ft.
12 volts DC	#14	#12	#10
* Distance from circuit breaker to electronic control module.			

**CONVERSION TABLES**

Wire – AWG to mm <sup>2</sup>			Feet to Meters						
AWG	14	12	10	Ft	10	15	20	30	50
mm <sup>2</sup>	2.5	4.0	6.0	M	3.1	4.6	6.1	9.2	15.2

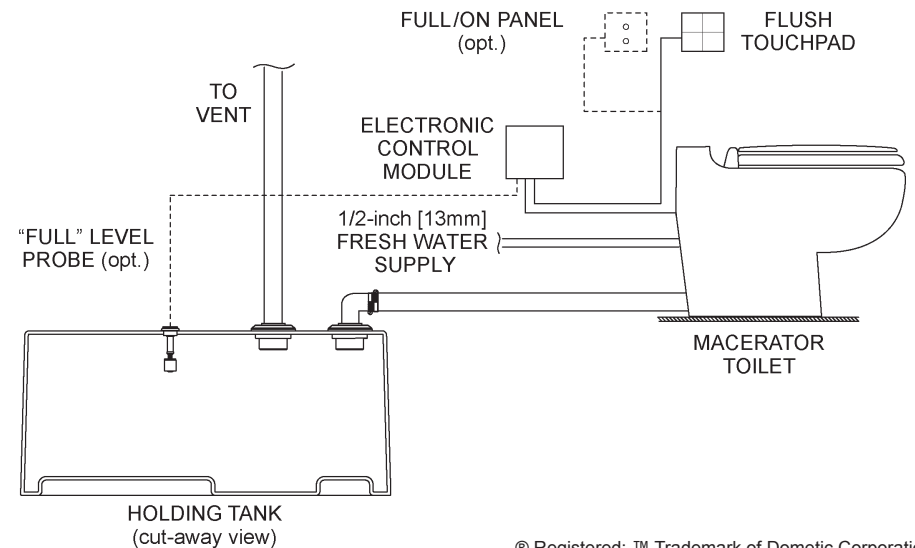

© Registered; ™ Trademark of Dometic Corporation  
© Dometic Corporation