


**Replacement Vent Filter Cartridges**  
 309310001 - filter only for 5/8 in. (16 mm) ID vent hose  
 309310006 - filter only for 1 in. (25 mm) ID vent hose  
 309310004 - filter only for 1.5 in. (38 mm) ID vent hose

DATE OF INSTALLATION	
month	year

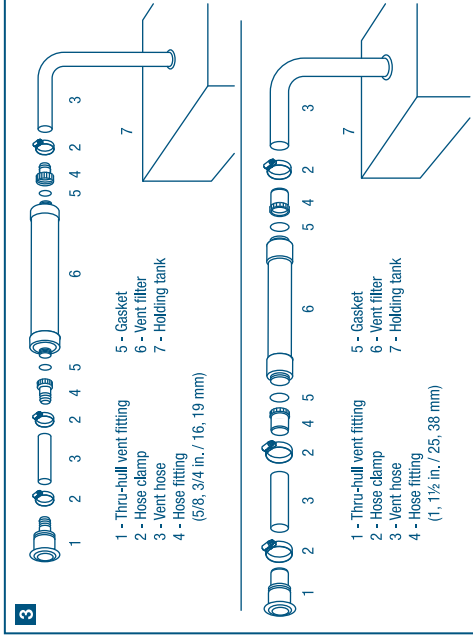

# SeaLand<sup>®</sup> SaniGard<sup>™</sup>

## Holding Tank Vent Filter

**Keeps vent air clean and pleasant.**

**⚠ ATTENTION:** Replace vent filter at the beginning of each boating season for most effective odor control.

**⚠ ATTENTION:** If holding tank overflow occurs and vent filter becomes fouled, replace vent filter immediately.

### New installation

1. Select location for filter. Avoid excessive heat sources. Do not locate filter below top of holding tank. **1**
2. Install mounting bracket with fasteners where filter is to be located. **2**
3. Remove protective plugs from ends of vent filter. Install hose fittings and gaskets to ends of vent filter (fitting size must match hose ID size). Tighten fittings 1/4 to 1/2 turn beyond hand tight. **2**
4. Press assembled vent filter into bracket.
5. Install vent hoses (not supplied) from holding tank and thru-hull vent fitting to hose fittings on vent filter. Use hose clamps (not supplied) to secure hose connections. **3**



**CAUTION!** Do not use SeaLand<sup>®</sup> Vent Filter for holding tanks with waste that is treated through onboard sewage treatment systems using chlorine or other strong oxidizing agents.

### Replacing old vent filter

1. Unscrew vent hose fittings from old vent filter.
2. Remove old filter from bracket, seal open ends with tape or wrap inside plastic bag, and discard.
3. Install new vent filter in bracket and attach to vent hose fittings.



**Dometic Corporation**  
 Big Prairie, Ohio 44611 USA

© Registered Trademark of Dometic Corporation  
 © Dometic Corporation  
 600346574 7/11