



THIS QUICK START GUIDE IS INTENDED AS A GUIDE ONLY AND IS NOT INTENDED TO PROVIDE ALL INFORMATION AND WARNINGS RELATED TO THE PRODUCT. REFER TO YOUR OPERATING AND INSTRUCTION MANUALS FOR ADDITIONAL IMPORTANT INFORMATION AND WARNINGS, INCLUDING ADDITIONAL SAFETY WARNINGS.

Model	For Part Numbers
Power Awning Pro	3316518.XXX, 3316519.XXX, 33117114.XXX, 3317115.XXX, 3316554.XXX, 3316520.XXX

Complete each programming step within **four seconds** of the previous step to keep the receiver in pairing mode.

'	1 9 9 1		1 3
Step	Operation	Audible Alert	Awning Movement
1	Turn Power On	(((► Beep x1	None
2	Press Left P2 Button x2	(((▶ Beep x2	None
31	Press Up Button x1	(((▶ Beep x4	Awning Jogs
42	Press Left P2 Button x1	(((▶ Beep x1	Awning Jogs
5 ²	Press Up Button x1	(((► Beep x1	None
6 ²	Press Down Button x1	None	None

When using on 9500 awning, press the ∇ DOWN button at step 3 instead of the \triangle UP button.



² Steps 4-7 are only applicable to the 9100 awning series.

Step	Operation	Audible Alert	Awning Movement
7 ²	Press Left P2 Button x1	(((▶ Beep x3	Awning Jogs
8	Set Sensor Dial to "0"	None	None
9	Press Left P2 Button x1	(((▶ Beep x1	Awning Jogs
10	Press Left P2 Button x1	((() Beep x1	None
11	Press Programming Button x1	((► (► (► (► (► (► (► (► (► (► (► (► (►	Awning Jogs
12	Set Sensor Dial to "5"	None	None
13	Press Programming Button x1	((► Beep x1	Awning Retracts
14	Set Sensor to Desired Level (adjusting sensitivity can be done without reprogramming)	To clear memory: Press P2	