
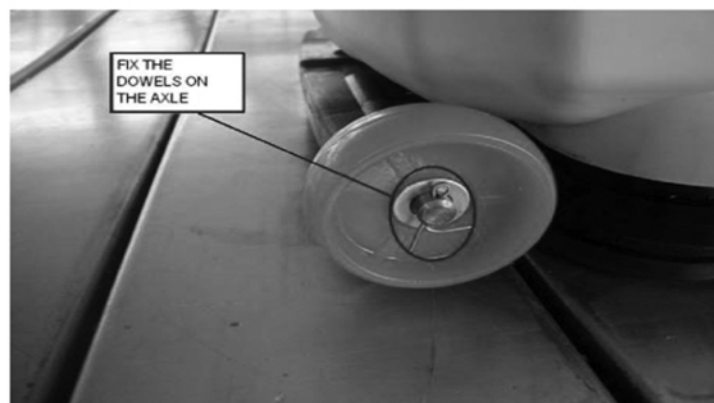


HOW TO INSTALL THE WHEELS ON THE GENERATOR

STEP1:SLIDE THE WHEEL ON THE AXLE.

STEP2:PUT THE WASHER ON THE WHEEL AXLE.

STEP 3:INSERT THE COTTER PIN INTO AXLE HOLE AND SECURE BY BENDING.

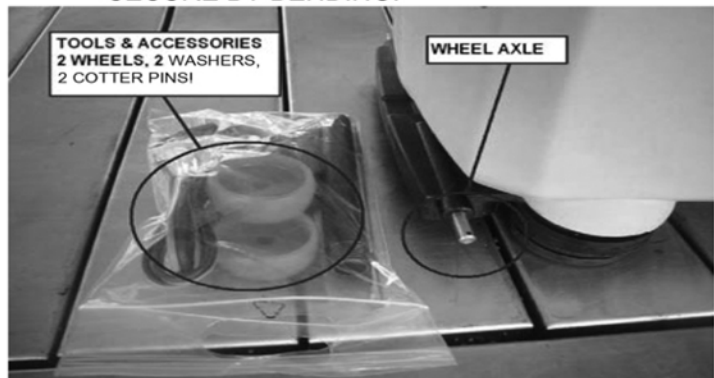

Dometic

Digital Inverter Generator

□ LW3000P.BLK



OPERATING INSTRUCTIONS
PLEASE READ THIS MANUAL CAREFULLY
BEFORE USING MACHINE

Dometic LLC
2320 Industrial Parkway
Elkhart, Indiana 46516.
574-294-2511

Canada
Dometic LLC
46 Zatonski, Unit 3
Brantford Ont. N3T5L8
Canada
519-544-4881

For Service Center Assistance
800-544-4881

Document No: 3313401.048
(Replaces 3313401.030)

★HOW TO CONNECT THE BATTERY WHEN USING NEW GENERATOR



STEP 1: REMOVE THE SCREW & COVER

STEP 2: TAKE OUT THE TWO CONNECTORS



STEP3: PLUG THE TWO CONNECTORS TOGETHER

STEP 4: INSTALL THE ACCESS COVER

PARTS LIST

No.	Name		
		43*	FUSE,TUBE 250V 20A (INLINE TO BATTERY)
1	Spark plug	44*	FUSE, BLADE 250V 20A (INLINE TO BATTERY)
2	Recoil starter assembly	45	JET, STANDARD CARBURETOR
3	Fuel cap	46	TUBE, CARBURETOR JET INLET
4	Fuel connecting tube	47	O-RING, CARBURETOR BOWL
5	Battery	48	SCREW, CARBURETOR BOWL
6	Hand grip	90	JET KIT, HIGH ALTITUDE 27H
7	Wheel		
8	Wheel frame		
9	Rubber foot		
10	Ignition Coil		
11	Air cleaner cartridge		
12	Carburetor		
13	Air cleaner sponge		
14	Air cleaner cover		
15	Carburetor gasket, plastic		
16	carburetor gasket, asbestos		
17	Access panel		
18	Primer bulb		
19	Breathing tube		
20	Fuel valve knob		
21	Fuel filter		
22	Control panel		
23	M4 x 10 self-tapping screw		
24	Spark plug access panel		
25	Air cleaner breathing tube		
26	Spark screen		
27	M 4X 5 round head screw		
28	Muffler gasket		
29	Muffler		
30	Rear cover junction plate		
31	M5 x 20 round head screw		
32	Battery access panel		
33	M 5 x 12 round head sheetmetal screw		
34	M 5 x 13 round head screw		
35	COVER, WHEEL BLACK		
36	SOLENOID, STARTER		
37	STARTER		
38	TUBE, OIL DRAIN		
39	CORD, 12V DC OUTPUT		
40	BOTTLE, OIL FILL		
41	OIL DIP-STICK		
42	KEY, IGNITION (SET OF 2)		

Dometic LLC
2320 Industrial Parkway
Elkhart, Indiana 46516.
574-294-2511

Canada
Dometic LLC
46 Zatonski, Unit 3
Brantford Ont. N3T5L8
Canada
519-544-4881

For Service Center Assistance
800-544-4881

PREFACE

Thank you for purchasing our generator.

This manual covers operation and maintenance of the LW3000PLUS.

All information in this publication is based on the latest product information available at the time of approval for printing. We reserve the right to make changes at any time without notice and without incurring any obligation. The copyright of this manual belongs to our company, no part of this publication may be reproduced without written permission.

This manual should be considered a permanent part of the generator and should remain with it if it is resold.

Pay special attention to statements preceded by the following words:

▲ WARNING

It indicates a strong possibility of severe personal injury or death if instructions are not followed.

▲ CAUTION

It indicates a strong possibility of severe personal injury or death if instructions are not followed.

If a problem should arise, or if you have any questions about the generator, consult an authorized dealer.

▲ BE CAREFUL

The generators are designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the generator. Failure to do so could result in personal injury or equipment damage.

* ONLY ONE TYPE OF FUSE WILL BE USED, CHECK IN THE BATTERY COMPARTMENT TO DETERMINE WHICH TYPE.

I . Safety Instructions

⚠ Warning



- ◆ The generator is designed to give safe and dependable service if operated according to instructions. Read and understand this manual carefully before operating the generator, or it may cause serious injury and equipment damage.

⚠ Warning



- ◆ Exhaust contains poisonous carbon monoxide. Do not operate generator in confined area. Be sure to operate the generator in a well-ventilated environment or with an aerator. Using a generator indoors will kill you in minutes. Never use in the home or in a partly enclosed area such as garages. Only use outdoors and far from open windows doors and vents.

⚠ Warning




- ◆ The muffler becomes very hot during operating and remains hot for a while after stopping the engine. Be careful not to touch the muffler while it is hot. Let the engine cool before storing the generator indoor.
- ◆ The engine exhaust system will be heated during operation and remain hot immediately after stopping the engine. To prevent scalding, pay more attention to the warning marks attached to the generator.

⚠ Be careful



- ◆ Do not parallel connect other cables to receptacles, use special jack, or it may cause an electrical shock.

EXPLODED PARTS VIEW

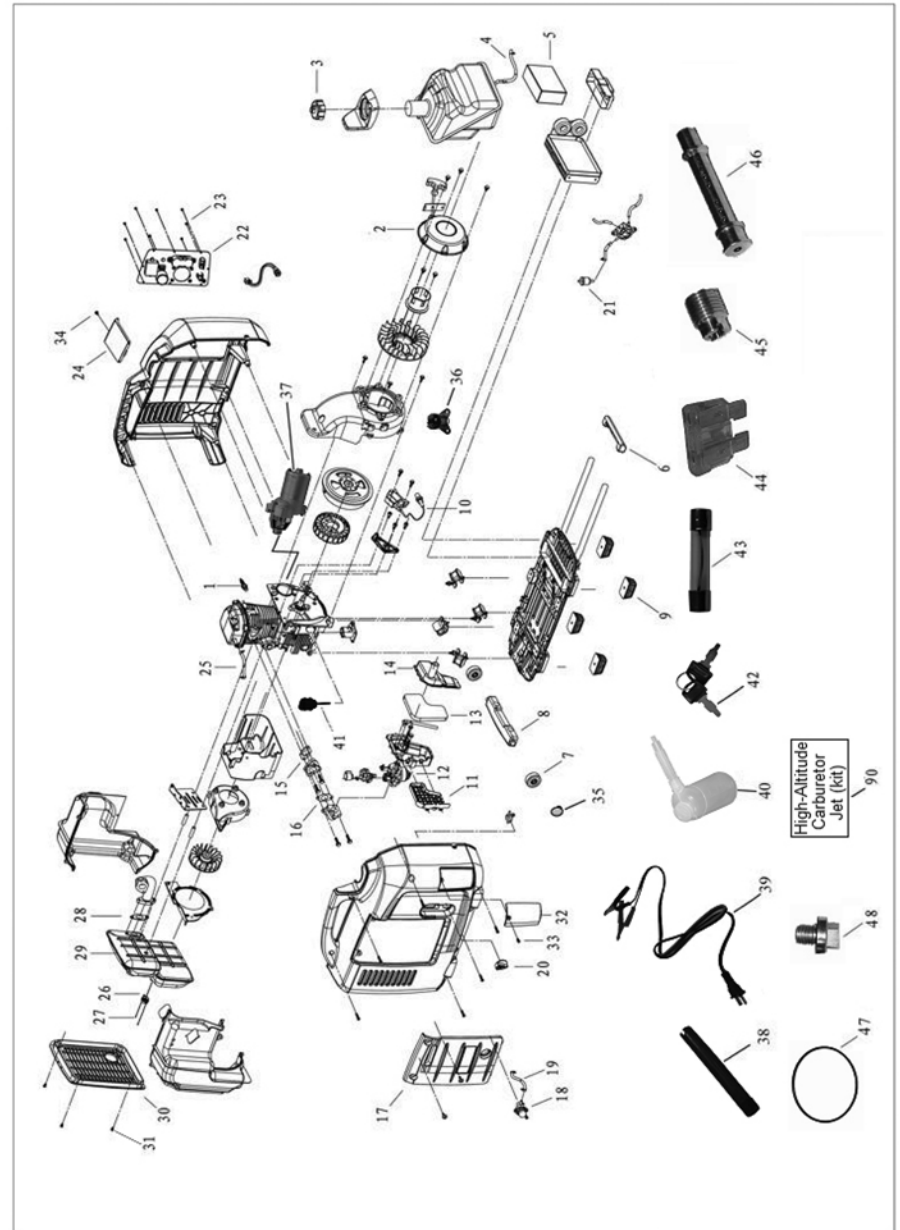

WIRING DIAGRAM



⚠ Warning

- ◆ Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a ventilated area with engine stopped.
- ◆ Keep away from cigarette, smoke and sparks when refueling the generator. Always refuel in a well-ventilated location.

Warning

- ◆ Connection for standby power to a building electrical system must be made by a qualified electrician. The connection must isolate the generator from utility power, and must comply with all applicable laws and electrical codes. Improper connections to a building electrical system can allow electrical current from the generator to backfeed into the utility lines. Such backfeed may electrocute utility company workers or others who contact the lines during a power outage, and the generator may explode, or cause fires when utility power is restored.

Warning

- ◆ To avoid accidents and equipment damage, check generation system every time before starting engine.
- ◆ Keep the generator a distance at least 1 meter from other equipment or other equipment during operation.
- ◆ Keep the generator horizontal when running. if generator tilted, it may cause fuel spillage.
- ◆ Generator operators must be trained, must know how to stop the generator quickly and understand the operation of all controllable parts. Untrained operators should not be allowed to use this equipment.
- ◆ Keep children and pet away from operation area.
- ◆ Keep away from rotating parts during operation.
- ◆ The generator is a potential source of electrical shock when misused. Do not operate it with wet hands or in any wet location.
- ◆ Do not operate the generator in rain or snow and let it get wet.

CONTENT

LW3000PLUS

1	COMPONENT IDENTIFICATION.....	1
2	SAFETY INSTRUCTIONS.....	2
3	SAFETY LABEL LOCATIONS	3
4	PRE-OPERATION CHECK	3
4.1	Check the engine oil level.....	3
4.2	Check the fuel level.....	5
4.3	Check the air cleaner.....	5
5	GENERATOR USE.....	6
5.1	Starting the engine.....	6
5.2	High altitude operation	8
5.3	Generator use	9
5.4	AC applications	9
5.5	Output and Overload Indicators.....	10
5.6	DC applications	11
5.7	Start the engine	13
5.8	Oil alert system.....	13
5.9	Stopping the engine.....	13
6	MAINTENANCE	15
6.1	Changing oil.....	16
6.2	Air cleaner service.....	18
6.3	Spark plug servicing	18
7	TRANSPORTING AND STORAGE	20
7.1	When transporting generator:.....	20
7.2	Before storing the unit for an extended period:.....	21
	FIRE NET OF MUFFLER SERVICE.....	22
8	TROUBLESHOOTING	23
9	TECHNICAL DATA	25
9.1	Size and weight.....	25
9.2	Engine.....	25
9.3	Generator.....	25
10	Wiring diagram.....	26
11	Exploded parts view.....	27
12	Parts list	28
13	Connecting the battery for generator with electric starter.....	29
14	How to install the wheels on the generator.....	30

9. Specification

9.1 Size and weight

Item	LW3000PLUS
L x W x H (in)	22.9x12.6x19.7
Net weight (lb)	71


9.2 Engine

Item	LW3000PLUS
Model	157F
Type	4-stroke, OHV, 1-cylinder
Displacement	150CC
Compression ratio	9.2
Engine speed	5000rpm (ECO switch is off)
Cooling system	Forced air cooling
Ignition system	T.E.I
Oil capacity	0.47 quart(US) / (15 fluid ounces)
Fuel tank capacity	1.8 gallons(US)
Spark plug	Dometic Part No.: 3000P.001
Noise level (4m)	59dB at 75% load


9.3 Generator

Type	Item	Generator Model No.
		LW3000PLUS
AC output	Rated voltage (V)	110/120/230/240
	Rated frequency (HZ)	50/60
	Rated current (A)	24/22/11.3/10.8
	Rated output (KVA)	2.6
	Maximum output (KVA)	2.7
DC output (For 12V automotive batteries only)	Rated voltage (V)	12
	Rated current (A)	8.3


★ The equipment that connects generator doesn't start:

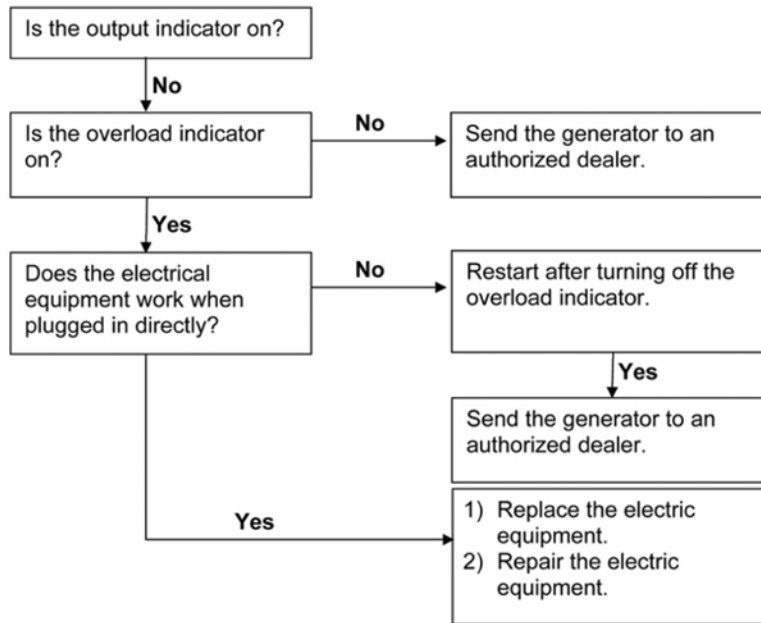

★ There is no power in the DC electric outlet:

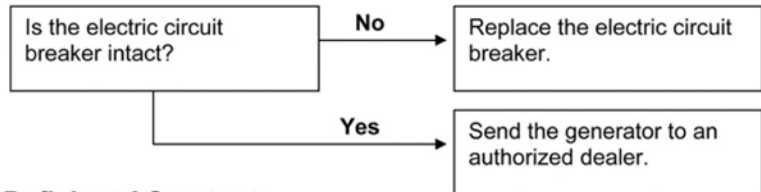

★ Deficient AC output

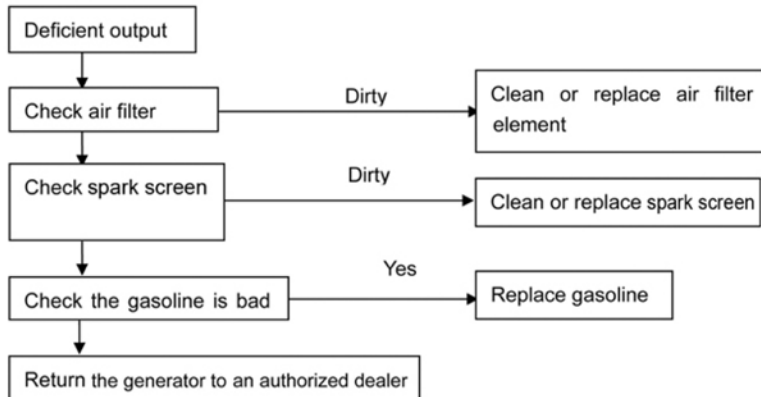

DIGITAL INVERTER GENERATOR 2600W



⚠ Warning




Read this manual carefully before using the machine, for your own safety. Whenever this generator is sold, these instructions must be included.

1 COMPONENT IDENTIFICATION

- | | |
|-----------------------------|-------------------------------|
| 1. Fuel cap | 9. Output indicator light |
| 2. Choke lever | 10. Oil alert indicator light |
| 3. Control panel | 11. Eco throttle switch |
| 4. Starting grip | 12. Engine switch |
| 5. Fuel valve | 13. DC socket |
| 6. Maintenance cover | 14. DC circuit breaker |
| 7. AC socket | 15. Grounding terminal |
| 8. Overload indicator light | |

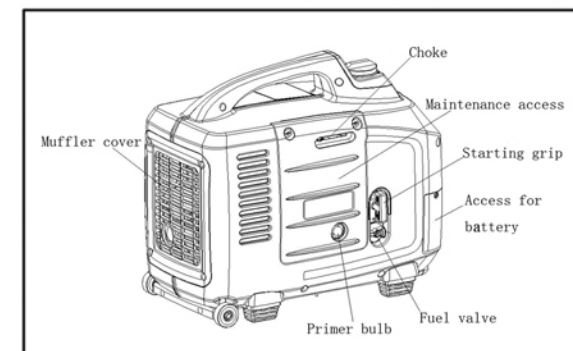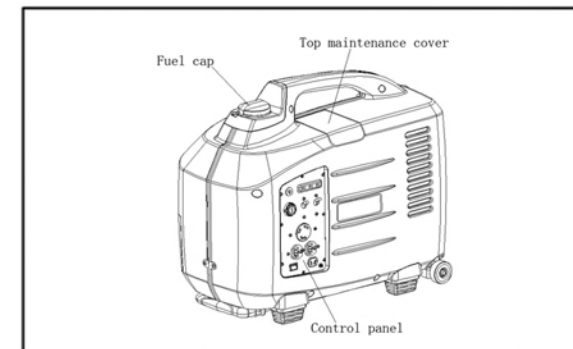

Control panel

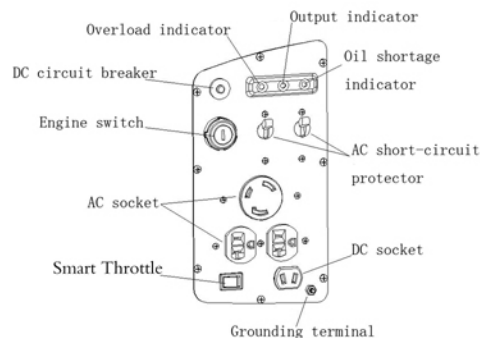

Smart Throttle

Engine speed is kept at idle automatically when the electrical appliance is disconnected and it returns to the proper speed to power of the electrical load when electrical appliance is connected. This position is recommended to minimize the fuel consumption while in operation.

⚠ Caution


- ◆ The Smart throttle works only when the load is lower than rated power.
- ◆ When the generator is running with lower than 50% of rated power, you may turn on the smart throttle. It will slow down the engine speed to save fuel consumption.
- ◆ In DC operation, turn the Smart throttle switch to the OFF position.

2 SAFETY INSTRUCTIONS

- The generator is designed to give safe and dependable service if operated according to instructions.
- Read and understand the Owner's Manual before operating the generator. Failure to do so could result in personal injury or equipment damage.
- Exhaust gas contains poisonous carbon monoxide. Never run the generator in an enclosed area. Be sure to provide adequate ventilation.
- The muffler becomes very hot during operation and remains hot for a while after stopping the engine. Be careful not to touch the muffler while it is hot. Let the engine cool before storing the generator indoors.
- The engine exhaust system will be heated during operation and remain hot immediately after stopping the engine. To prevent scalding, pay attention to the warning marks.
- Gasoline is extremely flammable and explosive under certain conditions. Refuel in a well ventilated area with the engine stopped.
- Keep away from cigarette, smoke and sparks when re-fuelling the generator. Always refuel in a well ventilated location.
- Wipe up spilled gasoline at once.
- Connections for standby power to a building's electrical system must be made by a qualified electrician and must comply with all applicable laws and electrical codes. Improper connections can allow electrical current from the generator to back feed into the utility lines. Such back feed may electrocute utility company workers or others who contact the lines during a power outage, and when utility power is restored, the generator may explode, burn, or cause fires in the building's electrical system.
- Always make a pre-operation inspection before you start the engine. You may prevent an accident or equipment damage.
- Place the generator at least 1m (3ft) away from buildings or other equipment during operation.
- Operate the generator on a level surface. If the generator is tilted, fuel spillage may result.
- Know how to stop the generator quickly and understand operation of all the controls. Never permit anyone to operate the generator without proper instructions.
- Keep children and pets away from the generator when it is in operation.
- Keep away from rotating parts while the generator is running.
- The generator is a potential source of electrical shocks when misused; do not operate with wet hands.
- Do not operate the generator in rain or snow and do not let it get wet.

8 TROUBLESHOOTING


Engine will not start:

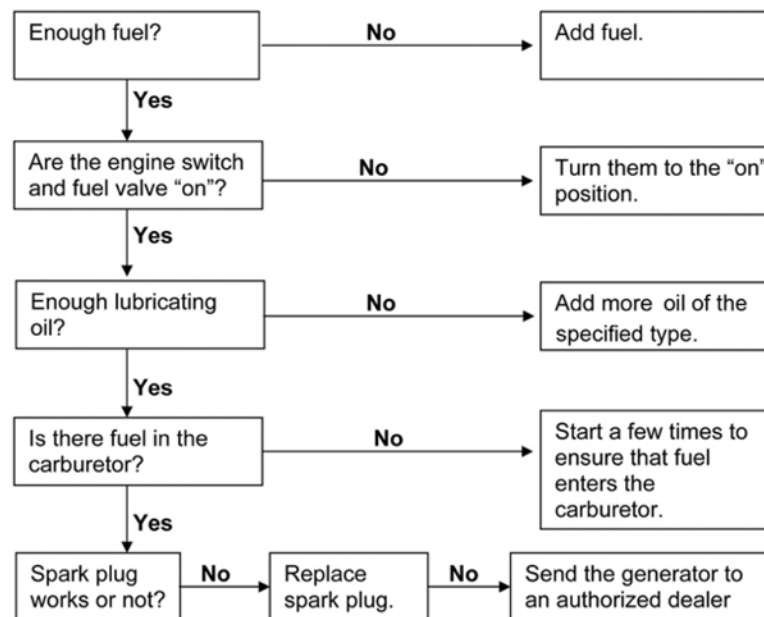

- Shake the generator several times to make the float rise if the generator cannot start after adding oil for the first time and the oil alarm indicator stays on when pulling the starting grip.
- Make sure there is no spilled fuel around the spark plug. Spilled fuel may ignite.
- If the engine still doesn't start, have the generator repaired by a Dometic authorized repair person.

Inspection:

1. Remove the spark plug rubber boot and clean any dirt from around the spark plug.
2. Remove the spark plug and place it in the spark plug rubber boot.
3. Connect the side electrode of the spark plug to the metal parts of the engine.
4. Pull the starting cord. A spark should jump across the gap.

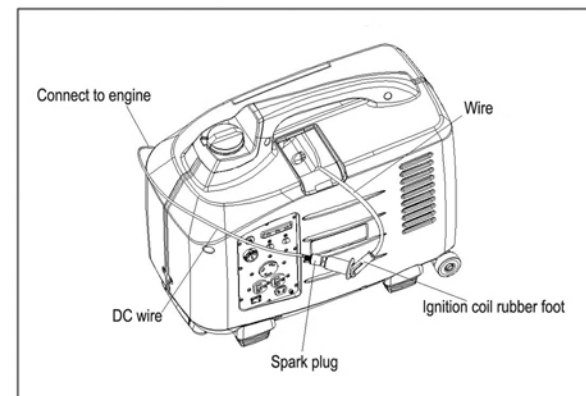

Muffler spark screen service


A dirty muffler will be loud and affect the engine's performance.

Clean and maintain the spark screen every 30-45 days, to make sure the generator works normally. The spark screen needs cleaning frequently if you use the generator in very dirty conditions, or replace the spark screen if necessary.

⚠ Careful



- ◆ Before cleaning the spark screen make sure the generator is not running.
- ◆ Before maintaining the spark screen, make sure the machine is cool, otherwise, burns may be caused by the hot muffler.

1. Remove the M6 screws and open the muffler cover.
2. Remove two M4 screws on the spark screen.
3. Remove the spark screen per the following figure.
4. Check the spark screen, clean or replace it if necessary.

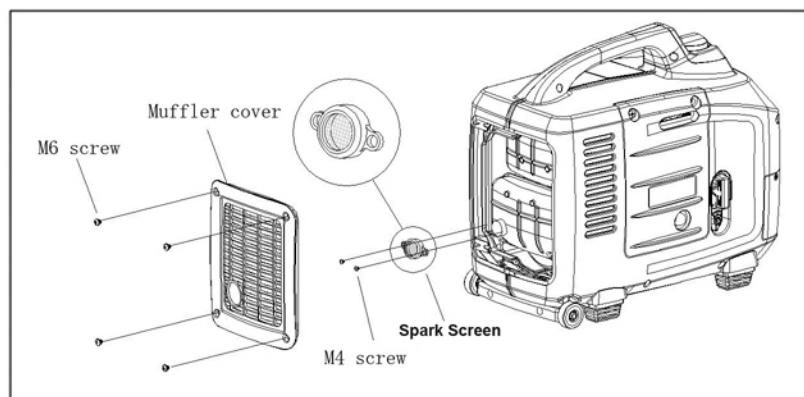

3 SAFETY LABEL LOCATIONS

These labels warn you for potential hazards that can cause serious injury. Read the labels and safety notes and precautions described in the manual carefully. If a label comes off or becomes hard to read, contact your dealer for a replacement.

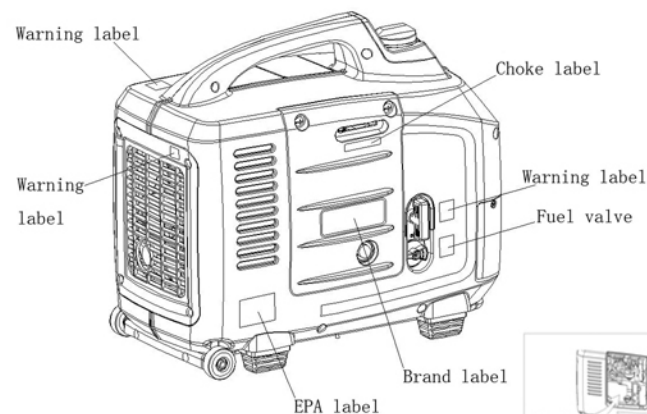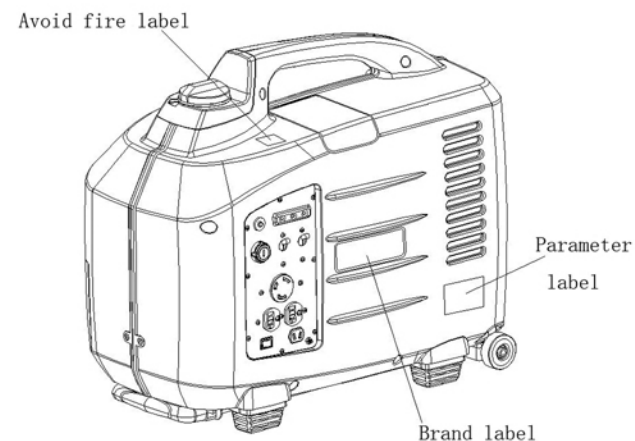

4 PRE-OPERATION CHECK



See page 29 to connect the starting battery before first use.




Be sure to check the generator on a level surface with the engine stopped.

4.1 Check the engine oil level.



Using non-detergent oil or 2-stroke engine oil could shorten the engine's service life.

Use high-detergent, premium quality 4-stroke engine oil, certified to meet or exceed U.S. automobile manufacturer's requirements for API Service Classification SG, SF. (15W40) Select the appropriate viscosity for the average temperature in your area.

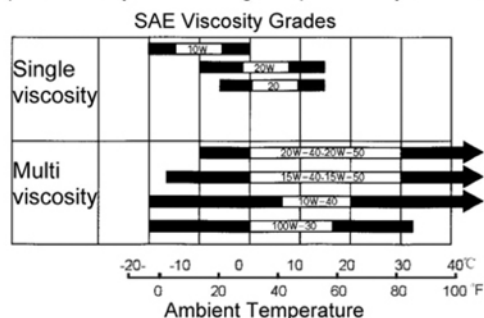


Loosen the cover screw and remove the left side maintenance cover. Remove the oil filler cap, and wipe the dipstick with a clean rag. Check the oil level by inserting the dipstick in the filler hole without screwing it in.

If the oil level is below the end of the dipstick, refill the recommended oil up to the upper oil level allowed, as shown on the dipstick.



The Oil Alert System will automatically stop the engine before the oil level falls below the safe limit. However, to avoid the inconvenience of an unexpected shutdown, it is still advisable to visually inspect the oil level regularly. It is normal for the engine to consume approximately 1 ounce of oil per 2 hours of operation. Do not over-fill the engine with oil. If the engine is over filled, it may result in exhaust smoke, excessive oil dripping from the air filter box, oil thrown from the exhaust, or engine damage. If the Oil Alert System stops the engine due to low oil, the indicator light will not remain lit after shutdown. Check the oil any time the engine shuts down.

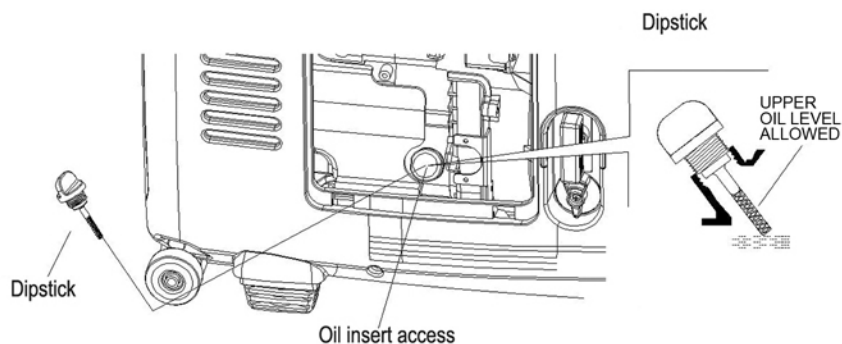

7.2 Before storing the unit for an extended period:


1. Be sure the storage area is free of excessive humidity and dust.
2. Drain the fuel.




Gasoline is extremely flammable and explosive under certain conditions.

Do not smoke or allow flames or sparks in the area.


3. Completely drain the fuel from the tank. Open the fuel valve, start the engine and operate it in the idle position until all remaining fuel is gone and the engine stops automatically.

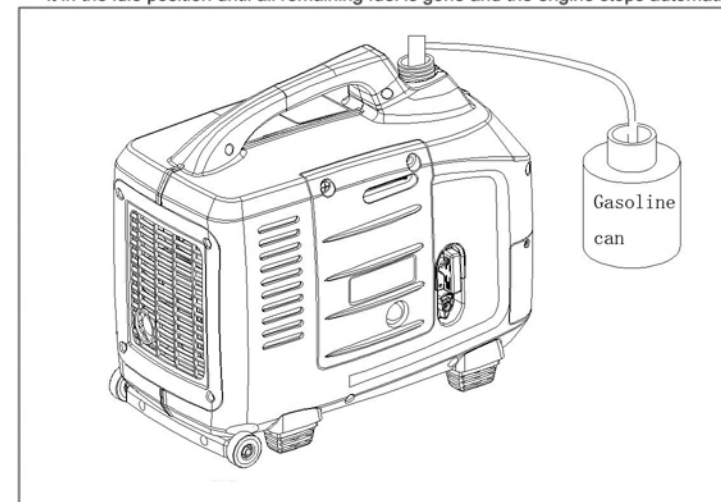

4. Drain the crankcase oil per section 6.1 steps 1 & 2.
5. Remove spark plug and fill cylinder with 1/16 ounce fresh oil. Pull start motor 3-4 times to discharge the remaining oil. Then reinstall the spark plug.
6. Pull the starting cord slowly until resistance is strong. At this time, the piston is moving to the top of the compression stroke and the valves will be closed.

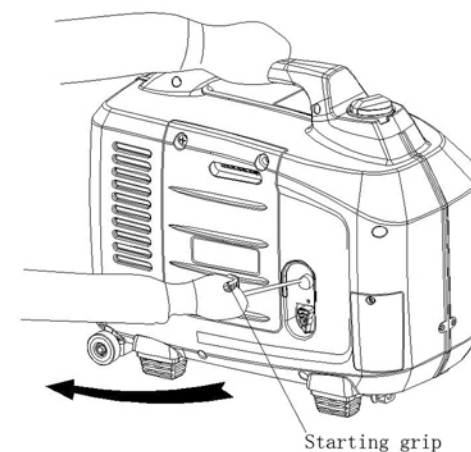

4. Visually inspect the spark plug. Discard it if the insulator is cracked or chipped. Clean spark plug with a wire brush if it is to be reused.

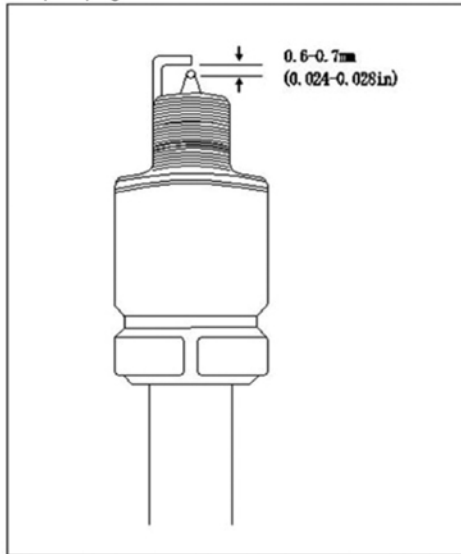

5. Install the spark plug carefully by hand, to avoid cross-threading.
6. After a new spark plug has been seated by hand, it should be tightened $\frac{1}{2}$ turn with a wrench to compress its washer. If a used plug is being reinstalled, it should only require $\frac{1}{8}$ to $\frac{1}{4}$ turns after being seated.
7. Reinstall the ignition coil rubber boot on the spark plug securely.
8. Reinstall the controlling panel.



- The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the generator.
- Never use a spark plug with an improper heat range.
- Never use a spark plug without damping resistance, or it will cause no AC output.

7 TRANSPORTING AND STORAGE


To prevent fuel spillage when transporting or during temporary storage, the generator should be secured upright in its normal operating position, with the engine switch OFF. The fuel cap valve knob is turned counter clockwise to the OFF position. Allow the engine to cool well before turning the fuel cap vent lever to the OFF position.

7.1 When transporting generator:

- Do not overfill the tank. (there should be no fuel in the filler neck)
- Do not operate the generator while it is on a vehicle. Take the generator off the vehicle and use it in a well ventilated place.
- Avoid a place exposed to direct sunlight when putting the generator on a vehicle. If the generator is left in an enclosed vehicle for many hours, high temperature inside the vehicle could cause fuel to vaporize resulting in a possible explosion.
- Do not drive on a rough road for an extended period with the generator on board. If you must transport the generator on a rough road, drain the fuel from the generator beforehand.

4.2 Check the fuel level.

- Turn the fuel cap lever to "OFF" position before transporting.
- Use automotive fuel (Unleaded or low leaded is preferred to minimize combustion chamber deposits).
- !! Don't use fuel containing alcohol: Fuel system damage or engine performance problems resulting from the use of fuels that contain alcohol are not covered under the warranty.
- Never use an oil/gasoline mixture or dirty gasoline.
- Avoid getting dirt, dust or water in the fuel tank.
- After refuelling, tighten the fuel filler cap securely.

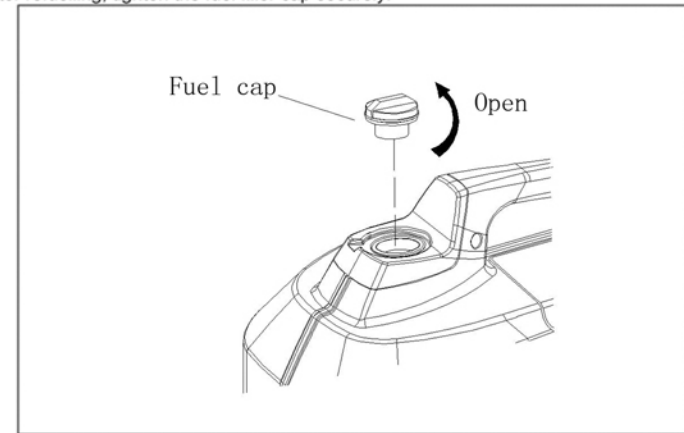


- Gasoline is extremely flammable and is explosive under certain conditions.
- Refuel in a well-ventilated area with the engine stopped.
- Do not smoke or allow flames or sparks in the area where the engine is refuelled or where gasoline is stored.
- Do not overfill the fuel tank. After refuelling, make sure the tank cap is closed properly and securely.
- Be careful not to spill fuel when refuelling. Spilled fuel or fuel vapour may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- Avoid repeated or prolonged contact with skin or breathing of vapour. KEEP OUT OF REACH OF CHILDREN

4.3 Check the air cleaner.

Check the air cleaner element to be sure it is clean and in good condition.

1. Loosen the cover screw and remove the left side maintenance cover.
2. Press the latch tab on the top of the air cleaner body, remove the air cleaner cartridge, and check the element.
3. Clean or replace the element if necessary.

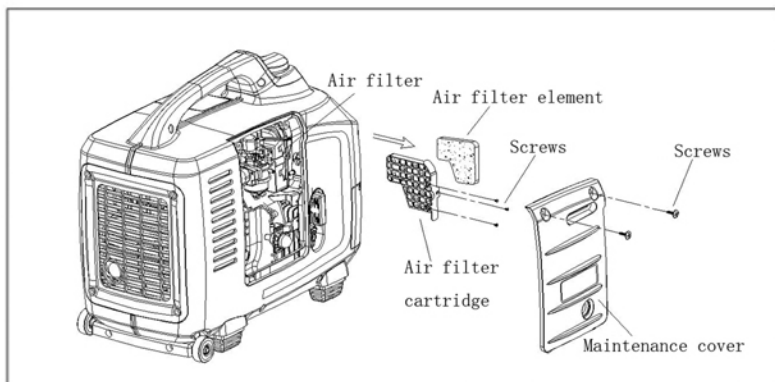

Never run the engine without the air cleaner. Rapid engine wear will result from contaminants, such as dirt, being drawn through the carburetor, into the engine. It is normal for a little oil to appear under the air filter box if the generator is running for a long period of time, or if a lot of oil is in the engine. Wipe up excess oil after each use and after stopping the generator. During normal use, the engine will consume approximately 1 ounce of oil per 2 hours of operation. Always remember to check the oil level before using.


5 GENERATOR USE

5.1 Starting the engine




Before starting the engine, disconnect any load from the DC receptacle.


1. Set the fuel valve in the "ON"-position.

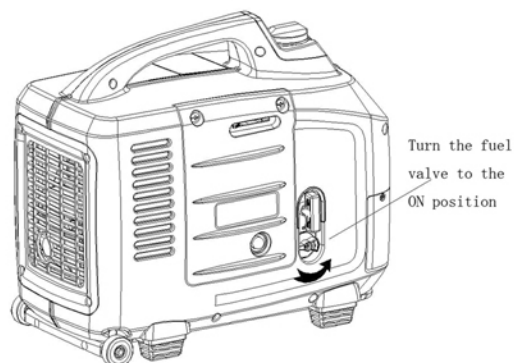


1. Remove the bolts on the top maintenance cover and the cover.

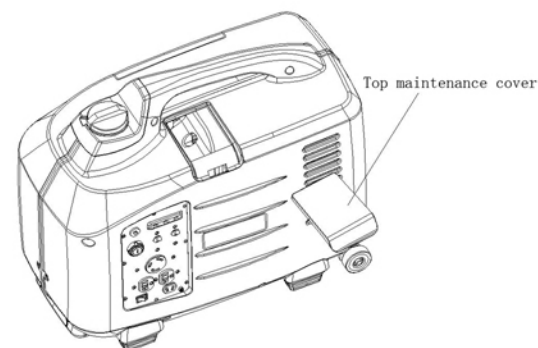


2. Take out the ignition coil rubber boot.

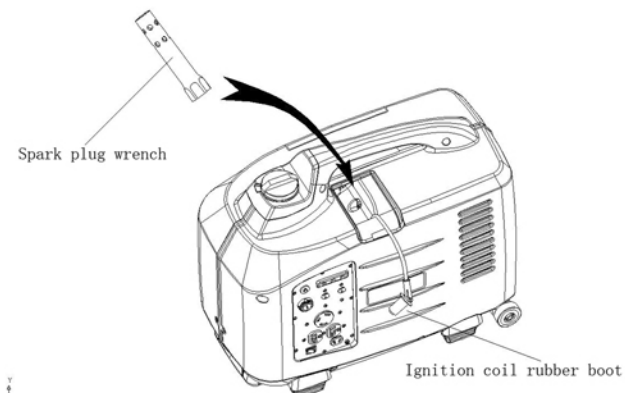

3. Remove the spark plug with spark plug wrench.

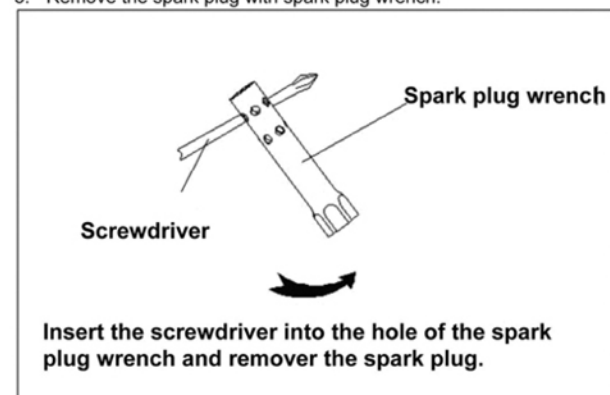

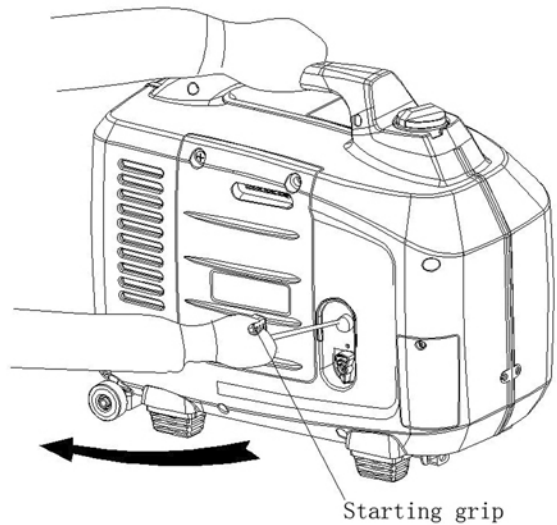

5. After the engine starts, allow the engine to run continuously and warm up.
6. Move the choke completely to the right after the engine is warmed up.



If the engine stops and will not restart, check the engine oil level before troubleshooting in other areas. The engine will consume approximately 1 ounce of oil per 2 hours of operation. This is normal. Always remember to check the oil level before each use.



Before using the device once it is connected, switch off the ECO switch.



5.2 High altitude operation

At high altitude, the standard carburetor air-fuel mixture will be excessively rich and performance will decrease. High altitude performance can be improved by installing a smaller diameter fuel jet in the carburetor. If you always operate the generator at altitudes higher than 1,500 m (5,000 feet) above sea level, contact your dealer to change the carburetor jet for high altitude use. Even with suitable carburetor jetting, engine power may be noticeably reduced compared to operation at sea level.



This generator is not for use at altitudes higher than 4,000 feet above sea level.

Engine oil capacity: 0.47 quart (15 fluid ounces)

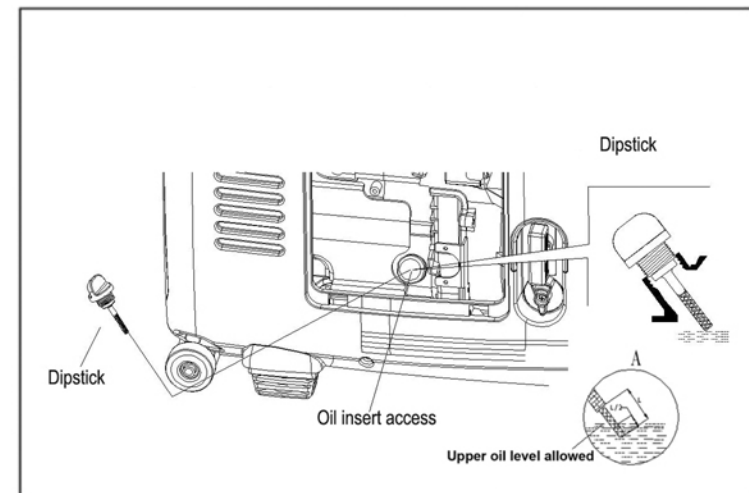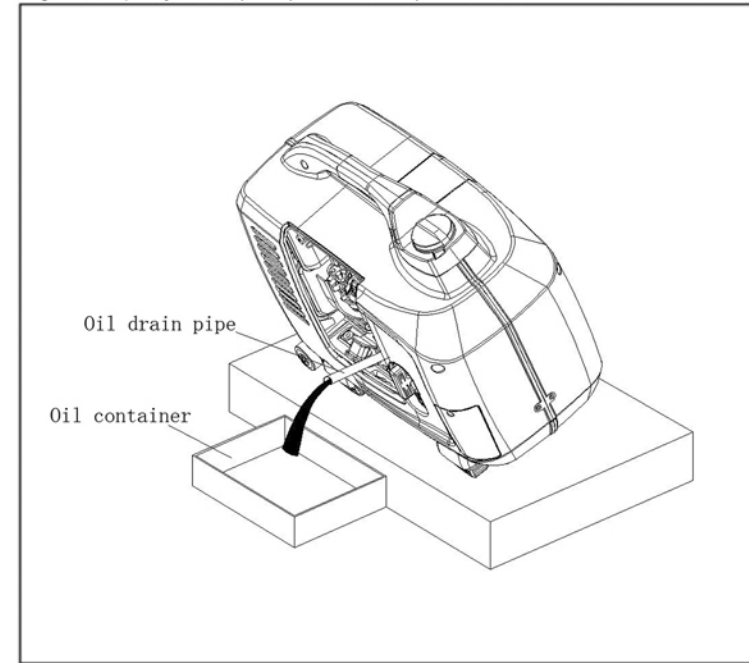

Maintenance Schedule

REGULAR SERVICE PERIOD(1)						
ITEM		EACH USE	FIRST MONTH OR 20HRS	EVERY 3 MONTHS OR 50HRS	EVERY 6 MONTHS OR 100 HRS	EVERY YEAR OR 200 HRS
Perform at every indicated month or operating hour interval, whichever comes first.						
Engine oil	Check level	●				
	Change		●		●	
Air cleaner	Check			●		
	Clean			●(2)		
Spark plug	Check-adjust				●	
Spark arrester	Clean				●	
Valve clearance	Check-adjust					●(3)
Fuel tank and filter	Clean					●(3)
Fuel line	Check	Every 2 years (Replace if necessary) (3)				

NOTE:

- (1) Log hours of operation to determine proper maintenance.
- (2) Service more frequently when used in dusty areas.
- (3) These items should be serviced by a Dometic authorized repair person, unless the owner has the proper tools and is mechanically proficient. See the Service Manual.

Temperature (°C/°F)	Time for changing oil (hour)	Recommended power factor
25/77	Normal	100%
30/86	18	95%
35/95	15	85%
40/104	12	70%

6.1 Changing oil

Drain the oil while the engine is still warm to assure rapid and complete draining.



Make sure to turn the engine switch and the fuel valve knob lever OFF before draining.

1. Thread the oil drain pipe into the oil filler neck as shown (next page).
2. Lean the generator to pour out the oil into a 2-quart (or larger) drain pan.
3. Refill with new oil and check the oil level with the dipstick.
4. After pouring the new oil into the crankcase, shake the generator left to right a few times and make sure the bobber of the oil alarm system is floating.
5. Reinstall the side maintenance cover and tighten the cover screw securely.


5.3 Generator use

Warning

- To prevent electrical shock from faulty appliances, the generator should be grounded. Connect an electric conductor (cable) of at least 16 gauge between the generator's ground terminal and an external ground source.
- Connections for standby power to a building's electrical system must be made by a qualified electrician and must comply with all applicable laws and electrical codes. Improper connections can allow electrical current from the generator to back feed into the utility lines. Such back feed may electrocute utility company workers or others who contact the lines during a power outage, and when utility power is restored, the generator may explode, burn, or cause fires in the building's electrical system.
- If operating with maximum power more than 30 minutes, a small voltage drop and/or overload protector tripping may occur.
- Do not exceed the current limit specified for any one receptacle.
- Do not connect the generator to a household circuit. This could cause the damage to the generator or to electrical appliances in the house.
- Do not modify or use the generator for other purpose than it is intended for. Also observe the following when using the generator.
 - Do not connect generators in parallel.
 - Do not connect an extension to exhaust pipe.
- When an extension cable is required, be sure to use a rubber sheathed flexible cable.
- Limit length of extension cables: 150 feet for cables of 16 gauge and 300 feet for cables of 12 gauge.
- Keep the generator away from other electric cables or wires such as distribution network.
- The DC receptacle can be used while the AC power is in use. If you use both at the same time, be sure not to exceed the total power for AC and DC.
- Most appliance motors require more than their rated wattage for start-up.

5.4 AC applications

1. Start the engine and make sure the output indicator light (green) illuminates.
2. Confirm that the appliance to be used is switched off, and plug in the appliance.

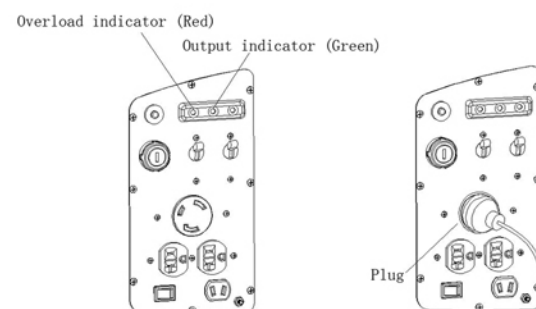

- Substantial overloading that continuously lights the overload indicator light (red) may damage the generator. Marginal overloading that temporarily lights the overload indicator light (red) may shorten the service life of the generator.
- Be sure that all appliances are in good working order before connecting them to the generator. If an appliance begins to operate abnormally, becomes sluggish, or stops suddenly, turn off the generator engine switch immediately. Then disconnect the appliance, and examine it for signs of malfunction.


5.5 Output and Overload Indicators.

- The output indicator light (green) will remain lighted during normal operating conditions.
- If the generator is overloaded or if there is a short in the connected appliance, the output indicator light (green) will go OFF, the overload indicator light (red) will go ON and current to the connected appliance will be shut off.
- Stop the engine if the overload indicator light (red) switches ON and investigate the overload source.




Before connecting an appliance to the generator, check that it is in good order, and that its electrical rating does not exceed that of the generator. Then connect the power cord of the appliance, and start the engine.

Be sure all equipment is turned off before plugging in the power cord.

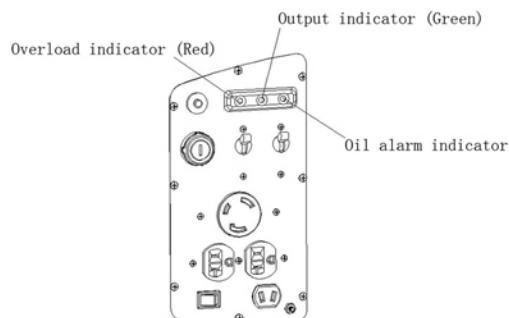

- When an electric motor is started, both the overload indicator light (red) and the output indicator light (green) may go on simultaneously. This is normal if the overload indicator light (red) goes off after about four seconds.
 - If the overload indicator light (red) stays on, **consult your dealer**.
1. Connect the ground terminal

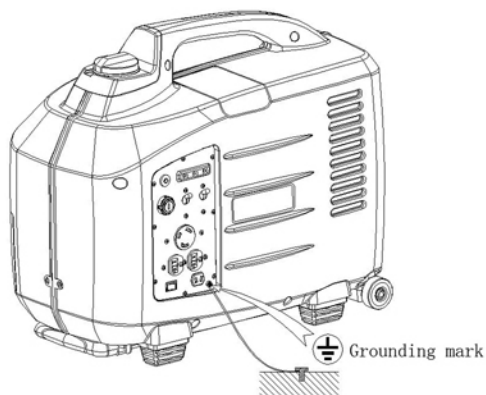

2. Start engine according to "STARTING THE ENGINE".

6 MAINTENANCE


- The purpose of the maintenance and adjustment schedule is to keep the generator in the best operating condition.
- Inspect or service as scheduled in the table below.




Shut off the engine before performing any maintenance. If the engine must be run, make sure the area is well ventilated. The exhaust contains poisonous carbon monoxide gas.




Use authorized parts or their equivalent. The use of replacement parts which are not of equivalent quality may damage the generator.

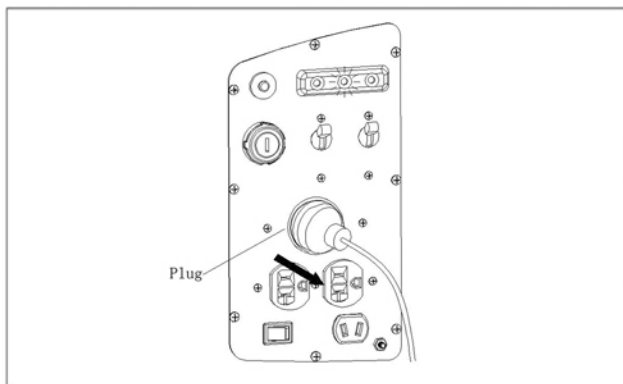

2. Turn the engine switch(Electric start key) to the OFF position

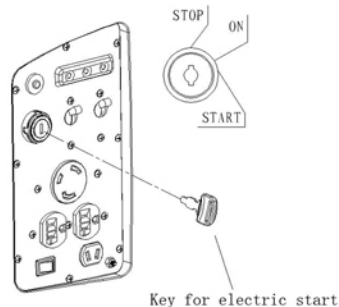

3. Turn the fuel valve knob to the "OFF" position.

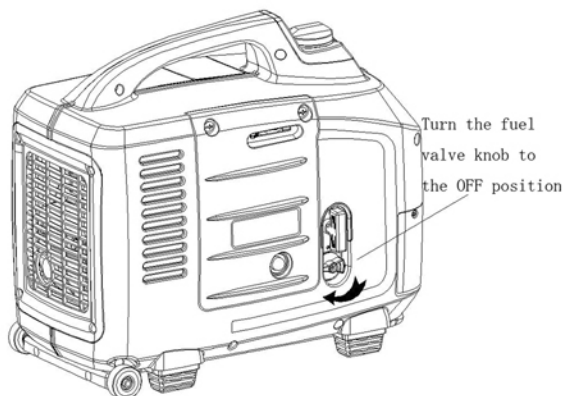

Be sure both the fuel valve knob and the engine switch are in "OFF" position when stopping, transporting and/or storing the generator.




When the output indicator light (green) does not light and the overload indicator light (red) lights instead, set the engine switch to STOP, stop the engine at once and then start the engine again.

3. Confirm that the equipment to be used is switched off, and insert the plug of the equipment to be used into the AC receptacle.



Check that the equipment to be connected is switch off. When the equipment to be used is switched on, it will operate suddenly when plugged in, and injuries or accidents may be caused.

4. Switch on the equipment output indicator light will come on. In case of overload operation or when trouble occurs for the equipment being used, the output indicator light (green) will go out, the overload indicator light (red) will light continuously, and no power will be put out. At this time, the engine will not stop, so that the engine must be stopped by setting the respective engine switch to STOP.

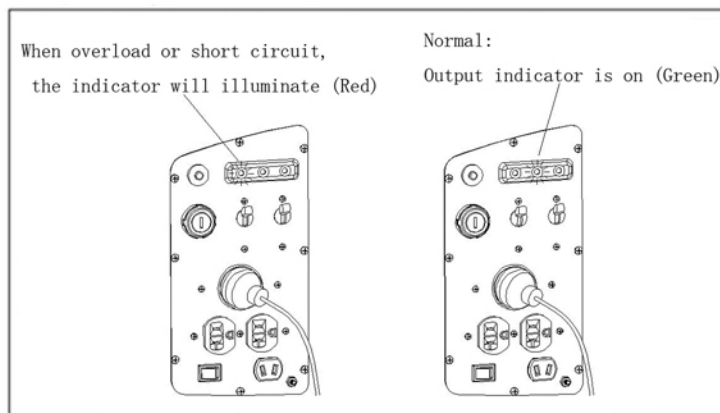

When equipment requires a large starting power, the overload indicator lights (red) and the output indicator light (green) may light together for a short time, but this is normal. After start of the equipment, the overload indicator light (red) will go out and the output indicator light (green) will stay lit.

AC	Electric lamps	Power tools	Electromotor	DC battery
Power factor	1	0.8-0.9	0.4-0.7 (Efficiency 0.85)	
LW3000PLUS	0-2600W	0-2000W	0-1000W	Rated voltage 12V Rated current 6A(for Canada) 8A (except for Canada)

5.6 DC applications

For charging 12V automotive batteries:

	Idling voltage (V)	Loading voltage (V)	Loading current (A)
Opening the smart throttle	22	12	6
Closing the smart throttle	27	13	8.5
DC Max. output power	37	13.5	8.5


The generator cannot sense a sensibility load with the same power which the manual indicates. It only can sense 40%-70% power which the manual indicates.

Example:

Model		LW3000PLUS
Generator rated output		2600VA
Frequency	Power factor	
AC	1.0	0~2600VA
	0.4~0.75	0-920W ~ 1725W
DC		100W (12V/8.3A)

Warning


- When using the DC output, turn Smart Throttle to the OFF position. The DC current will be below 5A if turning on the Smart Throttle without AC current output.
- When charging batteries, person must be present to monitor the voltage. Stop charging when the voltage of the batteries is above 16V. Or it may cause battery explosion, resulting in serious injury or death.

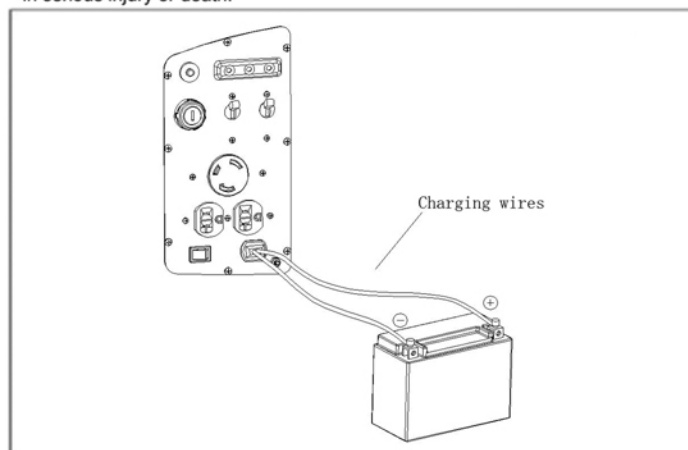

- To prevent the possibility of creating a spark near the battery, connect charging cable first to the generator, then to the battery. Disconnect cable first at the battery.
- Before connecting charging cables to a battery that is installed in a vehicle, disconnect the vehicle's grounded battery cable. Reconnect the vehicle's grounded battery cable after the charging cables are removed. This procedure will prevent the possibility of a short circuit and sparks if you make accidental contact between a battery terminal and the vehicle's frame or body.
- Do not attempt to start an automobile engine while the generator still connected to the battery. The generator may be damaged.
- Connect the positive battery terminal to the positive charging cord. Do not re-verse the charging cables, or serious damage to the generator and/or the battery may occur.
- The battery gives off explosive gases; keep spark, flames and cigarettes away. Provide adequate ventilation when charging.
- The battery contains sulphuric acid (electrolyte). Contact with skin or eyes may cause severe burns. Wear protective clothing and a face shield.
 - If electrolyte gets on your skin, flush with water.
 - If electrolyte gets in your eyes, flush with water for at least 15 minutes and call a physician.
- Electrolyte is poisonous.
 - If swallowed, drink large quantities of water or milk and follow with milk or magnesia or vegetable oil and call a physician.
- KEEP OUT OF THE REACH OF CHILDREN, PETS AND UNTRAINED PEOPLE.


5.7 DC circuit breaker

- The DC receptacle may be used while the AC power is in use.
- An overloaded DC circuit will trip the DC circuit protector. If this happens, disconnect the DC load before pushing in the circuit protector to resume operation.

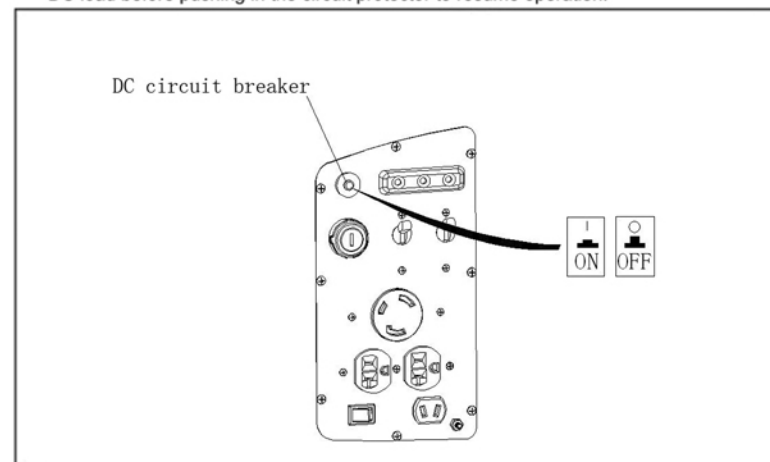

5.8 Oil alert system

- The oil alert system is designed to prevent engine damage caused by an insufficient amount of oil in the crankcase. Before the oil level in the crankcase falls below a safe limit, the oil alert system will automatically shut down the engine (the engine switch will remain in the ON position).
- If the oil alert system shuts down the engine, the oil alert indicator light (red) will come on when you operate the starter, and the engine will not run. If this occurs, add engine oil.

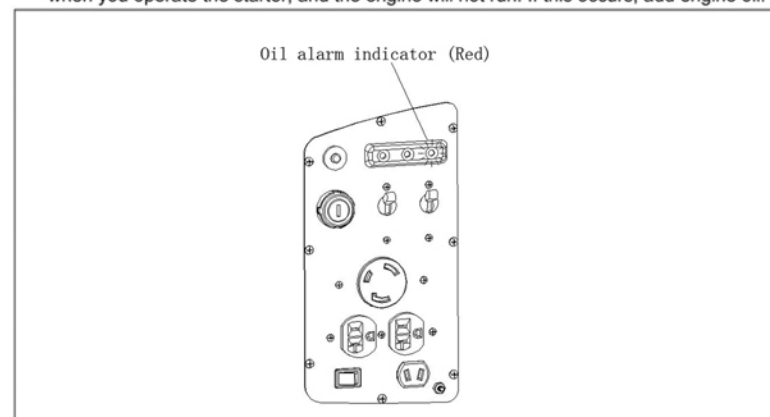

During normal operation, the engine will consume approximately 1 ounce of oil per 2 hours of operation.

5.9 Stopping the engine

To stop the engine in an emergency, turn the engine switch to the OFF position.

In normal use:

- Switch off the connected equipment and pull the inserted plug out.

Wash your hands with soap and water after handling used oil.



Please dispose of used motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station for reclamation. Do not throw it in the trash or pour it on the ground.


6.2 Air cleaner service

A dirty air cleaner will restrict air flow to the carburettor. To prevent carburettor malfunction, service the air cleaner regularly. Service more frequently when operating the generator in extremely dirty areas. It is normal for the air cleaner to accumulate some oil.



Do not use gasoline or low flash point solvents for cleaning. They are flammable and explosive under certain conditions.

1. Loosen the cover screw and remove the access panel.
2. Remove the screw under the air filter case.
3. Pull the air filter cartridge down 1 1/4 inch and remove the air filter cartridge.
4. Remove the air filter iron clip and check the air filter element. Clean or replace the element if necessary.
5. Reinstall the air filter parts after cleaning or replacing air filter element.

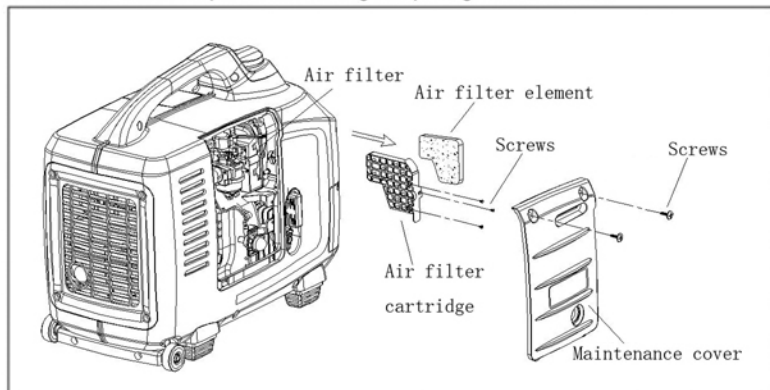


6.3 Spark plug servicing


Please use high quality authentic spark plug.

To ensure proper engine operation, the spark plug must be properly gapped and free of deposits.

2. To start a cold motor move the choke lever all the way to the left. To restart a hot motor set the choke lever half-way.

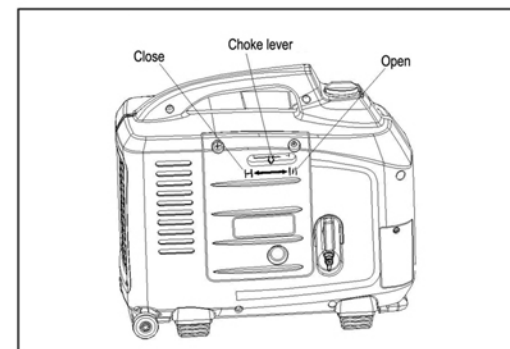

Choosing the right choke position is the key to starting the motor. You may have to practise a few times to use the choke correctly.




Move the choke completely to the right to restart a hot motor. Position the choke to about halfway to restart a warm motor.



A hot motor will not start if there is too much fuel in the cylinder. If this happens, wait five to ten minutes before trying again. Move the choke completely to the right and the motor should start.

3. Put the electric start key into engine switch, and turn it to "ON" position.

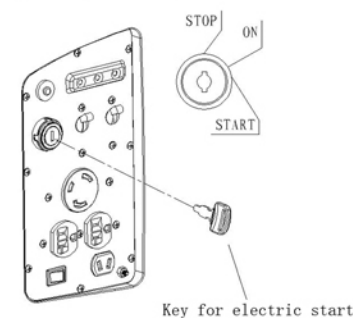

4. Pull slightly on the start cord until you feel resistance and then yank hard and swiftly.



Do not let the start cord retract by itself: guide it back by hand.

Hold the carrying handle firmly to prevent the generator from falling over when you pull the start cord.