

WWM-18, WWM-40, WWM-58LPDZ, WWM-80DZ

EN

Portable fridge

Operating Manual..... 3

Copyright

The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or pending patent. All rights are reserved.

English

1	Important notes.....	3
2	Explanation of symbols.....	3
3	Safety instructions.....	3
4	Explanation of symbols on the device.....	5
5	Scope of delivery.....	6
6	Accessories.....	7
7	Intended use.....	7
8	Technical description.....	7
9	Operation.....	10
10	Cleaning and maintenance.....	21
11	Troubleshooting.....	22
12	Warranty.....	23
13	Disposal.....	25
14	Technical data.....	25

1 Important notes

Please read these instructions carefully and follow all instructions, guidelines, and warnings included in this product manual to ensure that you install, use, and maintain the product correctly at all times. These instructions **MUST** remain with this product.

By using the product, you confirm that you have read all instructions, guidelines, and warnings carefully and that you understand and agree to comply with the terms and conditions set out herein. You agree to use this product only for its intended purpose and application, and in accordance with the instructions, guidelines, and warnings set out in this product manual, as well as in accordance with all applicable laws and regulations. Failure to read and follow the instructions and warnings set out herein may result in injury to yourself or others, damage to your product, or damage to other property in the vicinity. This product manual, including the instructions, guidelines, warnings, and related documentation, may be subject to changes and updates. For up-to-date product information, please visit qr.dometic.com/bgWFax.

2 Explanation of symbols

A signal word will identify safety messages and property damage messages, and will also indicate the degree or level of hazard seriousness.



WARNING!

> Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION!

> Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.



NOTICE!

> Indicates a situation that, if not avoided, could result in property damage.



NOTE Supplementary information for operating the product.

3 Safety instructions



WARNING! Explosion hazard

> Do not store any explosive substances such as spray cans with a flammable propellant in the portable fridge.



WARNING! Electrocutation hazard

- > Do not operate the portable fridge if it is visibly damaged.
- > If the portable fridge's power cable is damaged, it must be replaced with a suitable power cable or assembly available from the manufacturer or its service agent to prevent safety hazard.
- > This portable fridge may only be repaired by qualified personnel. Improper repairs can lead to considerable hazards.
- > Plug the device into power outlets that ensure a proper connection, especially when the device needs to be earthed.



WARNING! Fire hazard

- > When positioning the portable fridge, ensure that the supply cord is not trapped or damaged.
- > Do not locate multiple portable socket-outlets or portable power supplies at the rear of the device.
- > In the event of any damage to the refrigerant circuit:
 - Keep open flames and potential ignition sources away from the portable fridge.
 - Ventilate the room well.
 - Switch off the portable fridge.
- > For portable fridges with flammable refrigerant: The refrigeration circuit contains a small amount of a flammable refrigerant. The refrigerant does not harm the ozone layer and does not contribute to the greenhouse effect. Any leaking refrigerant may ignite.
- > Keep the ventilation openings on the device housing or in installations free of obstructions.
- > Do not use any mechanical objects or other means to speed up the defrosting process, unless they have been recommended by the manufacturer for this purpose.
- > Do not open or damage the refrigerant circuit.
- > Do not use electrical devices inside the portable fridge unless they are recommended by the manufacturer for that purpose.



WARNING! Health hazard

- > **For the European Union, UK and Turkey:** This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved. **For all other regions:** This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.
- > Children must be supervised to ensure that they do not play with the device.
- > Cleaning and user maintenance must not be carried out by unsupervised children.



WARNING! Pinch hazard

The lid may close unexpectedly and cause injury.

- > Keep fingers clear of lid hinges and closing areas.



CAUTION! Electrocutation hazard

- > Before starting the portable fridge, ensure that the power cable and the plug are dry.
- > Disconnect the portable fridge from the power supply
 - Before each cleaning and maintenance
 - After every use



CAUTION! Health hazard

- > To avoid contamination of food, observe the following instructions:
 - Check if the cooling capacity of the portable fridge is suitable for storing the food to be cooled.
 - Food may only be stored in its original packaging or in suitable containers.

- Opening the portable fridge for long periods of time can cause significant increase of the temperature in the compartments of the device.
- Clean surfaces regularly that can come into contact with food and accessible drainage systems.
- > If the portable fridge is left empty for long periods:
 - Switch off the portable fridge.
 - Defrost the portable fridge.
 - Clean and dry the portable fridge.
 - Leave the lid open to prevent mould from developing within the portable fridge.



NOTICE! Damage hazard

- > Check that the voltage specification on the rating label corresponds to that of the energy supply.
- > Only connect the portable fridge to a DC power supply in the vehicle with the DC connection cable.
- > Never pull the plug out of the socket by the cable.
- > Disconnect the portable fridge and other power consuming devices from the battery before connecting a quick charging device.
- > The portable fridge is not suitable for transporting caustic materials or materials containing solvents.
- > The insulation of the portable fridge contains flammable cyclopentane and requires special disposal procedures. Deliver the portable fridge at the end of its life-cycle to an appropriate recycling centre.
- > Do not place the portable fridge near open flames or other heat sources such as heaters, direct sunlight, gas ovens, and similar items.
- > **Risk of overheating!** Ensure at all times that there is a minimum of 50 mm ventilation on all sides of the portable fridge. Keep the ventilation area free of any objects that could obstruct the air flow to the cooling components. Do not use or store the portable fridge in closed compartments or areas with none or minimal air flow.
- > Do not fill the inner container with ice or fluids.
- > Never immerse the portable fridge in water.
- > Protect the portable fridge and cables against heat and moisture.
- > The portable fridge shall not be exposed to rain.



NOTICE! Damage hazard due to insufficient compressor lubrication

If the product exceeds a tilt angle of 30 ° during continuous use, damage to the compressor may occur due to insufficient lubrication.

- > Ensure that the tilt of the product does not exceed 30 ° during continuous operation.



NOTE Battery discharge risk

The portable fridge includes a battery protection feature that can help reduce the risk of discharging the vehicle's starting battery. Battery discharge risk varies depending on vehicle battery condition, installation, and usage.

- > If the vehicle engine will remain off for a prolonged period, switch the portable fridge off or power it from an appropriate house battery system.

4 Explanation of symbols on the device



Warning! Risk of fire. Flammable materials.




USA/Canada only. Warning! Risk of fire. Flammable materials.



Warning! Risk of damage or malfunction caused by moisture.
Keep away from rain.

5 Scope of delivery

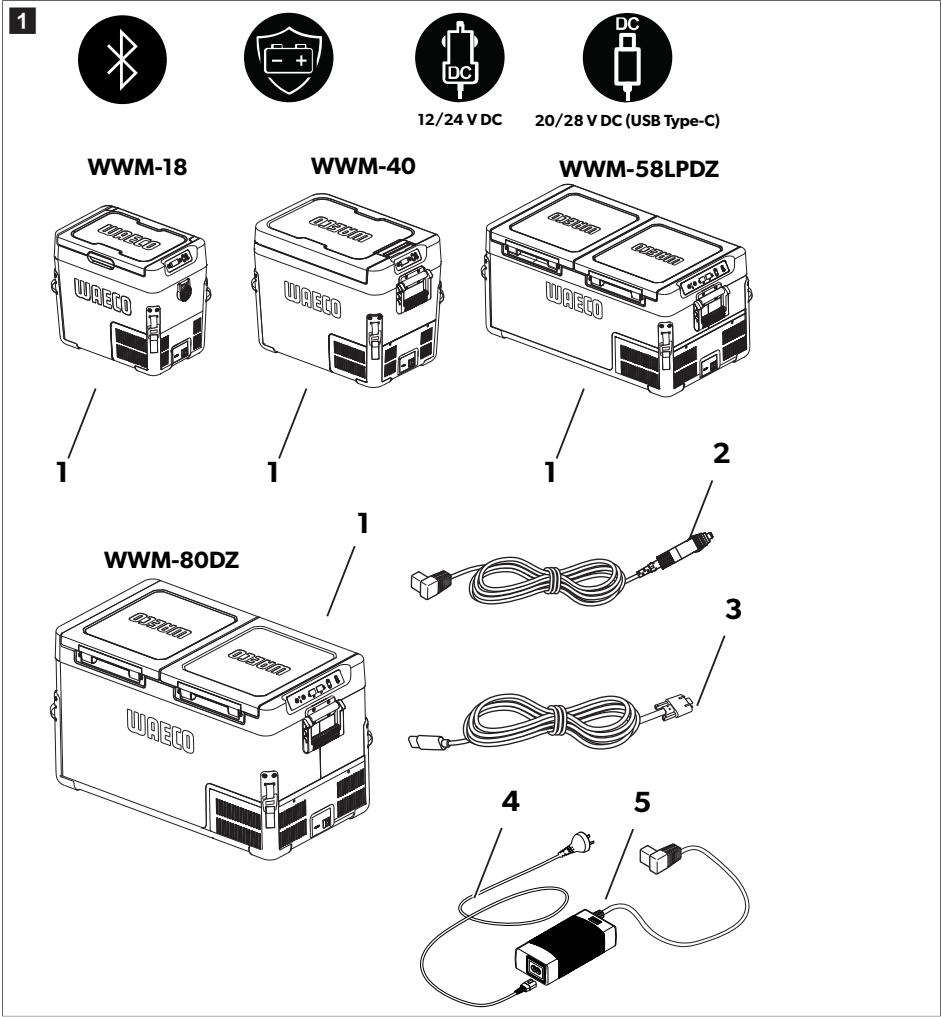

No. in  Fig. 1 on page 6	Quantity	Description
1	1	Portable fridge
2	1	Connection cable for DC connection

No. in  Fig. 1 on page 6	Quantity	Description
3	1	Lockable USB Type-C cable
4	1	Connection cable for AC connection
5	1	WPS90
–	1	Short operating manual

6 Accessories

Item	Item no.
Universal Accessory Pouch (UAP)	97000125730

7 Intended use

The portable fridge is suitable for cooling food. The portable fridge is also suitable for use in vehicles.

The portable fridge is designed to be operated from a DC on-board power supply of a vehicle or from a DC house battery.

The portable fridge is suitable for camping use.

The portable fridge is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices, and other working environments
- Farm houses
- Clients in hotels, motels, and other residential type environments
- Bed and breakfast type environments
- Catering and similar non-retail applications

The portable fridge is **not** suitable for long-term deep-freezing of food.

This portable fridge is suitable for portable use and **not** intended to be used as a built-in appliance.

The portable fridge is **not** suitable for:

- Storage of corrosive, caustic or solvent-containing substances

This product is only suitable for the intended purpose and application in accordance with these instructions.

This manual provides information that is necessary for proper installation and/or operation of the product. Poor installation and/or improper operation or maintenance will result in unsatisfactory performance and a possible failure.

The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect installation, assembly or connection, including excess voltage
- Incorrect maintenance or use of spare parts other than original spare parts provided by the manufacturer
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in this manual

Waeco reserves the right to change product appearance and product specifications.

8 Technical description


A low-maintenance refrigerant circuit with compressor provides the cooling. The generous insulation and the powerful compressor ensure efficient and rapid cooling. The cooling device is portable. The cooling device can withstand a short-term inclination of 30 °.

8.1 Scope of functions


- Three-level battery monitor to protect the vehicle battery (automatically switches off at low battery voltage)
- Display with temperature gauge in °C and °F
- Temperature setting: In steps of 1 °C (1 °F)
- Display dimming function with 3 brightness levels
- Removable carry handles

8.2 Operating and display elements

2 WWM-18, WWM-40

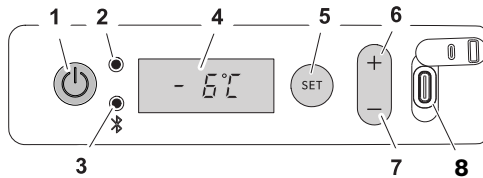


WWM-58LPDZ, WWM-80DZ

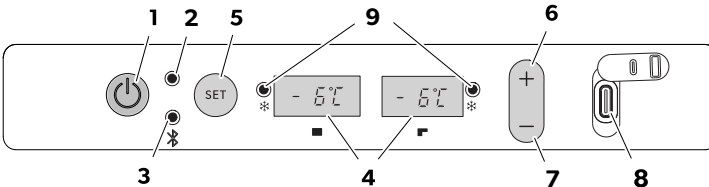

No. in  Fig. 2 on page 8	Item	Description
1		Switches the cooling device on or off when the button is pressed for 3 s.
2		Compressor status indicator • The LED lights up green – compressor is on. • The LED lights up orange – compressor is off.
3		Bluetooth status indicator • The LED lights off – Bluetooth off • The LED lights up blue – The cooling device is paired with a device via Bluetooth. • The LED flashes blue slowly – The Bluetooth of the cooling device is switched on. The cooling device is not paired with a device. • The LED flashes fast blue – The cooling device is pairing with a device via Bluetooth.
4	–	LED display: shows information.


No. in  Fig. 2 on page 8	Item	Description
5	SET	• Sets temperature • Displays Celsius (°C) or Fahrenheit (°F) • Sets battery monitor • Sets display brightness • Sets Bluetooth • (Dual-zone cooling devices only) Controls zones
6	+	Press once to increase the value.
7	-	Press once to decrease the value.
8	-	USB Type-C port (supports 5 V= 3 A / 9 V= 2 A / 12 V= 1.5 A)
(WWM-58LPDZ, WWM-80DZ only) 9		LED indicator: • LED lights up blue – the compartment is cooling. • LED lights off – the compartment is off.

8.3 Connection socket

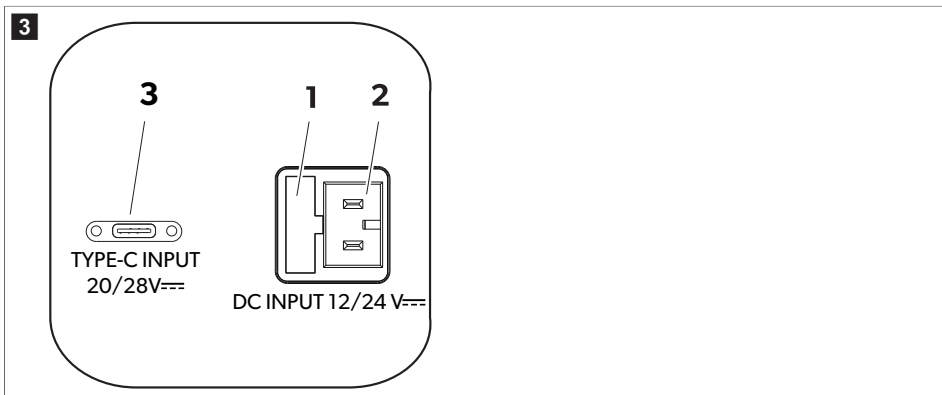

No. in  Fig. 3 on page 9	Description
1	DC fuse cover
2	Connection socket for DC voltage supply
3	Lockable USB Type-C socket

WWM-58LPDZ and **WWM-80DZ** each have a connection socket on both sides (left and right).

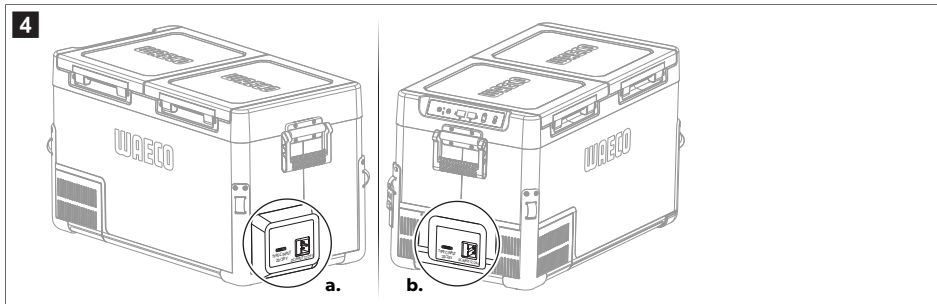

9 Operation

9.1 Preventing food waste

To prevent food waste, please note the following:

- Keep temperature fluctuations as low as possible.
- Store food in a way that allows air to circulate freely.
- If applicable, adjust the temperature according to the quantity and type of food.
- If the cooling device has multiple pantries, store the different foodstuff in the pantry which has the appropriate temperature.
- Food can easily absorb or release odours or flavours. Always store food covered or in closed containers/bottles.

9.2 Saving energy


- > Choose a well-ventilated location that is protected from direct sunlight.
- > Allow warm food to cool before placing it in the portable fridge to keep cool.
- > Do not open the portable fridge more often than necessary.
- > Do not leave the portable fridge open for longer than necessary.
- > If the portable fridge has a basket, position the basket as it was on delivery for optimal energy consumption.
- > Regularly check that the lid seal fits properly.
- > Avoid setting the temperature lower than necessary.

9.3 Before first use

Before starting the portable fridge for the first time, clean it inside and outside with a damp cloth for hygiene reasons (see *Cleaning and maintenance* on page 21).



9.4 Using the lid

Lid latches



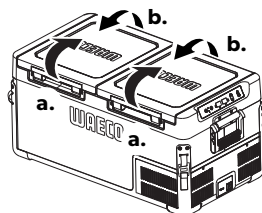
5**WWM-18****WWM-40****WWM-58LPDZ, WWM-80DZ**

Lid stop position



6 WWM-18

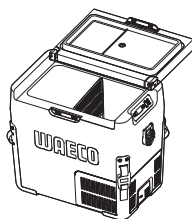

WWM-40

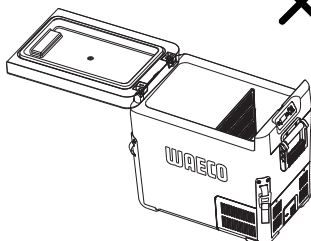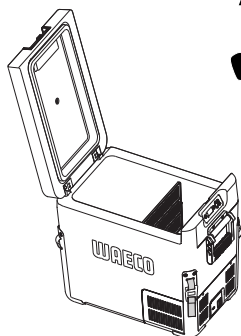

WWM-58LPDZ, WWM-80DZ

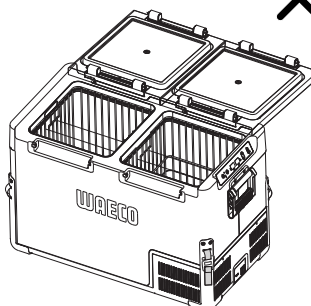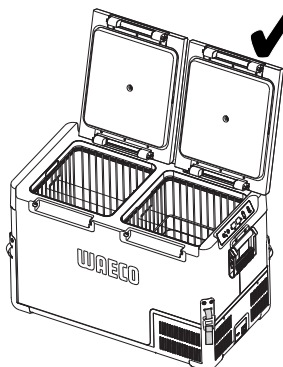

The lid has a built-in stop position (A in ☐ Fig. 6 on page 12).



NOTICE! Damage hazard

> Do not force the lid past the built-in stop position (B in  Fig. 6 on page 12).

9.4.1 (Single-zone cooling devices only) Opening or removing the lid

7



WWM-18

A

B


WWM-40


A

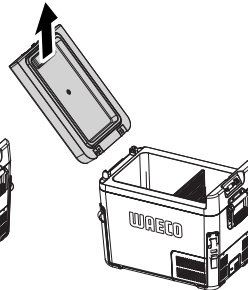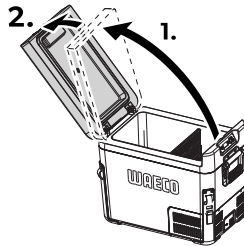B


1. Unlatch to open the lid (A).
2. Push the lid past the lid stop position (B) to remove the lid.

9.4.2 (Dual-zone portable fridges only) Opening or removing the lid


Lids of **WWM-58LPDZ** and **WWM-80DZ** can be opened or removed from both sides.

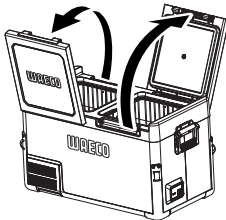8


(Dual-zone portable fridges only) Opening the lid

- > Unlatch one side of the lid to open it.


9 WWM-58LPDZ, WWM-80DZ

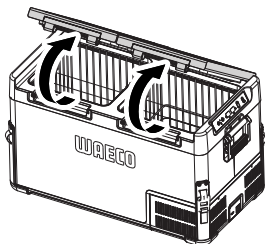


(Dual-zone portable fridges only) Removing the lid

10 WWM-58LPDZ, WWM-80DZ

1.

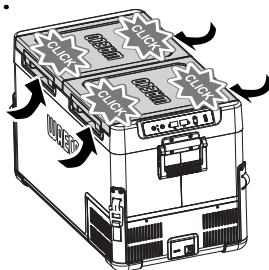

2.

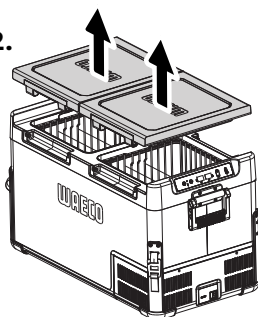

1. Unlatch both sides of the lid.

- ✓ The lid is unlocked.

2. Remove the lid.

9.5 Connecting the portable fridge to a power outlet

9.5.1 Connecting the portable fridge to a DC power outlet

The portable fridge can be operated with a 12 / 24 V DC power supply or a 20 / 28 V DC USB Type-C power supply.

For safety reasons, the portable fridge has an electronic system to prevent polarity reversal. This protects the portable fridge against short-circuiting when connecting to a power source.



NOTICE! Malfunction hazard

- > Ensure that the USB Type-C power supply complies with Power Delivery (PD) 3.0 or later and provides an output voltage of 20 / 28 V DC .



NOTICE! Damage hazard

- > For protection of the device, the DC cable supplied includes a fuse inside the plug. Do **not** remove the fused DC plug. Only use the DC cable supplied.




NOTE Connect the portable fridge to a DC power supply only with the DC cable provided by WAECO.

1. Plug the DC cable into the connection socket of the portable fridge.
 - Plug the DC connection cable (2 in  Fig. 1 on page 6) into the DC voltage socket of the portable fridge (2 in  Fig. 3 on page 9).
 - Plug the lockable USB Type-C cable (3 in  Fig. 1 on page 6) into the USB Type-C socket of the portable fridge (3 in  Fig. 3 on page 9) and tighten the two pins of the lockable USB Type-C cable securely.
2. Connect the connection cable to a DC power outlet.

9.5.2 Connecting the portable fridge to an AC power outlet

- > Connect the portable fridge to an AC power supply using WPS90.

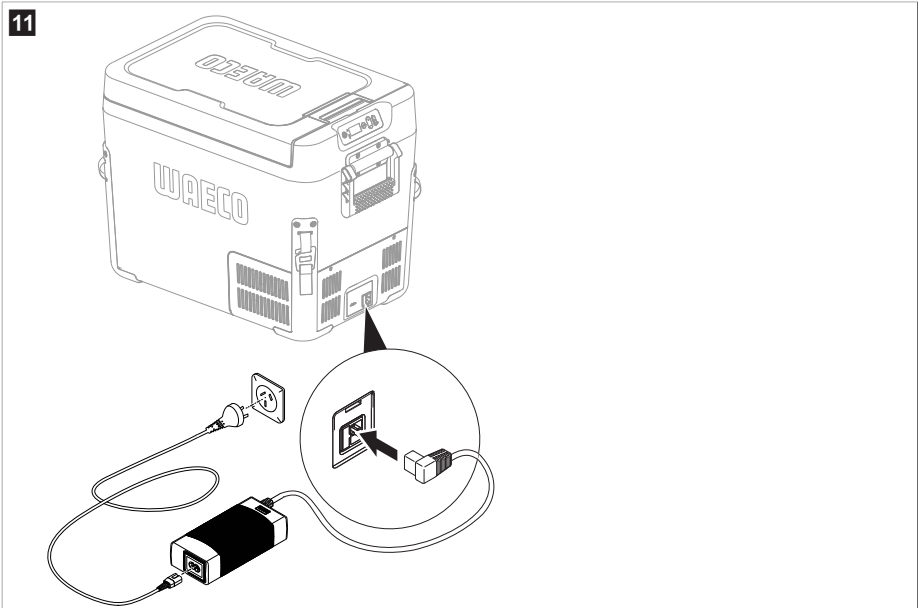

9.6 Switching on the portable fridge



NOTICE! Risk of overheating

- > Ensure there is sufficient ventilation to dissipate the heat generated during operation.
- > Ensure that the ventilation slots are not covered.
- > Ensure the device is positioned far enough from walls and other objects to allow proper air circulation.



NOTICE! Damage hazard from excessively low temperature

- > Ensure the portable fridge is used only for items that are intended to be cooled at the selected temperature.

**NOTICE! Damage hazard**

- > Place the portable fridge as shown in  Fig. 1 on page 6. If the portable fridge is operated in a different orientation, it can be damaged.

1. Place the portable fridge on a firm foundation.
 2. Connect the portable fridge (see [Connecting the portable fridge to a power outlet on page 14](#)).
 3. Press the  button for 3 s.
- ✓ • The  LED lights up.
 - The LED display (4 in  Fig. 2 on page 8) switches on and shows the current temperature.
 - The portable fridge starts cooling the interior.

9.7 Setting temperature**9.7.1 Setting temperature**

1. Press the **SET** button once.
 2. Use the **+** and **-** buttons to select the cooling temperature.
- ✓ The cooling temperature appears on the LED display for a few seconds. The LED display flashes several times and then the current temperature is displayed again.

9.7.2 Dual-zone portable fridges

1. Press the **SET** button:
 - a) Once for the large compartment
 - b) Twice for the small compartment
 - ✓ The LED display of the selected compartment blinks.
 2. Use the **+** and **-** buttons to select the cooling temperature.
- Each compartment can be set to operate as a refrigerator or a freezer compartment.
- ✓ The cooling temperature appears on the LED display of the selected compartment for a few seconds. The LED display flashes several times and then the current temperature is displayed again.

9.8 Setting the temperature unit

You can switch the temperature units between Celsius (°C) and Fahrenheit (°F).

1. Switch on the cooling device.
2. Press the **SET** button:
 - **Single-zone cooling devices:** Twice
 - **Dual-zone cooling devices:** Three times
3. Use the **+** or **-** buttons to select Celsius (°C) or Fahrenheit (°F).
- ✓ The selected temperature unit appears on the LED display for a few seconds. The LED display flashes several times before it returns to the current temperature.

9.9 (Dual-zone portable fridges only) Switching a compartment off or on

If only one compartment is required, switch off the other compartment to save energy.

Switching off a compartment

1. Press the **SET** button:
 - a) Once for the large compartment
 - b) Twice for the small compartment
- ✓ The LED display of the selected compartment blinks.
2. Press the **⊙** button.
- ✓ OFF flashes for 5 s on the LED display, then OFF is displayed.

Switching on a compartment

If the LED display of the selected compartment shows OFF, switch on the compartment.

1. Press the **SET** button:
 - a) Once for the large compartment
 - b) Twice for the small compartment
- ✓ The LED display of the selected compartment blinks.
2. Press the **⊙** button.
- ✓ The cooling temperature appears on the LED display of the selected compartment for a few seconds. The LED display flashes several times and then the current temperature is displayed.

9.10 Setting the LED display brightness

The LED display brightness can be dimmed for low ambient light conditions.

1. Switch on the cooling device.
2. Press the **SET** button:
 - **Single zone cooling devices:** Four times
 - **Dual zone cooling devices:** Five times
3. Use the **+** and **-** buttons to set the brightness of the LED display.

Display	Description
d0	Default
d1	Medium
d2	Dark

- ✓ The LED display shows the set brightness for several seconds. The LED display flashes twice before it returns to the current temperature.



NOTE The factory setting of the LED display brightness is d0.

If a fault occurs, the brightness automatically reverts to d0. After troubleshooting the set brightness is reactivated.

9.11 Using the battery monitor



NOTE The battery monitor operates with DC input only (USB Type-C not supported).

The portable fridge has a multi-level battery monitor that protects the vehicle battery against excessive discharge when the portable fridge is connected to the DC on-board power supply.

If the portable fridge is operated when the vehicle ignition is switched off, the portable fridge switches off automatically as soon as the supply voltage falls below a set level. The portable fridge will switch back on once the battery has been recharged to the restart voltage level.



NOTICE! Damage hazard

- > If switched off by the battery monitor, the battery will no longer be fully charged.
- > Avoid starting repeatedly or operating current consumers without longer charging phases. Ensure that the battery is recharged.



NOTE In the high voltage mode, the battery monitor responds faster than in the low and medium voltage modes.

Battery monitor mode	Lo (Low)	nd (Medium)	HI (High)
Switch-off voltage at 12 V	10.1 V	11.2 V	11.8 V
Restart-voltage at 12 V	11.4 V	12.2 V	12.6 V
Switch-off voltage at 24 V	22 V	24.1 V	24.6 V
Restart voltage at 24 V	23 V	25.3 V	26.2 V

1. Switch on the portable fridge.
2. Press the **SET** button:
 - **Single-zone portable fridges:** Three times
 - **Dual-zone portable fridges:** Four times
3. Use the **+** or **-** buttons to select the battery monitor mode.

Display	Description
Lo	Low voltage mode
nd	Medium voltage mode
HI	High voltage mode

- ✓ The LED display shows the selected mode for a few seconds and flashes several times before it returns to the current temperature.



NOTE When the portable fridge is supplied by the starting battery, select the high voltage mode. If the portable fridge is connected to a house battery, the low voltage mode will suffice.

9.12 Using the app

The cooling device can be monitored and controlled via an app installed on a compatible device.

- > Download and install the app.



Get the app from qr.dometic.com/bg8dET.

9.12.1 Configuring Bluetooth

9.12.1.1 Single-zone cooling devices

1. Switch on the cooling device.
2. Press the **SET** button five times.
3. Use the **+** or **-** buttons to configure Bluetooth.

Display	Description
bLOF	Bluetooth off
bLOn	Bluetooth on
bLPR	Pairing mode

- ✓ The selected Bluetooth status appears on the LED display for a few seconds.

9.12.1.2 Dual-zone portable fridges

1. Switch on the portable fridge.
 2. Press the **SET** button six times.
- ✓ The left LED display shows BL.
3. Use the **+** or **-** buttons to configure Bluetooth on the right LED display.

Display	Description
OF	Bluetooth off
On	Bluetooth on
PR	Pairing mode

- ✓ The selected Bluetooth status appears on the right LED display for a few seconds. The LED display flashes several times before it returns to the current temperature.

9.13 Switching off the portable fridge




NOTE If you do not intend to use the portable fridge for an extended period, leave the lid slightly open. This prevents odour build-up.

1. Empty the portable fridge.
2. Switch off the portable fridge.
3. Unplug the connection cable.

9.14 Using the USB Type-C port


1. Lift the protective cover and rotate it to the side (1.).

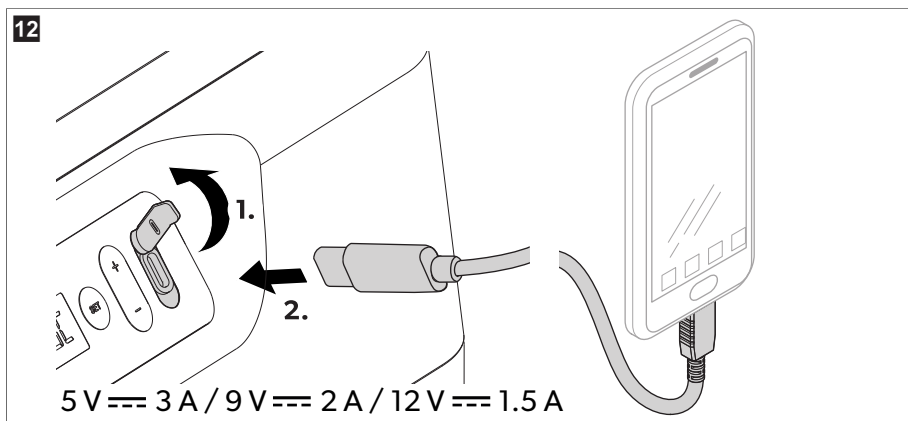


2. Plug in the USB Type-C connector (2.).

9.15 Using accessories

Universal Accessory Pouch (UAP)

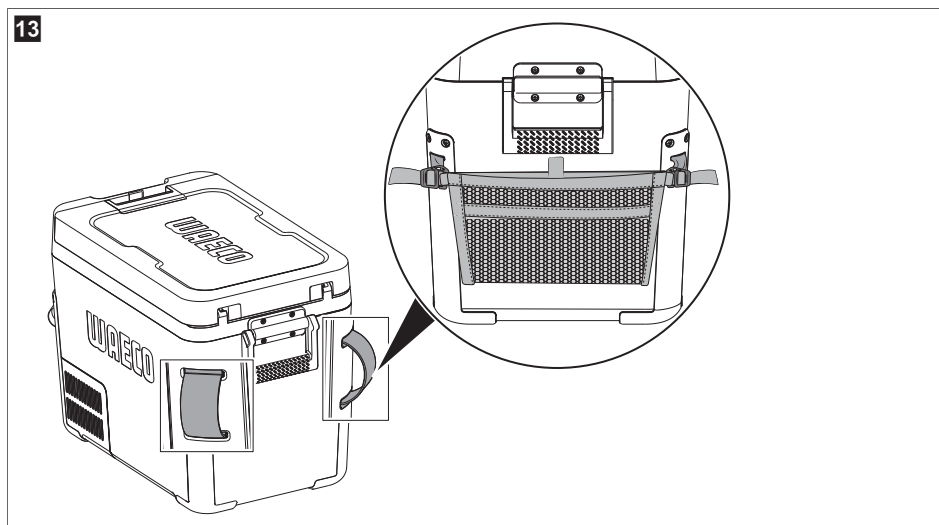

Bottle opener

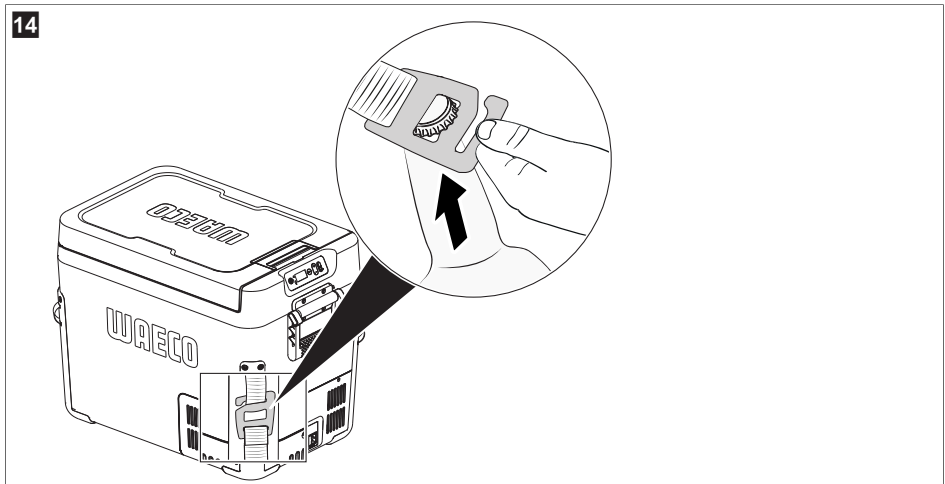

10 Cleaning and maintenance



CAUTION! Electrocution hazard

- > Ensure that the portable fridge is disconnected from the power supply before any cleaning or maintenance work.



NOTICE! Damage hazard

- > Never clean the portable fridge under running water or in a dishwasher.
- > Do not use abrasive cleaning agents or hard objects during cleaning.
- > Occasionally clean the interior and exterior of the device with a damp cloth.
- > Ensure that the air inlet and outlet vents on the portable fridge are free of any dust and dirt, so that heat can be released and the portable fridge is not damaged.

10.1 Defrosting the portable fridge

Humidity can form frost inside the portable fridge or on the evaporator. This reduces the cooling capacity.



NOTICE! Damage hazard

- > Never use hard or pointed tools to remove ice or to loosen objects that have frozen in place.


1. Remove the contents of the portable fridge.
2. If necessary, place the contents in another portable fridge to keep them cold.
3. Switch off the portable fridge.
4. Leave the lid open.
5. Wipe off defrosted water.

10.2 Replacing the DC fuse

1. Disconnect the power supply to the portable fridge.
2. Pry out the fuse cover (1 in  Fig. 3 on page 9) with a screwdriver.
3. Reverse the fuse cover and use the hook to remove the faulty blade fuse.
4. Insert a new fuse of the same type and rating.
5. Re-fit the fuse cover.
6. Reconnect the power supply to the portable fridge.

10.3 Replacing the DC plug fuse

> Replace the faulty fuse with a new fuse of the same type and rating as shown in  Fig. 15 on page 22.

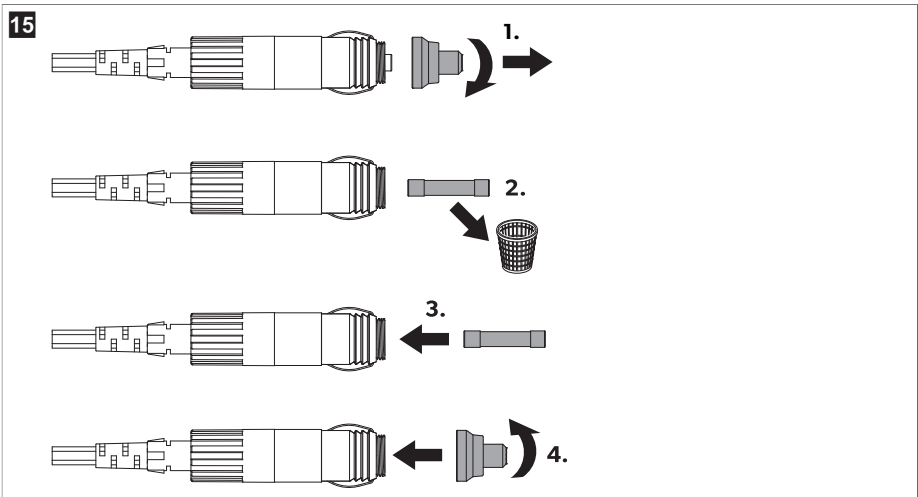

11 Troubleshooting

Problem	Possible cause	Suggested remedy
Device does not operate, LED does not illuminate.	No voltage present at the connected power outlet.	> Plugged into DC power outlet: In most vehicles, the ignition must be switched on before power is supplied to the DC power outlet.
	One of the device fuses is faulty.	> Replace the faulty device fuse, see Replacing the DC fuse on page 22.
The device does not cool (plug is inserted, the compressor status indicator  (2 in  Fig. 2 on page 8) is illuminated).	Faulty compressor system	Contact support: dometic.com/dealer .

Problem	Possible cause	Suggested remedy
The device does not cool (plug is inserted, the compressor status indicator  2 in  Fig. 2 on page 8) is orange, and the LED display shows E01/E 01).	Battery monitor is set too high.	> Select a lower battery monitor setting.
	Battery voltage is too low.	> Test the battery and charge it as required.
	The input voltage exceeds 31.5 V.	> Reduce the input voltage.
When operating from the DC outlet: The ignition is on, and the device is not operating and the LED is not illuminated.	The DC outlet is dirty. This results in poor electrical contact.	> If the plug of the cooling device becomes very warm in the DC outlet, either the DC outlet must be cleaned or the plug has not been assembled correctly.
	The fuse in the DC plug has blown.	> Replace the fuse in the DC plug, see Replacing the DC plug fuse on page 22.
	The device DC fuse has blown.	> Replace the faulty fuse, see Replacing the DC fuse on page 22.
	The vehicle fuse has blown.	> Replace the vehicle's DC outlet fuse (refer to your vehicle's operating manual).
The LED display shows an error code (e.g., E0#/#E 0#) and the cooling device does not cool.	The cooling device has switched off due to an internal fault.	Contact support: dometic.com/dealer .

11.1 Error codes

Error codes		Description
Single-zone models	Dual-zone models	
E 01	E01	Under voltage
E 02	E02	Fan over-current
E 03	E03	Compressor start failure
E 04	E04	Compressor speed low
E 05	E05	Controller over-temperature
E 06	E06	NTC open circuit
E 07	E07	NTC short circuit
–	E09	Valve faulty

12 Warranty

As the purchaser of a new WAECO product, you are entitled to full warranty cover under the conditions set out herein.

If the product does not work as it should, please contact an authorised Dometic Service Agent in your country (see dometic.com/dealer) or seek advice from your original place of purchase.

The warranty applicable to your **WWM** product is **3 years** from the date of purchase.

For repair and warranty processing, please include the following documents when you send in the device:

- A copy of the receipt with purchase date
- A reason for the claim or description of the fault

Note that self-repair or non-professional repair can have safety consequences and may void the warranty.

The warranty covers the following:

- All reasonable normal use
- Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised Dometic advertising or literature

This product is intended for domestic use; the voluntary warranty against defects is provided by the manufacturer to the original purchaser.

We will either repair or replace the product at our discretion, provided that the fault is found to have been caused by a design or manufacturing defect and not misuse, tampering or lack of maintenance.

The warranty does NOT cover the following:

- Damage, loss, or failure caused by external or environmental influences
- Any damage resulting from improper use or lack of regular maintenance
- Fuses, power supply cables, light bulbs
- Modifications carried out not approved in writing by Dometic or any loss caused by such modification
- Non-compliant installations or products not installed in line with the official manufacturer's instructions
- Incorrect setting – user/installer error-created problems
- Damage, loss or failure due to poor or incorrect power supply
- Costs of transportation to get the product to a suitable service point unless prior approved by Dometic
- Damage in transit
- Travel and/or other expenses due to customer remote location
- Cosmetic issues which do not affect normal functionality of the product
- Except as required by law, any loss directly or indirectly associated with the product failing to operate

Australia only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

New Zealand only

This warranty policy is subject to the conditions and guarantees which are mandatory as implied by the Consumer Guarantees Act 1993 (NZ).

Dometic Australia and Dometic New Zealand reserve the right to change the warranty conditions at any time by public notice and by attaching a clear change of warranty terms and conditions notice to the product visible at the time of purchase. No party other than Dometic Australia Pty Ltd or Dometic New Zealand Limited is authorised to change the terms or conditions of this warranty.

For service or assistance visit dometic.com to locate your nearest service agent or call 1800 21 21 21 (AUS) or 09 622 1490 (NZ).

13 Disposal



Recycling packaging material: Place the packaging material in the appropriate recycling waste bins wherever possible. This separation is necessary, as packaging is a valuable resource and improper disposal may impact human health and the environment.



Recycling products with non-replaceable batteries, rechargeable batteries, or light sources:

- If the product contains any non-replaceable batteries, rechargeable batteries, or light sources, you do not have to remove them before disposal.
- If you wish to finally dispose of the product, ask your local recycling centre or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.

14 Technical data

The refrigeration circuit contains a small amount of an environmentally friendly but flammable refrigerant. The refrigerant does not harm the ozone layer and does not contribute to the greenhouse effect. Any leaking refrigerant may ignite.

	WWM-18	WWM-40	WWM-58LPDZ	WWM-80DZ
Net weight	10.7 kg	13.3 kg	22.2 kg	25.1 kg
Dimensions (W×H×D)	499 mm × 426 mm × 302 mm	374 mm × 467 mm × 632 mm	890 mm × 409 mm × 455 mm	890 mm × 500 mm × 455 mm
Volume	19 L	39 L	58 L	78 L

waeco.com