



High Static Baffle Installation

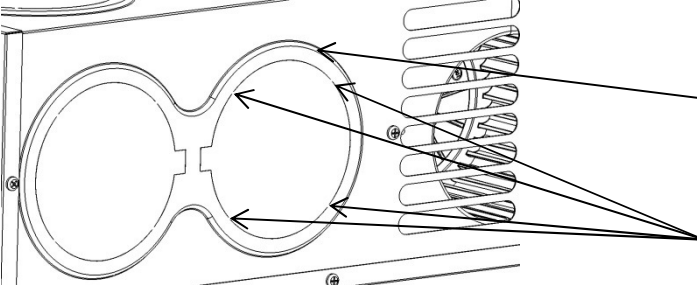


1) Locate front vent knock-out on blower side of furnace.


2) To separate knockout from casing break the four stays shown here.

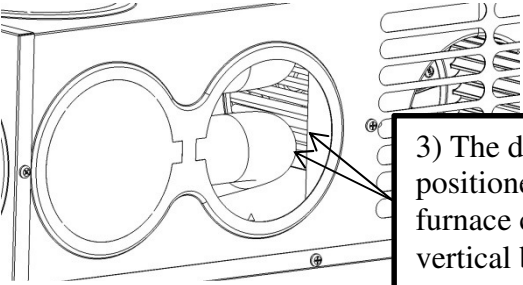


3) The deflector must be positioned between the furnace chamber and the vertical blower deflector

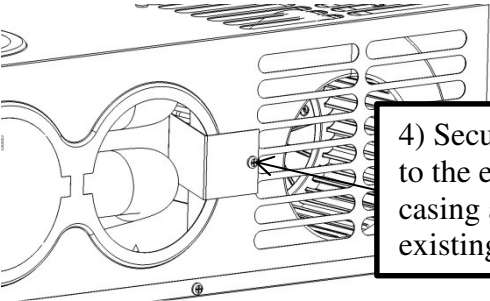

4) Secure the deflector to the exterior of the casing as shown using existing screw.

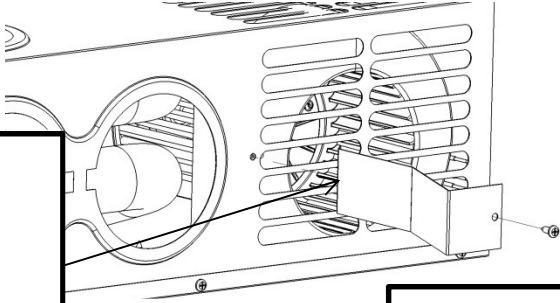


5) Position the duct cover plate over the knock-out opening with the plate tabs inside the casing.

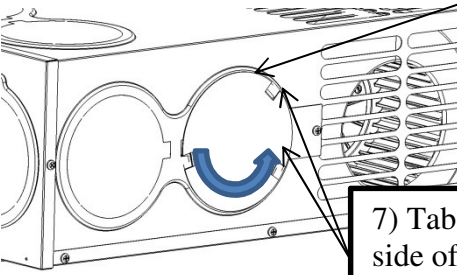


6) Rotate the plate tabs away from the notch in the knock out opening.

7) Tabs lock either side of bracket.

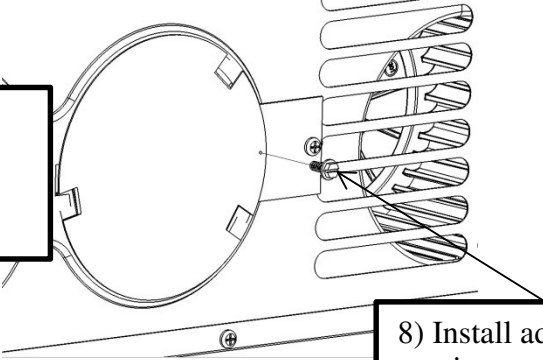

8) Install addition self-tapping screw to keep the deflector from rotating.

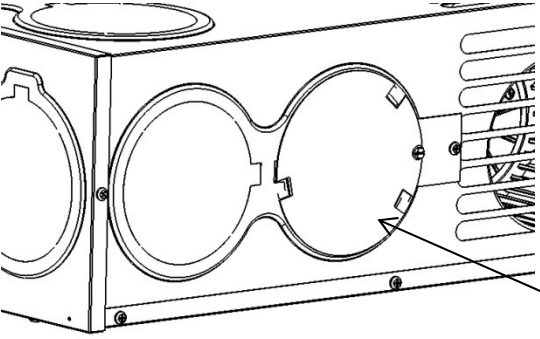

9) Final assembly view of all items included in the high static baffle installation.