



1120 North Main Street • Elkhart, IN 46514

PHONE: 574-264-2131 FAX: 574-206-9713

INTERNET: <http://www.atwoodmobile.com>

LITERATURE NUMBER MPD 32298

INSTALLATION INSTRUCTIONS

FURNACE REPLACEMENT

FRONT DISCHARGE 79-AFS

7/15

Installation Instructions New Furnace Door

Installation instruction is for use only when replacing a 7900/8000 series furnace with an AFS series units.

Replacement Kit #30260 Kit, AFS-79/80 Front Discharge

Outside Door Kit # 32344 #44 Black

Outside Door Kit # 32343 #34 White




CAUTION

**ONLY A QUALIFIED TECHNICIAN
MUST REPLACE OR INSTALL UNIT**

REMOVE FURNACE:

1. Remove furnace by removing screws holding outside vent. Remove vent parts from opening.
2. Disconnect furnace ducting and gas line.
3. Remove screws from cabinet holding furnace.
4. Check opening for install of new unit; $8\frac{3}{8}"$ x $12\frac{1}{2}"$.
5. Install trim ring to cabinet front may require small wood strip across bottom to attach screw.
6. Install duct adapter if front discharge is required and attach ducting to back of grill front.
7. Attach grill front to trim ring with two screws provided.

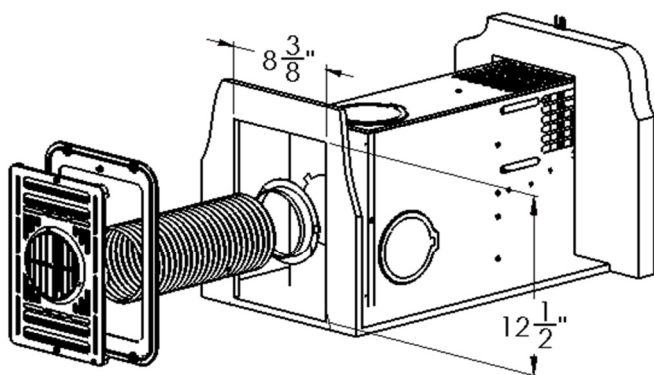

DOOR INSTALL:

1. Measure from floor up $12\frac{1}{2}"$.
2. Find center of vent cutout and mark $3\frac{3}{4}"$ each side.
3. Check inside to insure no power, gas, water lines are within the cutout area.
4. Install new door as outlined in the installation manual provided with the furnace.
5. Install outer door and vent with eight screws provided (13, 14).

