




LITERATURE NUMBER MPD 38143

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

DRAFT SHIELD INSTALLATION

Revision C, 9/18

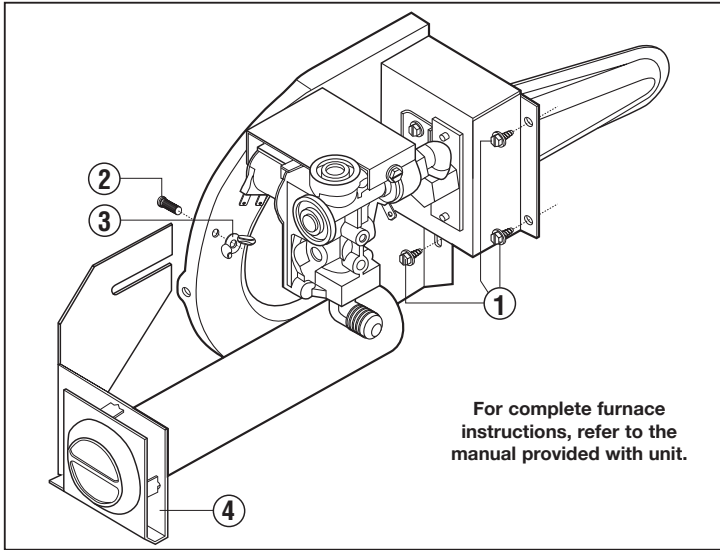

For complete furnace
instructions, refer to the
manual provided with unit.

INSTALLATION PROCEDURE

1. Remove screws and remove burner assembly to install stud. (If cover is not equipped with one already.)
2. Insert stud from back side of cover.
3. Tighten wing nut on stud until stud is pulled snug into hole.
4. Install new draft shield assembly with bezel assembly tight against back of door screen when the door is installed. Verify position of bezel assembly before tightening wing nut to hold it in place.




LITERATURE NUMBER MPD 38143

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

DRAFT SHIELD INSTALLATION

Revision C, 9/18

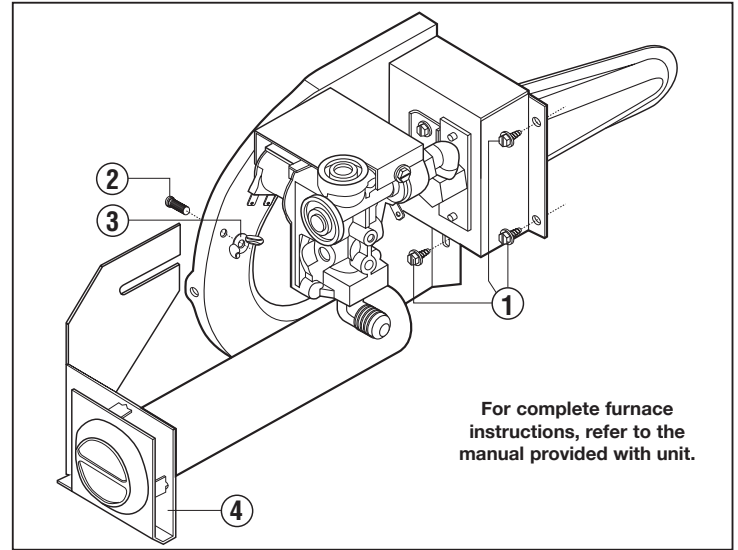

For complete furnace
instructions, refer to the
manual provided with unit.

INSTALLATION PROCEDURE

1. Remove screws and remove burner assembly to install stud. (If cover is not equipped with one already.)
2. Insert stud from back side of cover.
3. Tighten wing nut on stud until stud is pulled snug into hole.
4. Install new draft shield assembly with bezel assembly tight against back of door screen when the door is installed. Verify position of bezel assembly before tightening wing nut to hold it in place.




LITERATURE NUMBER MPD 38143

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

DRAFT SHIELD INSTALLATION

Revision C, 9/18

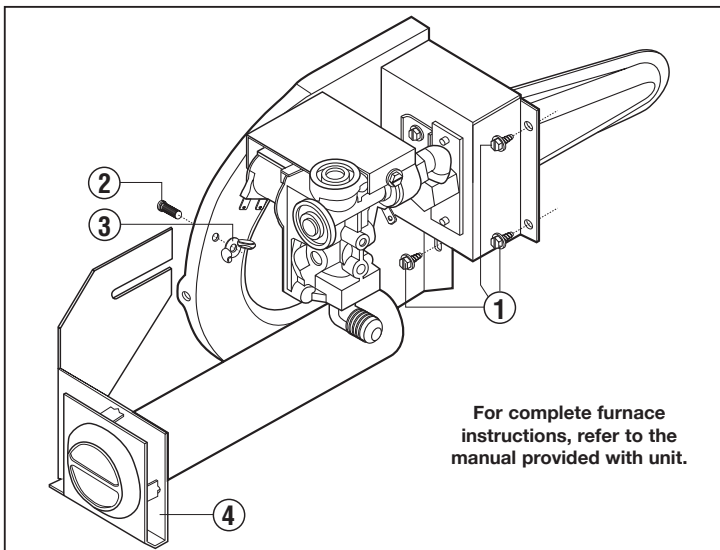

For complete furnace
instructions, refer to the
manual provided with unit.

INSTALLATION PROCEDURE

1. Remove screws and remove burner assembly to install stud. (If cover is not equipped with one already.)
2. Insert stud from back side of cover.
3. Tighten wing nut on stud until stud is pulled snug into hole.
4. Install new draft shield assembly with bezel assembly tight against back of door screen when the door is installed. Verify position of bezel assembly before tightening wing nut to hold it in place.




LITERATURE NUMBER MPD 38143

DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

DRAFT SHIELD INSTALLATION

Revision C, 9/18

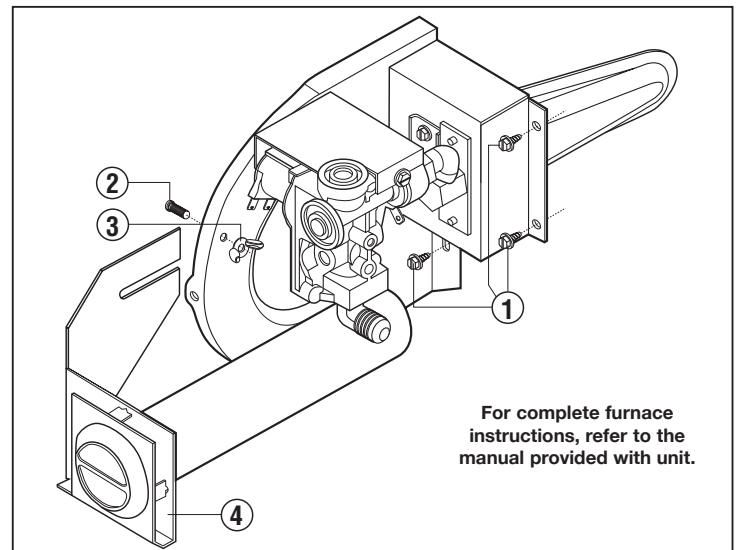

For complete furnace
instructions, refer to the
manual provided with unit.

INSTALLATION PROCEDURE

1. Remove screws and remove burner assembly to install stud. (If cover is not equipped with one already.)
2. Insert stud from back side of cover.
3. Tighten wing nut on stud until stud is pulled snug into hole.
4. Install new draft shield assembly with bezel assembly tight against back of door screen when the door is installed. Verify position of bezel assembly before tightening wing nut to hold it in place.