




RECESSED DOOR FLANGE

INSTALLATION INSTRUCTIONS

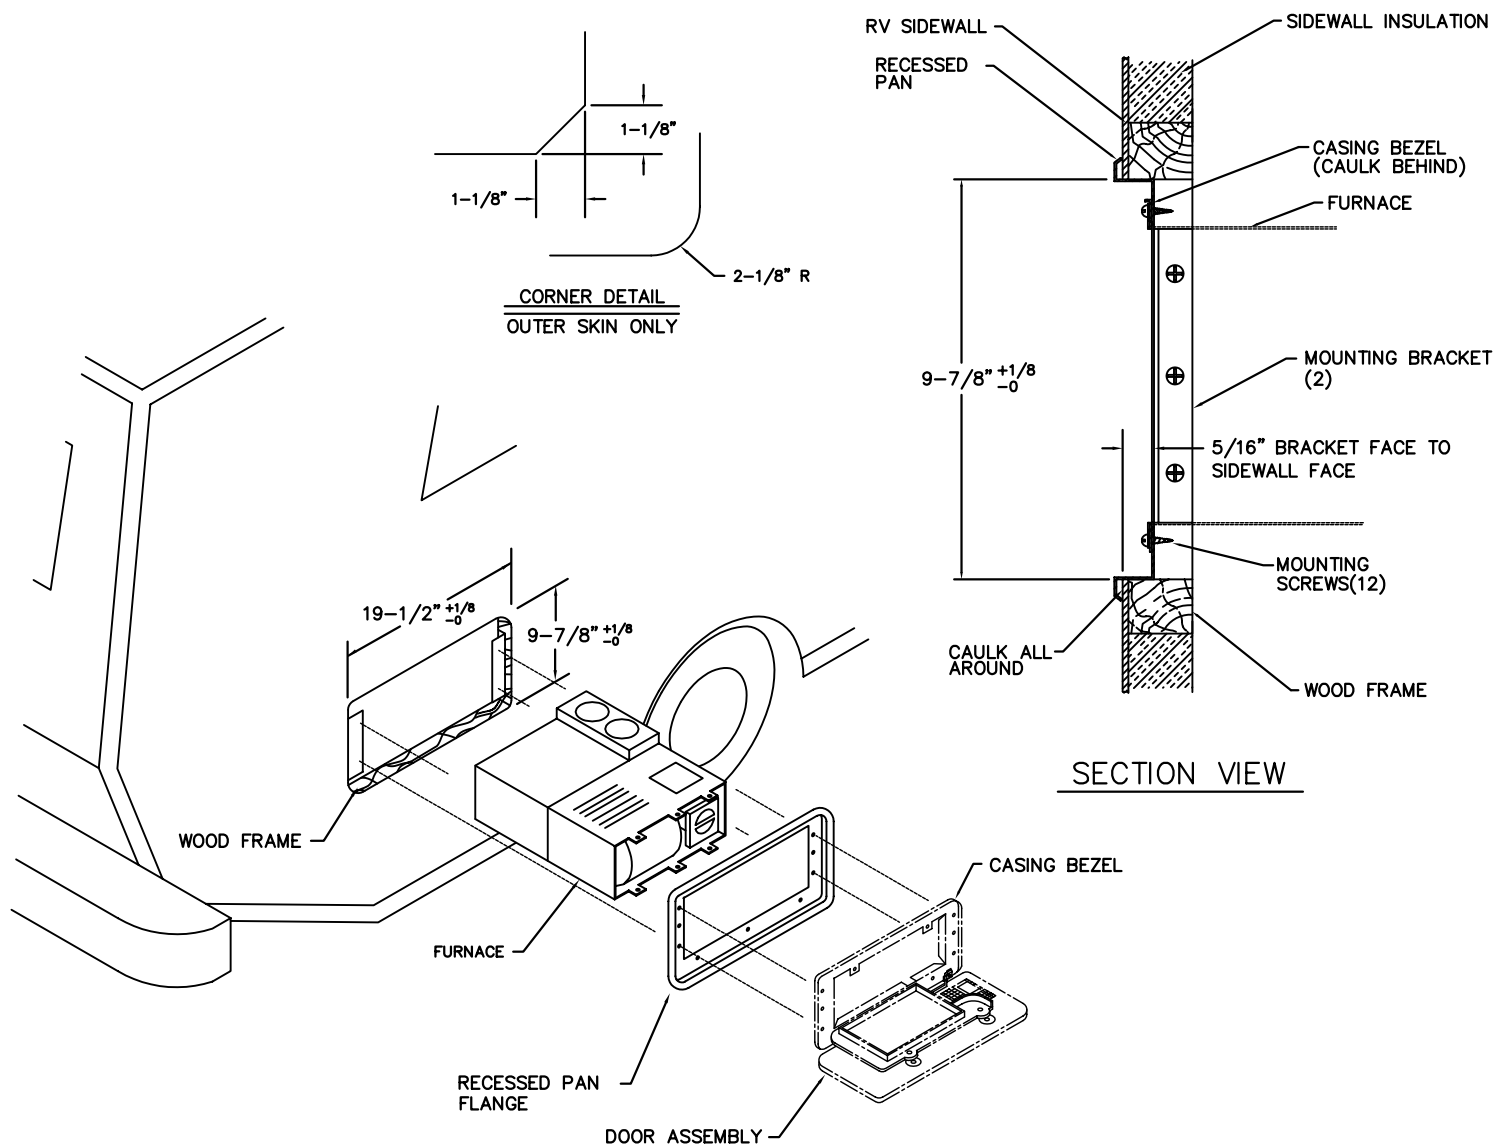

1. CUT A $19-1/2 \times 9-7/8$ HOLE AS SHOWN. A WOOD FRAME MUST BE MADE TO COVER THE SIDEWALL INSULATION, USE 2"x2" LUMBER. NOTE: CORNERS ON OUTER SKIN MUST HAVE A RADIUS OR 45° CHAMFER OR PAN WILL NOT COVER CUTOUT. (SEE CORNER DETAIL)
2. LOCATE AND SECURE MOUNTING BRACKETS TO WOOD FRAME 5/16" FROM THE FACE OF THE BRACKET TO THE OUTSIDE OF THE RV WALL WITH (3) SCREWS PER SIDE.
3. PLACE THE FURNACE INSIDE THE CUTOUT AND CONNECT THE GAS AND ELECTRICAL.
4. APPLY CAULKING TO THE BACKSIDE OF THE FLANGES ON THE RECESSED PAN AND CASING BEZEL. INSERT THE RECESSED PAN INTO THE CUTOUT. PULL THE FURNACE FORWARD AND INSERT THE CASING TABS THROUGH THE SLOTS IN THE CASING BEZEL.
5. BEND THE CASING TABS TO THE OUTSIDE AND ALIGN THE TOP THREE HOLES OF THE CASING BEZEL WITH THE RECESSED PAN HOLES AND SECURE WITH (3) SELF TAPPING SCREWS. NOTE: MAKE SURE THE DOOR ASSEMBLY IS SQUARE WITH THE RECESSED PAN. COMPLETE THE ASSEMBLY BY INSTALLING THE (9) REMAINING SELF TAPPING SCREWS.
6. AFTER DOOR ASSEMBLY IS COMPLETE ATTACH THE FURNACE CASING TO THE RV FLOOR.
7. REFER TO THE 85-III HEATER INSTALLATION MANUAL FOR COMPLETE INSTALLATION INSTRUCTIONS.